

Digitized Automation for a Changing World

Delta Sensorless Vector Control Compact Drive VFD-EL-W Series User Manual



Copyright Notice

©Delta Electronics, Inc. All rights reserved.

All information contained in this user manual is the exclusive property of Delta Electronics Inc. (hereinafter referred to as "Delta") and is protected by copyright law and all other laws. Delta retains the exclusive rights of this user manual in accordance with the copyright law and all other laws. No parts in this manual may be reproduced, transmitted, transcribed, translated or used in any other ways without the prior consent of Delta.

Limitation of Liability

The contents of this user manual are only for the use of the product manufactured by Delta. Except as defined in special mandatory laws, Delta provides this user manual "as is" and does not offer any kind of warranty through this user manual for using the product, either express or implied, including but not limited to the following: (i) this product will meet your needs or expectations; (ii) the information contained in the product is current and correct; (iii) the product does not infringe any rights of any other person. You shall bear your own risk to use this product.

In no event shall Delta, its subsidiaries, affiliates, managers, employees, agents, partners and licensors be liable for any direct, indirect, incidental, special, derivative or consequential damages (including but not limited to the damages for loss of profits, goodwill, use or other intangible losses) unless the laws contains special mandatory provisions to the contrary.

Delta reserves the right to make changes to the user manual and the products described in the user manual without prior notice and afterwards.



READ PRIOR TO INSTALLATION FOR SAFETY.



- ☑ Disconnect AC input power before connecting any wiring to the AC motor drive.
- ☑ Turn OFF the AC motor drive power before doing any wiring. A charge with hazardous voltages may remain in the DC bus capacitors even after the power has been turned off for a short time. Do not touch the internal circuits and components before the POWER LED (behind the digital keypad) is OFF. For your safety, measure the remaining voltage with a DC voltmeter on +1/DC+ and DC- and do not start wiring before the voltage drops to a safe level (less than 25 V_{DC}). Installing wiring with a residual voltage may cause personal injury, sparks and short circuit.
- ☑ There are highly sensitive MOS components on the printed circuit boards. These components are especially sensitive to static electricity. Take anti-static measure before touching these components or the circuit boards.
- ☑ Never modify the internal components or wiring.
- ☑ Ground the AC motor drive by using the ground terminal. The grounding method must comply with the laws of the country where the AC motor drive is to be installed.
- ☑ Do NOT install the AC motor drive in a location with high temperature, direct sunlight or inflammable materials or gases.



- ☑ Never connect the AC motor drive output terminals U/T1, V/T2 and W/T3 directly to the AC mains circuit power supply.
- ☑ After finishing the wiring of the AC motor drive, check if R/L1, S/L2, and T/L3 are short-circuited to ground with a multimeter. Do NOT power the drive if short circuits occur. Eliminate the short circuits before the drive is powered.
- ☑ The rated voltage of power system to install motor drives is listed below. Ensure that the installation voltage is in the correct range when installing a motor drive.
 - 1. For 230V models, the range is between 180–264V.
 - 2. For 460V models, the range is between 342-528V.
- ☑ Only qualified persons are allowed to install, wire and maintain the AC motor drives.
- ☑ Even if the three-phase AC motor drive is stopped, a charge with hazardous voltages may still remain in the main circuit terminals of the AC motor drive.
- ☑ The performance of electrolytic capacitor will degrade if it is not charged for a long time. It is recommended to charge the drive which is stored in no charge condition every 2 years for 3–4 hours to restore the performance of electrolytic capacitor in the motor drive. NOTE: When power up the motor drive, use adjustable AC power source (e.g. AC autotransformer) to charge the drive at 70%–80% of rated voltage for 30 minutes (do not run AC motor drive). Then charge AC motor drive at 100% of rated voltage for an hour (do not run the motor drive). By doing these, restore the performance of electrolytic capacitor before starting to run the motor drive. Do NOT run the motor drive at 100% rated voltage right away.
- ☑ Pay attention to the following precautions when transporting and installing this package (including wooden crate and wood stave)
 - 1. If you need to deworm the wooden crate, do NOT use fumigation or you will damage

- the drive. Any damage to the drive caused by using fumigation voids the warranty.
- 2. Use other methods, such as heat treatment or any other non-fumigation treatment, to deworm the wood packaging material.
- 3. If you use heat treatment to deworm, leave the packaging materials in an environment of over 56°C for a minimum of thirty minutes.
- ☑ Connect the drive to a three-phase three-wire or three-phase four-wire Wye system to comply with UL standards.
- ☑ If the motor drive generates leakage current over AC 3.5 mA or over DC 10 mA on a grounding conductor, compliance with local grounding regulations or IEC61800-5-1 standard is the minimum requirement for grounding.
- ☑ The VFD-EL-W series drives are designed for industrial application. As the non-linear load generates harmonic current, when using a VFD-EL-W series drive in a public low-voltage distribution network (such as power supply in a residential building), install suppression devices (for example, one-to-one transformer or input AC reactor) to suppress the possible interferences caused by the harmonic current. Contact Delta for more information.

NOTE: The content of this manual may be revised without prior notice. Consult our distributors or download the latest version at http://www.deltaww.com/iadownload acmotordrive

Table of Contents

Chapte	r 1 In	troduction	1-1					
1-1	Red	ceiving and Inspection	1-3					
1-2	2 Pre	paration for Installation and Wiring	1-8					
1-3	3 Din	nensions	1-11					
Chapte	r 2 In	stallation and Wiring	2-1					
2-1	Wir	ing	2-3					
2-2	2 Ext	ernal Wiring	2-7					
2-3	3 Mai	n Circuit	2-8					
2-4	l Cor	ntrol Terminals	2-11					
2-5	NP	N / PNP Mode	2-14					
Chapte	r 3 Ke	eypad and Start-up	3-1					
3-1	Des	scription of the Digital Keypad	3-3					
3-2	2 Ope	eration Method	3-6					
3-3	3 Tria	ıl Run	3-7					
Chapte	r 4 Pa	rameters	4-1					
4-1	Sur	nmary of Parameter Settings	4-3					
4-2	2 Par	ameter Settings for Applications	4-25					
4-3	B Des	scription of Parameter Settings	4-29					
	00	User Parameters	4-29					
	01	Basic Parameter	4-36					
	02	Operation Method Parameters	4-44					
	03	Output Function Parameters	4-52					
	04	Input Function Parameters	4-56					
	05	Multi-step Speed Parameters	4-68					
	06	Protection Parameters	4-69					
	07	Motor Parameters	4-77					
	80	Special Parameters	4-82					
	09	Communication Parameters	4-88					
	10	PID Control Parameters	4-100					
4-4	l Adj	ustment and Application	4-112					
Chapte	r 5 Tr	oubleshooting	5-1					
5-1	Ove	er-Current (oc)	5-3					
		er-Voltage (ov)						
5-3	3 Lov	v Voltage (Lv)	5-5					
		erheat (oH1)						
		erload (oL)						
		Keypad Display is Abnormal5-8						

5-7 Phase Loss (PHL)	5-9
5-8 Motor Does Not Run	5-10
5-9 Motor Speed Cannot be Changed	5-11
5-10 Motor Stalls During Acceleration	5-12
5-11 The Motor Does Not Run as Expected	5-13
5-12 Electromagnetic/Induction Noise	5-14
5-13 Operating Environment Condition	5-15
5-14 Affecting Other Machines	5-16
Chapter 6 Fault Code Information and Maintenance	6-1
6-1 Fault Code Information	6-3
6-2 Maintenance and Inspections	6-8
Appendix A. Specifications	A-1
A-1 230V Single-phase Models	A-2
A-2 460V Three-phase Models	A-3
A-3 General Specifications	A-4
A-4 Environment for Operation, Storage and Transportation	A-5
A-5 Derating Curve for Ambient Temperature and Carrier Frequency	yA-6
Appendix B. Accessories	B-1
B-1 Non-fuse Circuit Breaker	B-3
B-2 Reactor	B-4
B-3 Digital Keypad	B-7
B-4 Auxiliary Cooling Fan	B-12
Appendix C. How to Select the Right AC Motor Drive	
C-1 Capacity Formulas	
C-2 General Precautions	
C-3 How to Choose a Suitable Motor	C-6
Annandiy D. Pavisian History	D-1

Issued Edition: 00

Firmware Version: V2.06 (Refer to Pr.00.06 on the product for the firmware version.)

Issued Date: September, 2024

Chapter 1 Introduction

- 1-1 Receiving and Inspection
- 1-2 Preparation for Installation and Wiring
- 1-3 Dimensions

Chapter 1 Introduction | VFD-EL-W

Keep the AC motor drive in the shipping carton or crate before installation. In order to retain the warranty coverage, properly store the AC motor drive when it is not to be used for an extended period of time. The proper storage conditions are listed below.



- ☑ Store in a clean and dry location without any direct sunlight or corrosive fumes.
- ☑ Store in an ambient temperature range between -20°C to +60°C.
- ☑ Store in a relative humidity range between 0% to 90% and non-condensing environment.
- ☑ DO NOT store in the environment with corrosive gas or liquid.
- ☑ DO NOT place directly on the ground. If the surrounding environment is humid, you should put a desiccant in the carton or crate.
- ☑ DO NOT install in an environment with direct sunlight and vibration.
- ☑ DO NOT store in an area with rapid changes in temperature that may cause condensation or frost to form.
- ☑ If the AC motor drive is stored for more than three months, the temperature should not be higher than 30°C. Storage for longer than one year is not recommended; it could result in the degradation of the electrolytic capacitors.
- ☑ When the AC motor drive is not used for long time after installation in an
 environment with humidity and dust, it is the best to move the AC motor drive to a
 better environment as stated above.


1-1 Receiving and Inspection

This VFD-EL-W AC motor drive has gone through rigorous quality control tests at the factory before shipment. After receiving the AC motor drive, please check for the following:


- ✓ Inspect the unit to ensure it was not damaged during shipment.
- ☑ Make sure that the part number indicated on the nameplate matches the part number of your order.
- ☑ If the nameplate information does not match your purchase order or if there are any problems, please contact your distributor

Nameplate Information


Example for 1 HP/0.75 kW single-phase 230V AC motor drive

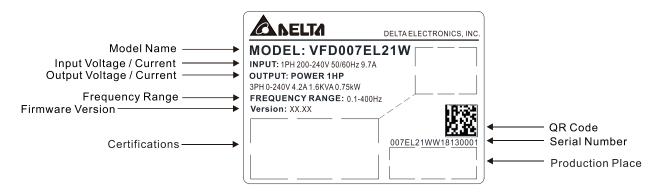


Model Name

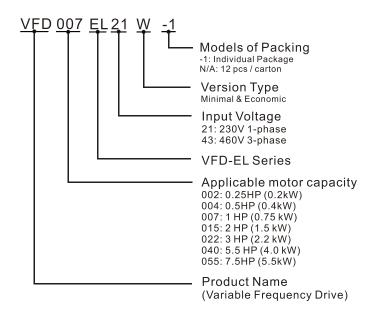


Serial Number

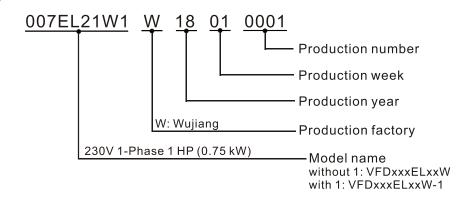

Drive Frames and Appearances

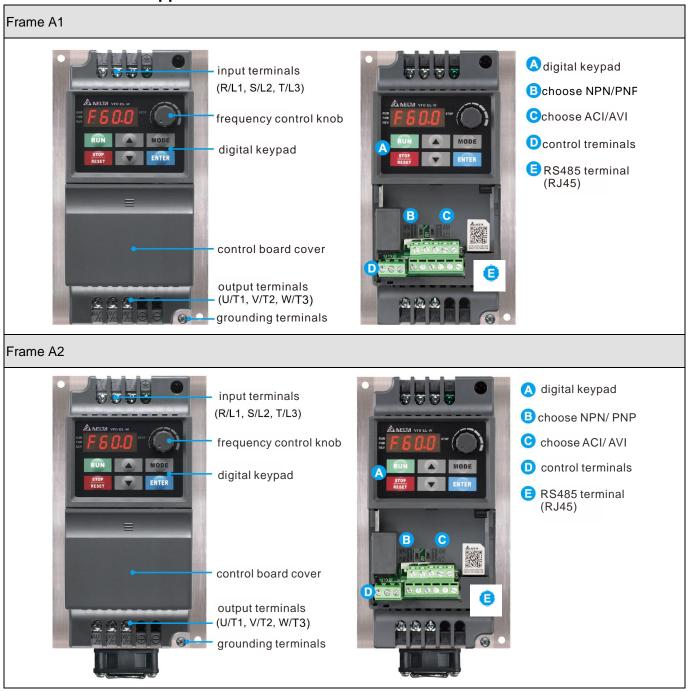

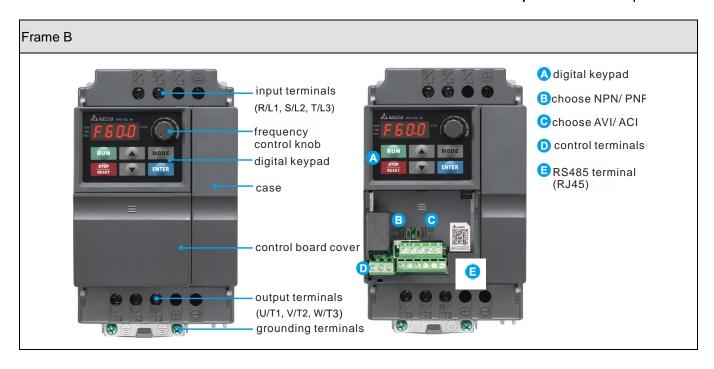

Frame	Power Range	Models	
Λ1	0.25-1 HP	VFD002EL21W(-1), VFD004EL21W(-1) / 43W(-1),	
A1	(0.2-0.75 kW)	VFD007EL21W(-1) / 43W(-1)	
A2	2 HP	VCD045CL 43/W/ 4)	
	(1.5 kW)	VFD015EL43W(-1)	
В	2-7.5 HP	VFD015EL21W(-1), VFD022EL21W / 43W(-1), VFD040EL43W(-1),	
В	(1.5–5.5 kW)	VFD055EL43W(-1)	



NOTE:

RFI jumper of Frame A1, A2 and B is near the input terminals (R/L1, S/L2, T/L3), as the red circle shows in the figure above. You can remove the RFI jumper by loosening the screws.

RFI Jumper

- 1. The drive contains Varistors / MOVs that are connected from phase to phase and from phase to ground to prevent the drive from unexpected stop or damage caused by main surges or voltage spikes. Because the Varistors / MOVs from phase to ground are connected to ground with the RFI jumper, removing the RFI jumper disables the protection.
- 2. In models with a built-in EMC filter, the RFI jumper connects the filer capacitors to ground to form a return path for high frequency noise in order to isolate the noise from contaminating the main power. Removing the RFI jumper strongly reduces the effect of the built-in EMC filter. Although a single drive complies with international standards for leakage current, an installation with several drives with built-in EMC filters can trigger the RCD. Removing the RFI jumper helps, but the EMC performance of each drive is no longer guaranteed.

Isolating main power from ground:

When the power distribution system for the drive is a floating ground system (IT) or an asymmetric ground system (Corner Grounded TN Systems), you must remove the RFI jumper. Voltage of any phase to the ground for either system may be larger than the voltage specifications of the drive's built-in surge absorber and common-mode capacitance. In this case, connecting RFI jumper to the ground may cause damage to the drive.

Important points regarding ground connection

- ☑ Do not remove RFI jumper while the power is ON.
- ☑ Make sure that main power is OFF before removing the RFI jumper.
- ☑ Removing the RFI jumper also cuts off the built-in EMC filter capacitors. Compliance with the EMC specifications is no longer guaranteed.

If you remove the RFI jumper, you remove the reliable electrical isolation. In other words, all controlled inputs and outputs become low-voltage terminals with basic electrical isolation. Also, when you remove the internal RFI jumper, the motor drive is no longer electromagnetic compatible (EMC).

- Do not remove the RFI jumper if the main power is a grounded power system to make EMC filter effective
- You must remove the RFI jumper when conducting high voltage tests. When conducting a high voltage test for the entire facility, disconnect the main power and the motor if the leakage current is too high.
- To prevent damage to the drive, you must remove the RFI jumper connected to ground if the AC motor drive is installed on an ungrounded power system or a high resistance-grounded (greater than 30 Ω) power system or a corner grounded TN system.

Remove the control board cover

As shown in Step 1 below, gently press the control board cover. Then, as shown in Step 2, pull it down slowly to remove it.



Step 1



Step2

Remove cooling fan:

To remove the cooling fan of Frame B, gently release the clips on both sides of the cooling fan.




1-2 Preparation for Installation and Wiring

Ambient Conditions

Install the AC motor drive in an environment with the following conditions.

	Tomporatura	-10-50°C (14-122°F)	
	Temperature	(Excluding VFD007EL21W/ VFD007EL21W-1)	
	Relative Humidity	< 90%, non-condensing	
Operation	Atmospheric Pressure	86–106 kPa	
Operation	Installation Site Altitude	<1000 m	
		1.0 mm, peak-to-peak value: from 2–13.2 Hz;	
	Vibration	0.7–1.0 G, from 13.2–55 Hz; 1.0 G, from 55–512 Hz;	
		compliance with IEC 60068-2-6 standard.	
	Temperature	-20-60°C (-4-140°F)	
Storage	Relative Humidity	< 90%, non-condensing	
Storage	Atmospheric Pressure	86–106 kPa	
and		1.0 mm, peak-to-peak value: from 2–13.2 Hz;	
Transportation	Vibration	0.7–1.0 G, from 13.2–55 Hz; 1.0 G, from 55–512 Hz;	
		compliance with IEC 60068-2-6 standard.	
Pollution Degree	2: good for a factory type environment.		

Minimum Mounting Clearance

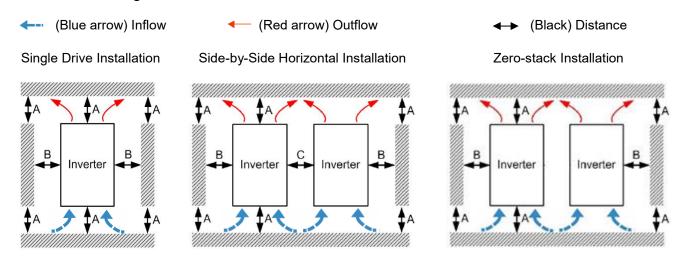


	lo stallatian	Minimu	m Distand	ce (mm)	Temperature (°C)		
Model Name	Installation Method	Α	В	C Note 1	Max. (Derating is	Max. (Derating	
	Method	^	В	C	not required) Note 3	is required)	
\/ED002EL24\\/(4)	Single Drive	120	50	-	50	60	
VFD002EL21W(-1) VFD004EL21W(-1)	Side-by-Side Horizontal	120	50	30	50	60	
VFD004EL43W(-1)	Zero-stack Note 2	-	-	-	-	-	
	Single Drive	120	50	-	50 Note 4	60	
VFD007EL21W(-1)	Side-by-Side Horizontal	120	50	30	50 Note 4	60	
	Zero-stack	-	-	-	-	-	
	Single Drive	120	50	-	50	60	
VFD007EL43W(-1) VFD015EL43W(-1)	Side-by-Side Horizontal	120	50	30	50	60	
	Zero-stack	-	-	-	-	-	
VFD015EL21W(-1)	Single Drive	150	50	-	50	60	
VFD022EL21W(-1) VFD022EL43W(-1)	Side-by-Side Horizontal	150	50	30	50	60	
VFD040EL43W(-1) VFD055EL43W(-1)	Zero-stack	150	50	0	40	50	

NOTE:

- 1. Due to a small protruding part of the heat sink at the bottom of the Frame A1/A2, the distance C for the side-by-side horizontal installation is calculated according to the main part of the motor drive only. One protruding part of the heat sink is 10 mm, so the distance C for side-by-side horizontal installation is at least 20 mm.
- 2. Frame A1 and A2 does not support zero-stack installation, whereas Frame B supports zero-stack installation.
- 3. Running the drive continuously with full load by higher than the ambient temperature listed in the "Max. (derating is not required)" column reduces the drive's life span.
- 4. If model VFD007EL21W(-1) is used with fan, the upper limit of the ambient operating temperature is listed as the table above. If it is not used with fan, the upper limit of the ambient operating temperature should be 10°C less than the table listed above (see Appendix B-4 for information on fan installation).

Chapter 1 Introduction | VFD-EL-W

- Mount the AC motor drive vertically on a flat vertical surface with screws. Other mounting directions are not allowed.
- ☐ The AC motor drive generates heat during operation. Allow sufficient space around the unit for heat dissipation. When you install the AC motor drive in a confined space (for example a cabinet), the surrounding temperature must be meet specifications of operation (as shown in Section 1-2) with good ventilation. DO NOT install the AC motor drive in a space with poor ventilation.
- ☐ The heat sink temperature may rise to 90°C when running. The metallic material on which the AC motor drive is mounted must be noncombustible, be excellent at thermal dissipation and be able to withstand this high temperature.
- When installing multiple AC motor drives in the same cabinet, mount them in a row with enough space between for ventilation. When installing one AC motor drive below another one, use a metal separator between the AC motor drives to prevent mutual heating.

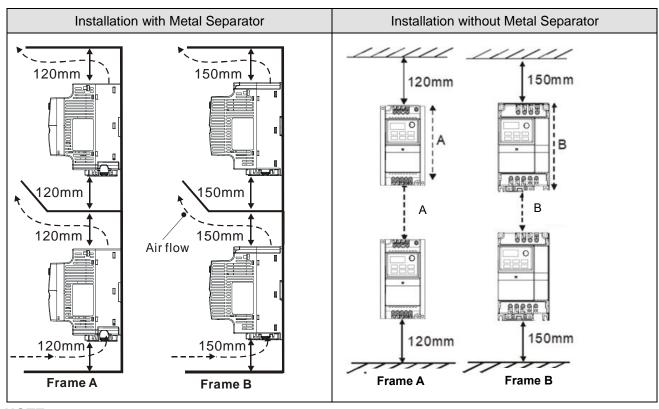


NOTE:

- 1. Prevent fiber particles, scraps of paper, shredded wood, sawdust, metal particles, etc. from adhering to the heat sink.
- 2. Install the AC motor drive in a metal cabinet to prevent the risk of fire accident.

1-3 Dimensions

Frame A1VFD002EL21W(-1), VFD004EL21W(-1), VFD004EL43W(-1), VFD007EL21W(-1), VFD007EL43W(-1)

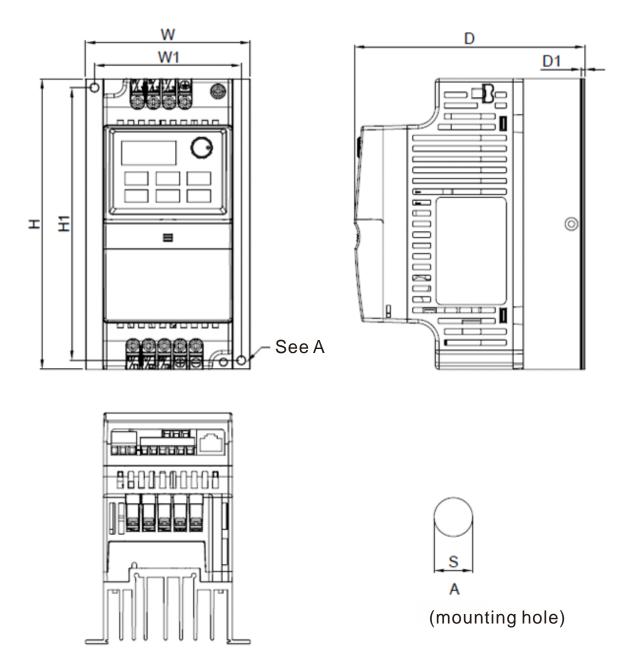


Unit: mm (inch)

							(1111)
Frame	W	W1	Н	H1	D	D1	S1
۸1	92.0	82.0	162.0	152.0	128.7	2.0	5.4
A1	(3.62)	(3.23)	(6.38)	(5.98)	(5.07)	(80.0)	(0.21)

Frame A2


VFD015EL43W(-1)

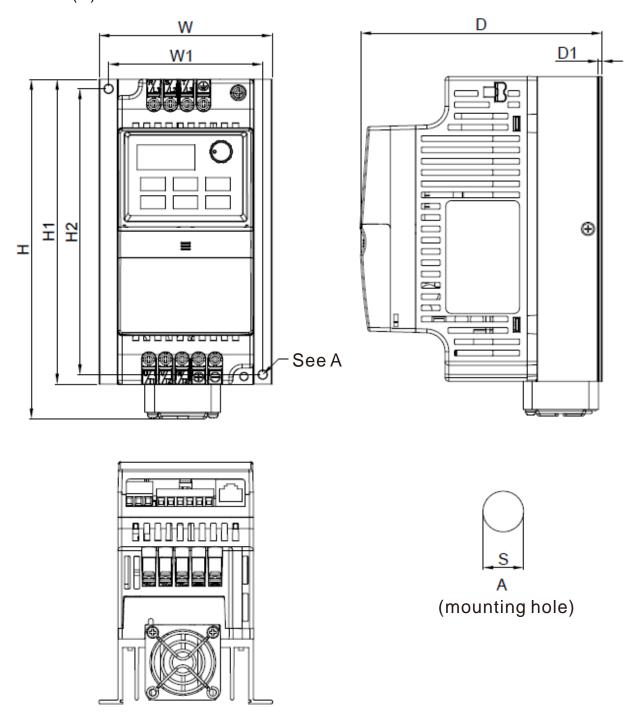



Unit: mm (inch)


Frame	W	W1	Η	H1	H2	D	D1	S1
۸.2	92.0	82.0	180.5	162.0	152.0	128.7	2.0	5.4
A2	(3.62)	(3.23)	(7.11)	(6.38)	(5.98)	(5.07)	(80.0)	(0.21)


Frame B
VFD015EL21W(-1), VFD022EL21W(-1), VFD022EL43W(-1), VFD040EL43W(-1), VFD055EL43W(-1)

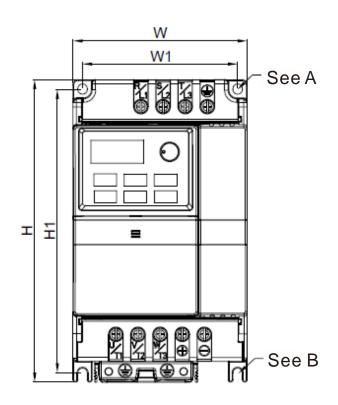

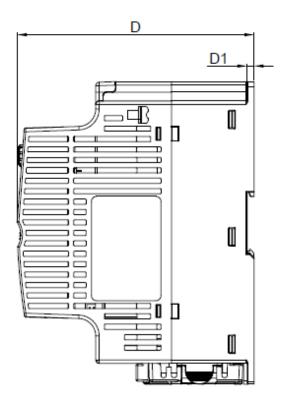

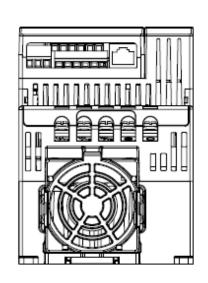

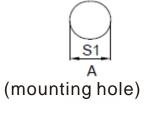

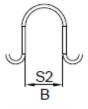

(mounting hole)

Unit: mm (inch)

								` .
Frame	W	W1	Н	H1	D	D1	S1	S2
D	100.0	89.0	174.0	162.9	136.0	4.0	5.9	5.4
Ь	(3.94)	(3.50)	(6.85)	(6.42)	(5.36)	(0.16)	(0.23)	(0.21)

[This page is intentionally left blank]

Chapter 2 Installation and Wiring

- 2-1 Wiring
- 2-2 External Wiring
- 2-3 Main Circuit
- 2-4 Control Terminals
- 2-5 NPN / PNP Mode

Chapter 2 Installation and Wiring | VFD-EL-W

 $\overline{\mathbf{V}}$

After removing the covers of input/output side terminals and control board terminals, verify the main circuit terminals and control circuit terminals are clear. Be sure to observe the following precautions when wiring.



- Turn off the AC motor drive power before installing any wiring. A hazardous charge may still remain in the DC bus capacitors after the power has been turned off. For your safety, wait until the digital keypad indictor turns off and measure the DC voltage with the voltmeter. Makes sure the voltage drops to a safe level < 25 V_{DC} before wiring. Performing a wiring installation while voltage remains may cause sparks and short circuits.
- ☑ Only qualified personnel familiar with AC motor drives are allowed to do the wiring.

 Make sure the power is turned off before wiring to prevent electric shock.
- ☑ Make sure that power is only applied to the R/L1, S/L2, and T/L3 terminals. Failure
 to comply may result in damage to the equipment. The voltage and current should
 be in the range on the AC motor drive nameplate (refer to Section 1-1 Receiving
 and Inspection for details).
- ☑ The grounding terminals must be well-grounded to prevent electric shock or fire accidents and to reduce noise interference.
- ☑ Make sure that you correctly tighten the main circuit terminal screws to prevent sparks that can be caused by screws loosened due to vibration.




- ☑ When wiring, choose wires that comply with local regulations for your safety.
- ☑ Check following items after finishing the wiring:
 - 1. Are all connections correct?
 - 2. Are there any loose wires?
 - 3. Are there any short circuits between the terminals or to ground?

2-1 Wiring


There are wirings for main circuits and control circuits. You must wire according to the following wiring diagrams.

230V Single-phase
 VFD002EL21W(-1), VFD004EL21W(-1), VFD007EL21W(-1), VFD015EL21W(-1),
 VFD022EL21W(-1)

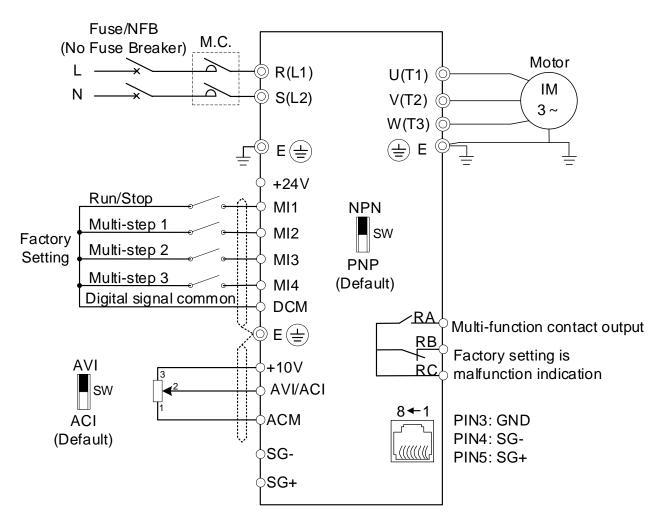

NOTE: Terminal SG+,SG- are joined to PIN5,PIN4 of RJ45 connector


460V Three-phase
 VFD004EL43W(-1), VFD007EL43W(-1), VFD015EL43W(-1), VFD022EL43W(-1),
 VFD040EL43W(-1), VFD055EL43W(-1)

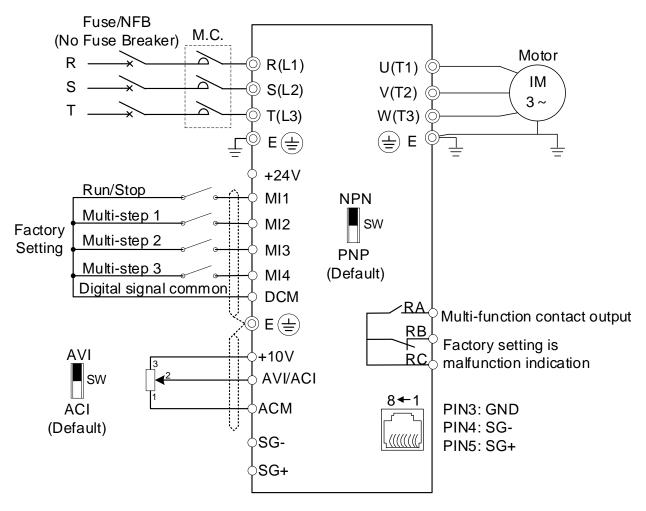


NOTE: Terminal SG+,SG- are joined to PIN5,PIN4 of RJ45 connector

Wiring for NPN and PNP mode

Internal power supply

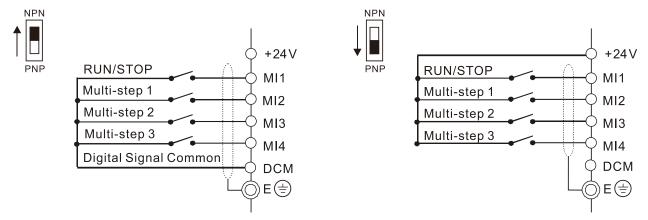

External power supply

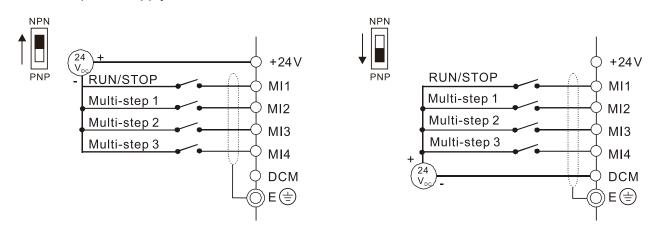





- ☑ Separate the main circuit and control circuit wiring to prevent erroneous actions.
- ☑ Use shielded wire for the control wiring and do not expose the peeled-off shield in front of the terminal.
- ☑ Use shielded wire or conduit for the power wiring and ground the two ends of the shielded wire or conduit.
- ☑ Damaged insulation of wiring may cause personal injury or damage to circuits and equipment if it comes in contact with high voltage.
- ☑ The AC motor drive, motor and wiring may cause interference. To prevent equipment damage, take care of interference between the surrounding sensors and the equipment.
- ☑ Connect the AC drive output terminals U/T1, V/T2, and W/T3 to the motor terminals U/T1, V/T2, and W/T3, respectively. To permanently reverse the direction of motor rotation, switch over any of the two motor leads.
- With long motor cables, high capacitive switching current peaks can cause overcurrent, high leakage current or lower current readout accuracy. To prevent this, the motor cable should be less than 20 m for 4.0 kW models and below. The cable should be less than 50 m for 5.5 kW models and above. For longer motor cables, use an AC output reactor.
- ☑ The AC motor drives, electric welding machines and the larger horsepower motors should be grounded separately.

- ☑ Use ground leads that comply with local regulations and keep them as short as possible.
- ☑ The VFD-EL-W series does not have a built-in brake unit, and no support for external brake unit and brake resistor.
- ☑ When grounding, choose wires that comply with local regulations for your safety.
- ☑ To prevent lightning strike and electric shock, the metal grounding wire of electrical equipment should be thick and short, and connected to the dedicated grounding terminal of the inverter system.
- ☑ You can install multiple VFD-EL-W units in one location. All the units should be grounded directly to a common ground terminal, as shown in the figure below.

 Ensure that there are no ground loops.

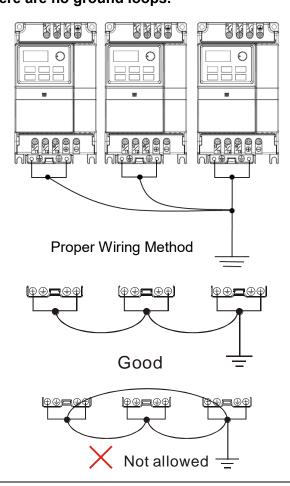


2-2 External Wiring

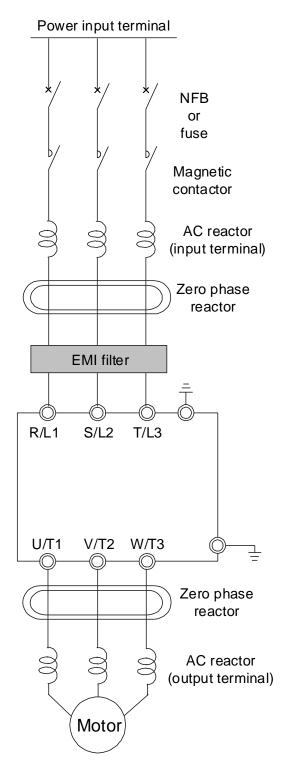

.,	
Items	Explanations
Power supply	Please follow the specific power supply
	requirements in Appendix A.
	There may be an inrush current during power-
Fuse/NFB	up. Please refer to the table in Appendix B-1
(optional)	and select the correct fuse for the rated current.
	Use of an NFB is optional.
	Switching the power ON / OFF on the primary
	side of the magnetic contactor can turn the
Magnetic	drive ON / OFF, but frequent switching can
Magnetic	cause machine failure. Do not switch ON / OFF
contactor	more than once an hour. Do not use a magnetic
(optional)	contactor as the I/O switch for the AC motor
	drive, as it will reduce the operating life of the
	AC drive.
	Use to improve the input power factor, reduce
	harmonics and provide protection from AC line
	disturbances (such as surges, switching spikes,
Input AC	short interruptions). Install an AC line reactor
Reactor	when the power supply capacity is 500 kVA or
(optional)	more, or advanced capacity is activated. The
	wiring distance should be ≤ 10m. Refer to
	Appendix B-2-1 for details.
	Use zero phase reactors to reduce radio noise,
Zero-phase	especially when audio equipment is installed
Reactor	near the inverter. They are effective for noise
(Ferrite Core	reduction on both the input and output sides.
Common	Attenuation quality is good for a wide range
Choke)	from the AM band to 10 MHz. Appendix B-2-2
(optional)	lists the specifications for zero-phase reactors
	(RF220X00A).
EMI Filter	Use to reduce electromagnetic interference.
	Motor surge voltage amplitude depends on
Output AC	motor cable length. For applications with long
Reactor	motor cable (>20 m), install a reactor at the
(optional)	inverter output side. Refer to Appendix B-2-1.

2-3 Main Circuit

2-3-1 Main Circuit Connection

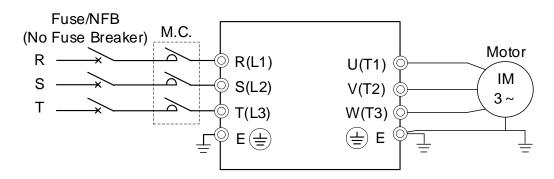

Terminal Symbol	Explanation of Terminal Function
R/L1, S/L2, T/L3	Mains input terminals (single-phase/three-phase)
U/T1, V/T2, W/T3	Motor drive output terminals for connecting three-phase induction motor
+	Ground connection. Please comply with local regulations.



Mains power terminals (R/L1, S/L2, T/L3)

- ☑ Do NOT connect three-phase motor drives to single-phase AC power. There is no sequential order when connecting mains power terminals R/L1, S/L2, T/L3.
 Connect these terminals with a freely usable standard.
- ☑ Connect terminals (R/L1, S/L2, and T/L3) with a non-fuse breaker to three-phase
 AC power for circuit protection. It is recommended that you add a magnetic
 contactor (MC) in the power input wiring to cut off power quickly and reduce
 malfunction when activating the protection function for the AC motor drives. Both
 ends of the MC should have an R-C surge absorber.
- ☑ Make sure that you correctly tighten the main circuit terminal screws to prevent sparks caused by loosening screws due to vibration.
- ☑ Use voltage and current levels according to the specifications in Appendix A.
- ☑ When using a GFCI (Ground Fault Circuit Interrupter), select a current sensor with sensitivity of 200 mA or higher, and not less than 0.1 second operation time to avoid nuisance tripping. For specific GFCI of the AC motor drive, select a current sensor with sensitivity of 30 mA or higher.
- ☑ Do NOT run or stop AC motor drives by turning the power ON or OFF. Use the RUN or STOP command through the control terminals or a keypad. If you still need to run or stop the AC drives by turning the power ON or OFF, it is recommended to do so no more often than ONCE per hour.


Output terminals for main circuit (U, V, W)

☑ The default for the operation direction is running forward. The method to control the running direction is to set by the communication parameters. Refer to the Parameter Group 09 in Chapter 4 for details.


- ☑ When it is necessary to install the filter at the output side of terminals U/T1, V/T2, W/T3 on the AC motor drive, use an inductance filter. Do not use phase-compensation capacitors or L-C (Inductance-Capacitance) or R-C (Resistance-Capacitance), unless approved by Delta.
- ☑ DO NOT connect phase-compensation capacitors or surge absorbers at the output terminals of AC motor drives.
- ☑ Use a well-insulated motor, suitable for inverter operation.

2-3-2 Main Circuit Terminals


Frame A1

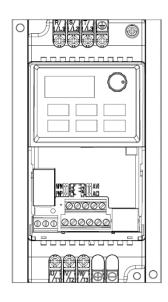

Frame A2

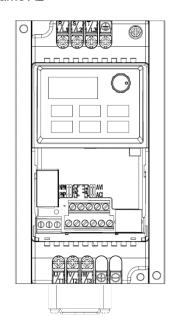

Frame B

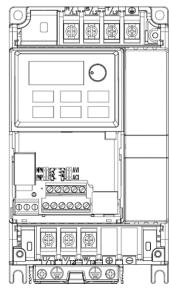


Frame	Model	Main Circuit Terminals R/L1, S/L2, T/L3, U/T1, V/T2, W/T3,⊕			
Traine	Wiodei	Maximum Wire Gauge	Minimum Wire Gauge	Screw Size Tightening Torque (±10%)	
	VFD002EL21W(-1)				
	VFD004EL21W(-1)		2.5 mm ² (14 AWG)	M4	
A1	VFD004EL43W(-1)	4 mm ²	(1171113)	M4 screw 15 kgf-cm	
	VFD007EL21W(-1)	(12 AWG)	4 mm ² (12 AWG)	(13 in-lbf) (1.47 Nm)	
	VFD007EL43W(-1)		2.5 mm ²		
A2	VFD015EL43W(-1)		(14 AWG)		
	VFD015EL21W(-1)		10 mm ²	M4 screw 13 kgf-cm (11.4 in-lbf)	
	VFD022EL21W(-1)		(8 AWG)		
В	VFD022EL43W(-1)	10 mm ² (8 AWG)			
	VFD040EL43W(-1)		2.5 mm ² (14 AWG)	(1.3 Nm)	
	VFD055EL43W(-1)				

NOTE:

- 1. For installation at an ambient temperature of 50°C, select copper wires with temperature resistance of 75°C or 90°C. For installation at an ambient temperature over 50°C, select copper wires with temperature resistance of 90°C or above.
- 2. For VFD007EL21W(-1) model: when install at Ta 40°C environment, use copper wires that are temperature resistance to 75°C or 90°C; when install at Ta 40°C above environment, use copper wires that are temperature resistance to 90°C or above.
- 3. When installing VFDxxxEL21W(-1), use wires that have a voltage rating of 300 V_{AC} or above. When installing VFDxxxEL43W(-1), use wires that have a voltage rating of 600 V_{AC} or above.

2-4 Control Terminals

2-4-1 Control Terminals Description

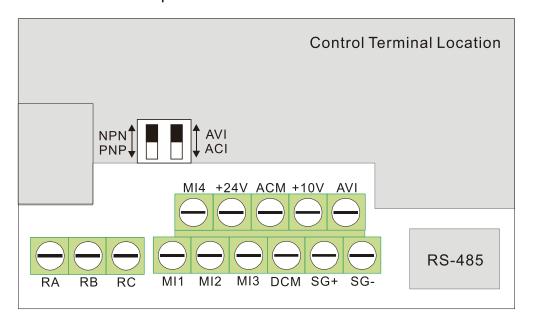

Terminal symbols and functions


Tomminar	erminal symbols and functions					
Terminal Symbol	Terminal Function	Defaults (NPN mode) ON: Connect to DCM				
MI1	Run-Stop Command	ON: Run in MI1 direction				
	. тап. Стор Солина	OFF: Stop acc. to Stop Method				
MI2	Multi-function Input 2	Refer to Pr.04.06 to Pr.04.08 for programming the multi-				
MI3	Multi-function Input 3	function inputs.				
IVIIO	Walti Tallottoli Ilipat o	ON: the activation current is 5.5 mA.				
MI4	Multi-function Input 4	OFF: leakage current tolerance is 10 μA.				
		The +24V power total output capacity: 60 mA				
		1. When using MI terminal, the current capacity required				
.04)/	Digital control signal common	for the terminal operation should be deducted				
+24V	(Source)	accordingly (6 mA for each MI terminal).				
		2. Do NOT use it for excessive loads to avoid damage to				
		the internal circuit.				
DCM	Digital Signal Common (Sink)	Common for multi-function input terminals.				
SG+		Internally connected to RJ45 terminal PIN5 and PIN4,				
	Modbus RS-485	providing flexible choice for users (only support one of				
SG-		them at one time).				
RA	Multi-function Relay Output	Resistive Load:				
KA	(N.O.) a	5 A (N.O.) / 3 A (N.C.) 240 V _{AC}				
DD	Multi-function Relay Output	5 A (N.O.) / 3 A (N.C.) 24 V _{DC}				
RB	(N.C.) b					

Terminal Symbol	Terminal Function	Defaults (NPN mode) ON: Connect to DCM		
RC	Multi-function Relay Common	Inductive Load: 1.5 A (N.O.) / 0.5 A (N.C.) 240 V _{AC} 1.5 A (N.O.) / 0.5 A (N.C.) 24 V _{DC} Refer to Pr.03.00 for programming		
+10V	Potentiometer Power Supply	+10 V _{DC} 3 mA (Variable resistor 3–5 kΩ)		
AVI	Analog Voltage Input AVI circuit AVI ACM internal circuit	Impedance: $47 \text{ k}\Omega$ Resolution: 10 bits Range: 0 – 10 V_{DC} /4– 20 mA = 0 –maximum output frequency (Pr.01.00) Selection: Pr.02.00, Pr.02.09, Pr.10.00 Setting: Pr.04.14–Pr.04.17		
ACM	Analog Control Signal (Common)	Common for AVI		

NOTE: Control signal wiring size: 18 AWG (0.75 mm²) with shielded wire.

Analog inputs (AVI, ACM)

- Analog input signals are easily affected by external noise. Use shielded wiring and keep it as short as possible (< 20 m) with proper grounding. If the noise is inductive, connecting the shield to the ACM terminal can cause improvement.
- ☑ Use twisted-pair wire for weak analog signals. If the analog input signals are affected by noise from the AC motor drive, connect a capacitor and a ferrite core as shown in the following diagrams.

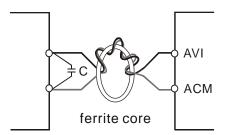


Wind each wire three times or more around the core

Digital inputs (MI1, MI2, MI3, MI4, DCM)


When using contacts or switches to control the digital inputs, use high-quality components to avoid contact bounce.

2-4-2 Specification for the Control Terminals

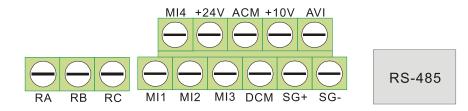

Frame	Model	Wire Gauge	Single Row Terminal	Double Row Terminal
			Torque (±10%)	Torque (±10%)
A1	VFD002EL21W(-1)	16–24 AWG (1.3–0.2 mm²)	4 kgf-cm (3.5 lbf-in) (0.4 N-m)	7 kgf-cm (6.2 lbf-in) (0.7 N-m)
	VFD004EL21W(-1)			
	VFD004EL43W(-1)			
	VFD007EL21W(-1)			
	VFD007EL43W(-1)			
A2	VFD015EL43W(-1)			
В	VFD015EL21W(-1)			
	VFD022EL21W(-1)			
	VFD022EL43W(-1)			
	VFD040EL43W(-1)			
	VFD055EL43W(-1)			

2-5 NPN / PNP Mode

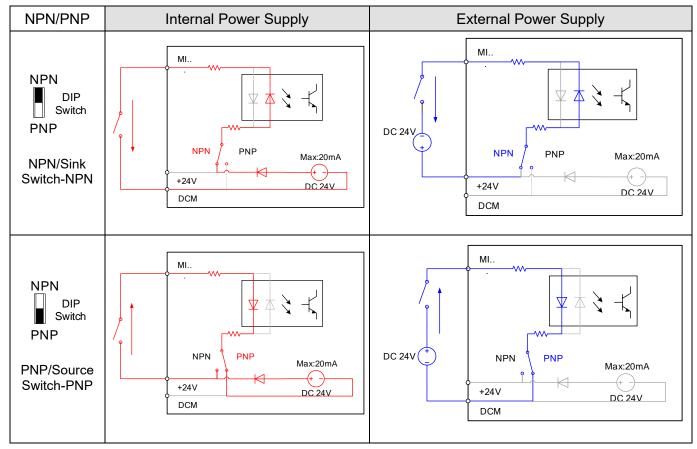

NOTE:

- The +24V-DCM internal 24V power capacity is 60 mA. For the output capacity of other external loads, the current consumption of the corresponding number of MI terminals should be deducted (6 mA for each MI terminal).
- 2. For VFD007EL21W(-1) model, if you need to install fan kit, the fan power supply is powered by +24V-DCM. Except for the normal use of the MI terminal, do not use other external loads at the same time to prevent the +24V terminal from being overloaded and the drive damaged.

Chapter 3 Keypad and Start-up

- 3-1 Description of the Digital Keypad
- 3-2 Operation Method
- 3-3 Trial Run



- ✓ Make sure that the wiring is correct. In particular, ensure that the output terminals
 U/T1, V/T2, W/T3 are NOT connected to power and that the drive is well grounded.
- ☑ Verify that no other equipment is connected to the AC motor drive.
- ☑ Do NOT operate the AC motor drive with wet hands.
- ☑ Please check if the digital keypad displays F60.0 or F50.0 is ON when power is applied.



☑ Stop the motor when a fault occurs during running and refer to Section 6-1 Fault Code Information for solutions. DO NOT touch output terminals U, V, W when power is still applied to L1/R, L2/S, L3/T, even when the AC motor drive is stopped to prevent electric shock.

3-1 Description of the Digital Keypad

3-1-1 Digital Keypad Appearance

VFD-EL-W series operates the running and displays the functions by the digital keypad.



Status Display

Displays the drive's current status: RUN, STOP, FWD, REV

2 LED Display

Indicates frequency, current, voltage, running direction, user-defined units, faults, etc.

Potentiometer

Sets the master frequency

4 UP / DOWN Key

Selects parameters and sets / changes parameter settings

There are four LEDs on the keypad

STOP: Lights when the drive stops.

• RUN: Lights when the motor is running.


FWD: Lights when the motor is running forward.

REV: Lights when the motor is running reverse.

3-1-2 Description of the Displayed Functions

Displayed Function	Description
RUN• FWD• REV•	Displays current setting frequency of the AC motor drive.
RUN• FWD• REV•	Displays the actual output frequency to the motor.
RUN• FWD• REV•	Displays the user-defined unit (where U = F x Pr.00.05)
RUN• STOP	Displays the loading current.
RUN• FWD• REV•	FWD command.
RUN• FWD• REV•	REV command.
RUN• FWD• REV•	The counter value (C).
RUN• FWD• REV•	Displays the selected parameter.
RUN• FWD• REV•	Displays the actual stored value of the selected parameter.
RUN• FWD• REV•	Displays the external fault.
RUN• FWD• REV•	Displays "End" for approximately one second (as shown in the left figure) if the data has been accepted and automatically stored in the register.
RUN• FWD• REV•	Displays if the setting data is not accepted or data value exceeds the allowed range.

3-1-3 Keypad Operation Process

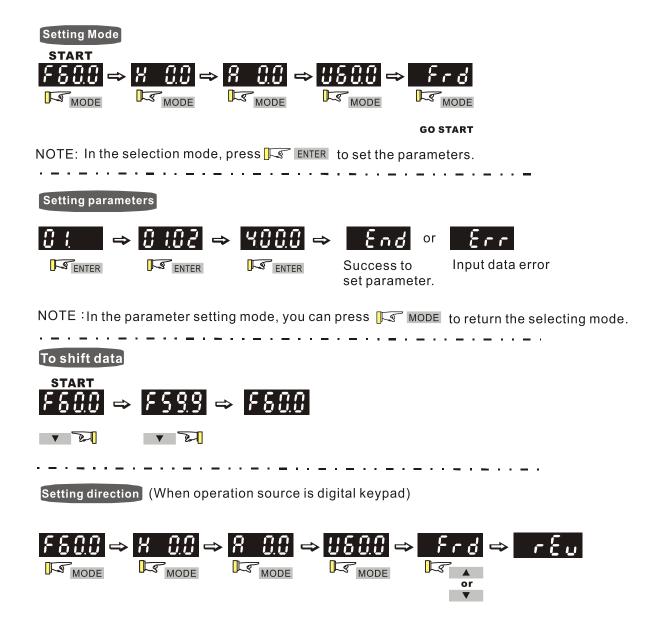

3-1-4 Reference Table for the Seven-segment LED Display of the Digital Keypad

								,		
Digit	0	1	2	3	4	5	6	7	8	9
LED Display	Ū	1	2	3	4	5	8	7	8	9
English Alphabet	Α	b	Сс	d	Е	F	G	Hh	li	Jj
LED Display	Я	ь	Ec	ď	ε	۶	G	Xh	1.	رَ ل
English Alphabet	K	L	n	Oo	Р	q	r	S	Tt	U
LED Display	۲	1	n	Oo	P	Q	_	5	76	U
English Alphabet	V	Υ	Z							
LED Display	U	9								

3-2 Operation Method

You can set Pr.02.01 to select the operation method to be through the digital keypad, RS-485 communication or control terminals.




Operation Method	Frequency Source	Operation Command Source	
Operate through communication	When using communication from the PC, converter to connect the drive to the PC. Refer to the communication address 2000		
Operate through the digital keypad	RUN STOP	MODE ENTER Figure 3-1 Set the operation command source	
	Set the frequency source through the ▲ ▼ keys, as shown in Figure 3-1.	through the RUN, STOP / RESET keys, as shown in Figure 3-1.	
Operate through external signals	Default: NPN NPN Switch PNP Factory Setting AVI Switch Switch PNP Factory Setting AVI Default: AVI NOTE Terminal SG+, SPIN5, PIN4 of R	+10V AVI/ACI ACM SG- SG- SG+	
	MI3-DCM (Set Pr.04.05 = d10) MI4-DCM (Set Pr.04.06 = d11)	Set MI1-DCM as Run / Stop. Refer to Pr.04.04 and Pr.04.19 descriptions in Chapter 4 for details of FWD/REV operations.	

3-3 Trial Run

The default for the operation source is the digital keypad.

The setting methods are as follows:

- After applying power, verify that the LED display shows F 60.0 Hz.
- Press key to set the frequency to be around 5 Hz. (Refer to Figure 3-1)
- ☑ If you want to change FWD to REV, press MODE to find the FWD function, then press the UP or DOWN key to locate the REV function to finish the direction change.
- ☑ Check following items:
 - 1. Check if the motor rotation direction is correct.
 - 2. Check if the motor runs steadily without abnormal noise and vibration.
 - 3. Check if acceleration and deceleration are smooth.

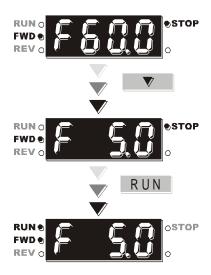

If the results of trial run are normal, increase the operating frequency to continue the trial run. If the trial run still goes normally, then you can start the formal run.

Motor operating direction

When the AC drive output terminals U/T1, V/T2 and W/T3 are connected to the motor terminals U/T1, V/T2 and W/T3 respectively, the FWD LED indicator on the digital keypad is ON. This means the AC motor drive executes running forward, and the motor rotates as the figure below shows. On the contrary, when the REV LED indicator lights, the AC motor drive executes running in reverse, and the motor rotates in an opposite direction as the figure below shows. If the AC motor drive executes running forward but the motor rotates in a reverse direction, exchange any two of the U/T1, V/T2 and W/T3 motor terminals.

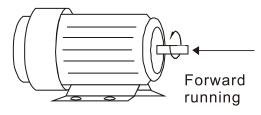


Figure 3-3

[This page is intentionally left blank]

Chapter 4 Parameters

- 4-1 Summary of Parameter Settings
- 4-2 Parameter Settings for Applications
- 4-3 Description of Parameter Settings
- 4-4 Adjustment and Application

The VFD-EL-W parameters are divided into 11 groups by property for easy setting. In most applications, users can complete all parameters settings before starting-up according to the relevant parameters settings in the parameter group. The 11 parameter groups are as following:

00: User Parameters

01: Basic Parameters

02: Operation Method Parameters

03: Output Function Parameters

04: Input Function Parameters

05: Multi-step Speed Parameters

06: Protection Parameters

07: Motor Parameters

08: Special Parameters

09: Communication Parameters

10: PID Control Parameters

4-1 Summary of Parameter Settings

00 User Parameters

Pr.	Parameter Name	Setting Range	Default
		0: 230V, 0.25 HP	
		2: 230V, 0.5 HP	
00.00		3: 460V, 0.5 HP	
		4: 230V, 1 HP	
	AC Matar Drive Identity	5: 460V, 1 HP	Daad
	AC Motor Drive Identity	6: 230V, 2 HP	Read
	Code	7: 460V, 2 HP	only
		8: 230V, 3 HP	
		9: 460V, 3 HP	
		11: 460V, 5.5 HP	
		13: 460V, 7.5 HP	
00.01	AC Motor Drive Rated	Diamlay by mandala	Read
00.01	Current Display	Display by models	only
	Parameter Reset	0: Parameter can be read/written	
		1: All parameters are read only	
		7: Keypad and frequency setting knob locked	
00.02		8: Keypad lock	0
00.02		9: Reset all parameters to defaults (50 Hz,	U
		230V/400V or 220V/380V depends on Pr.00.12)	
		10: Reset all parameters to defaults (60 Hz,	
		220V/440V)	
		0: F (frequency command)	
		1: H (output frequency)	
00.03	Start-up Display	2: A (output current)	0
		3: U (user-defined, see Pr.00.04)	
		4: FWD/REV command	
		0: Display the content of user-defined unit	
		1: Display counter value (c)	
		2: Display the status of multi-function input terminal	
		(d)	
00.04	Content of Multi-function	3: Display the drive's DC bus voltage (u)	0
00.04	Display (User-Defined)	4: Display the drive's output voltage (E)	
		5: Display PID analog feedback signal (b)	
		6: Display the drive's power factor angle (n)	
		7: Display the drive's output power (P)	
		8: Display the setting value and the feedback of PID	

Pr.	Parameter Name	Setting Range	Default
		control (P)	
		9: Display AVI analog input terminal signal (V) (I)	
		10: Display ACI analog input terminal signal (mA/V)	
		(i)	
		11: Display IGBT temperature (°C) (h)	
00.05	User-Defined Coefficient K	0.1–160.0	1.0
00.06	Firmware Version	Read only	#.##
00.07	O. ft (D. t.)	D I I	Read
00.07	Software Version (Date)	Read only	only
00.00	Parameter Protection	0–9999	
80.00	Password Input	0–4: the number of password attempts allowed	0
		0–9999	
00.00	Parameter Protection	0: No password protection or password is entered	
00.09	Password Setting	correctly (Pr.00.08)	0
		1: Password has been set	
00.10	Control Method	0: V/F voltage frequency control 1: Vector control	0
00.11	Reserved		
00.40	50 Hz Power System Base	0: 230V/ 400V	0
00.12	Voltage Setting	1: 220V/ 380V	0
	User-Defined Value		
00.40	(corresponds to Max.	0.0000	
00.13	operation frequency	0–9999	0
	Pr.01.00)		
00.44	Decimal Places for User-		
00.14	Defined Value	0–3	0
00.45	Output Phase Order	0: Standard	
00.15	Selection	1: Reverse the operation direction	0
	Drobibit Write CCDDOM	0: Disable	
00.16	Prohibit Write EEPROM	1: Enable, control via MI terminal	0
	Function	2: Enable, MI terminal is invalid	

01 Basic Parameters

Pr.	Parameter Name	Setting Range	Default
04.00	M 0 " -	50.00, 400.011	60.00/
01.00	Max. Operation Frequency	50.00–400.0 Hz	50.00
04.04	Mater Detect Francisco	0.40, 400,011-	60.00/
01.01	Motor Rated Frequency	0.10–400.0 Hz	50.00
		230V models: 0.1–255.0 V	220.0/
04.02	Motor Potod Voltago	250 V Models. 0.1–255.0 V	230.0
01.02	Motor Rated Voltage	460V models: 0.1–510.0 V	380.0/
		400 V Models. 0.1–310.0 V	400.0
01.03	Mid-Point Frequency Setting	0.10–400.0 Hz	1.50
04.04	Mil Deint Walter on Oaking	230V models: 0.1–255.0 V	10.0
01.04	Mid-Point Voltage Setting	460V models: 0.1–510.0 V	20.0
01.05	Min. Output Frequency Setting (Hz)	0.10–400.0 Hz	1.50
04.00	Min. Output Voltage	230V models: 0.1–255.0 V	10.0
01.06	Setting	460V models: 0.1–510.0 V	20.0
01.07	Output Frequency Upper Limit	0.1–120.0%	110.0
01.08	Output Frequency Lower Limit	0.0–100.0%	0.0
01.09	Acceleration Time 1	0.1-600.0 sec./ 0.01-600.00 sec.	10.0
01.10	Deceleration Time 1	0.1-600.0 sec./ 0.01-600.00 sec.	10.0
01.11	Acceleration Time 2	0.1-600.0 sec./ 0.01-600.00 sec.	10.0
01.12	Deceleration Time 2	0.1-600.0 sec./ 0.01-600.00 sec.	10.0
01.13	JOG Acceleration Time	0.1-600.0 sec./ 0.01-600.00 sec.	1.0
01.14	JOG Deceleration Time	0.1-600.0 sec./ 0.01-600.00 sec.	1.0
01.15	JOG Frequency Setting	0.10–400.0 Hz	6.00
01.16	Auto-Acceleration / Auto- Deceleration Setting	 1: Auto-acceleration and linear deceleration 2: Linear acceleration and linear deceleration 3: Auto-acceleration and auto-deceleration (set by loads) 4: Auto-acceleration and auto-deceleration (set by acceleration/ deceleration time setting) 	0
01.17	S-Curve Acceleration Time Setting	0.0–10.0 sec./ 0.00–10.00 sec.	0.0

	Pr.	Parameter Name	Setting Range	Default
	01.18	S-Curve Deceleration Time Setting	0.0-10.0 sec./ 0.00-10.00 sec.	0.0
	01.19	Time Unit for Acceleration	0: Unit 0.1 sec.	0
	01.19	and Deceleration	1: Unit 0.01 sec.	U
×	01.20	Simple Positioning Stop		0.00
<i></i>	01.20	Frequency 0		0.00
*	01.21	Simple Positioning Stop Frequency 1		5.00
~	01.22	Simple Positioning Stop		10.00
	01.22	Frequency 2		10.00
×	01.23	Simple Positioning Stop Frequency 3	0.00, 400,00 H-	20.00
~	01.24	Simple Positioning Stop	0.00–400.00 Hz	30.00
	01.24	Frequency 4		30.00
×	01.25	Simple Positioning Stop		40.00
<i></i>	01.20	Frequency 5		40.00
×	01.26	Simple Positioning Stop		50.00
		Frequency 6		
×	01.27	Simple Positioning Stop		60.00
		Frequency 7		
×	01.28	Simple Positioning Stop		0.00
		Delay Time 0		
×	01.29	Simple Positioning Stop		0.00
		Delay Time 1 Simple Positioning Stop		
×	01.30	Delay Time 2		0.00
		Simple Positioning Stop		
×	01.31	Delay Time 3		0.00
		Simple Positioning Stop	0.00-600.00 sec.	
*	01.32	Delay Time 4		0.00
	04.55	Simple Positioning Stop		0.00
*	01.33	Delay Time 5		0.00
	04.04	Simple Positioning Stop		0.00
*	01.34	Delay Time 6		0.00
, l	01.35	Simple Positioning Stop		0.00
7	01.33	Delay Time 7		0.00

02 Operation Method Parameters

			* You can set this parameter during o	peration
	Pr.	Parameter Name	Setting Range	Default
*	02.00	First Master Frequency Command Source	 0: Digital keypad input or external terminals (up/down function) 1: External terminal AVI analog input DC 0–10V 2: External terminal ACI analog signal DC 4–20 mA 3: RS-485 communication input 4: Digital keypad potentiometer knob 	0
×	02.01	Operation Command Source	0: Digital keypad 1: External terminals, STOP key is valid 2: External terminals, STOP key is invalid 3: RS-485 communication, STOP key is valid 4: RS-485 communication, STOP key is invalid	0
	02.02	Stop Method	0: Ramp to stop; E.F.: Coast to stop 1: Coast to stop; E.F.: Coast to stop 2: Ramp to stop; E.F.: Ramp to stop 3: Coast to stop; E.F.: Ramp to stop 4: Simple positioning stop; E.F.: Coast to stop	0
•	02.03	PWM Carrier Frequency Selection	2–12 kHz	8
	02.04	Motor Direction Control	0: Reverse enable 1: Disable reverse 2: Disable forward	0
	02.05	Power-On and Run Command Source Changes Motor Drive Operation Control (external terminal only)	 0: Operates when power-on, remains current running status when the operation command is changed 1: Do not run when power-on, remains current running status when the operation command is changed 2: Operates when power-on, runs according to the new operation command immediately 3: Do not run when power-on, runs according to the new operation command immediately 4: Runs when reset or power-on, changes operation command according to the external terminal status when the command source is 2-wire external terminal 	1
	02.06	ACI Loss	0: Decelerates to 0 Hz 1: Stop immediately and display AErr 2: Continue operation at the last frequency	1

	Pr.	Parameter Name	Setting Range	Default
			3: Operates at the frequency of Pr.02.11	
			0: By Up/ Down key	
	02.07	External Terminal Up/Down	1: By acceleration/ deceleration time	0
	02.07	Key Mode Selection	2: By constant speed (Pr.02.08)	0
			3: By pulse (Pr.02.08)	
	02.08	External Terminal Speed of the Up/ Down Key	0.01–10.00 Hz/2ms	0.01
×	02.09	Second Master Frequency	 0: Digital keypad input or external terminals (up/down function) 1: External terminal AVI analog input DC 0–10 V 2: External terminal ACI analog signal DC 4–20 mA 3: RS-485 communication input 4: Digital keypad potentiometer knob 	0
×		First / Second Master Frequency Command	0: First master frequency command only1: First master frequency command + second master frequency command2: First master frequency command - second master frequency command	0
*	02.11	Keypad Frequency Command	0.00–400.0 Hz	60.00
*	02.12	Communication Frequency Command	0.00–400.0 Hz	60.00
	02.13	Frequency Command Saving Mode	Save the frequency before power-off Only save the keypad frequency command before power-off Only save the communication frequency command before power-off	0
	02.14	Initial Frequency Command Mode at Stop	0: Use current Frequency command 1: Use zero Frequency command 2: Refer to Pr.02.15 to set up	0
	02.15	Initial Frequency Command Setting at Stop	0.00–400.0 Hz	60.00
	02.16	Source Display	1: bit0 = 1: First frequency command source (Pr.02.00) 2: bit1 = 1: Second frequency command source (Pr.02.09) 4: bit2 = 1: Set by external MI terminal	Read only
	02.17	Operation Command Source Display	1: bit0 = 1: Digital keypad 2: bit1 = 1: RS-485 4: bit2 = 1: External terminals	Read only

Pr.	Parameter Name	Setting Range	Default
		8: bit3 = 1: External MI terminals	
02.18	User-defined Value Setting	0-Pr.00.13	0
02.10	User-defined Value	0–9999	Read
02.19	Oser-defined value	l0-9999	only

03 Output Function Parameters

Pr.	Parameter Name	Setting Range	Default
		0: No function	
		1: Indication during RUN	
		2: Master frequency reached	
		3: Indication at zero speed	
		4: Over-torque detection	
		5: Base Block (B.B) indication	
		6: Low-voltage indication	
		7: Operation mode indication	
		8: Fault indication	
		9: Desired frequency reached	
		10: Terminal count value reached	
		11: Preliminary count value reached	
00.00	Marie C. C. C. C.	12: Over-voltage stall prevention	
03.00	Multi-function Output Relay	13: Over-current stall prevention	8
		14: IGBT overheating (85°C ON, 80°C OFF)	
		15: Over-voltage	
		16: PID feedback error	
		17: Forward command	
		18: Reverse command	
		19: Zero speed (including STOP)	
		20: Warning indication	
		21: Mechanical brake control (use with Pr.03.11 and	
		Pr.03.12)	
		22: Drive is ready	
		23: Indication of multi-pump system error (only	
		Master)	
03.01	Reserved		
03.02	Desired Frequency	0.00–400.0 Hz	0.00
00.02	Reached	5.65 166.6 1.2	0.00
03.03	Reserved		
03.04	Reserved		
03.05	Count Value Reached	0–9999	0
03.06	Preliminary Count Value	0–9999	0
	Reached		
	EF Activates when the	0: Terminal count value reached, no EF displays	
03.07	Terminal Count Value	1: Terminal count value reached, EF activates	0
	Reached	1. Terminal count value reached, El activates	

Pr.	Parameter Name	Setting Range	Default
03.08	Fan Cooling Control	 Fan is always ON Fan is OFF after the AC motor drive stops for one minute. Fan is ON when the AC motor drive runs; fan is OFF when the AC motor drive stops Fan turns ON when temperature (IGBT) reaches (60°C ON, 50°C OFF) Fan is ON when the AC motor drive runs; fan is OFF when the AC motor drive stops. Fan is in stand-by mode at zero speed. 	3
03.09	Reserved		
03.10	Reserved		
03.11	Mechanical Brake Release Frequency	0.00–20.00 Hz	0.00
03.12	Mechanical Brake Active Frequency	0.00–20.00 Hz	0.00
03.13	Display the Status of Multi- function Output Terminal	Refer to Description of Parameter Settings	Read only
03.14	Reserved		

04 Input Function Parameters

Pr.	Parameter Name	Setting Range	Defau
4.00	Keypad Potentiometer Bias	0.0-100.0%	0.0
M 04	Keypad Potentiometer Bias	0: Positive bias	0
04.01	Direction	1: Negative bias	0
04.02	Keypad Potentiometer Gain	0.1–200.0%	100.
04.00	Keypad Potentiometer Negative	0: Positive bias only	0
04.03	Bias with Reverse Motion	1: Negative bias with reverse command	0
		Mode 1 (Pr.04.19 = 0)	
		0: MI1 activates (FWD) / Stop	
04.04	MI Terminal Start/ Stop Method and	Mode 2 (Pr.04.19 = 1)	
04.04	Multi-function Input Selection	0: Two-wire (1) MI1, MI2	0
		1: Two-wire (2) MI1, MI2	
		3: Three-wire MI1, MI2 and MI3	
04.05	Reserved	0: No function	
04.00	Start/ Stop or Multi-function Input	1: Multi-step speed command 1	
04.06	Command 1 (MI2)	2: Multi-step speed command 2	1
04.0=	Start/ Stop or Multi-function Input	3: Multi-step speed command 3	_
04.07	Command 2 (MI3)	4: Reserved	2
04.00	Multi-function Input Command 3	5: Reset	
04.08	(MI4)	6: Acceleration / deceleration speed inhibit	3
		7: 1st and 2nd acceleration / deceleration	
		time selection	
		8: JOG operation	
		9: External B.B. input	
		10: Frequency up command	
		11: Frequency down command	
		12: Counter triggered signal input	
		13: Clear the counter	
		14: E.F. external fault	
		15: Disable PID function	
		16: Output stop	
		17: Parameter lock	
		18: Operation command selection: External	
		terminals	
		19: Operation command selection: Digital	
		keypad	
		20: Operation command selection:	
		Communication control	
		21: FWD / REV	

	Pr.	Parameter Name	Setting Range	Default
			22: Second frequency command source	
			23: Simple positioning FWD stop limit	
			24: Simple positioning REV stop limit	
			25: Multi-pump manual/ auto switch	
			29: Prohibit write EEPROM	
	04.09	Multi-function Input Contact Selection (N.O./ N.C.)	0–63	0
	04.10	Digital Terminal Input Response Time	1–20 (*2ms)	1
×	04.11	Minimum AVI Input Voltage	0.0–10.0 V	0.0
×	04.12	Minimum AVI Input Frequency	0.0–100.0% Fmax	0.0
×	04.13	Maximum AVI Input Voltage	0.0–10.0 V	10.0
×	04.14	Maximum AVI Input Frequency	0.0–100.0% Fmax	100.0
×	04.15	Minimum ACI Input Current	0.0–20.0 mA	4.0
×	04.16	Minimum ACI Input Frequency	0.0–100.0% Fmax	0.0
×	04.17	Maximum ACI Input Current	0.0–20.0 mA	20.0
×	04.18	Maximum ACI Input Frequency	0.0–100.0% Fmax	100.0
	04.19	MI Terminal Control Mode Selection	0: Mode 1, single-wire start/ stop 1: Mode 2, two-wire/ three-wire start/ stop	0
	04.20			
	-	Reserved		
	04.25			
	04.26	Display the Status of Multi-function Input Terminal	Refer to Description of Parameter Settings	Read only
×	04.27	Internal/ External Multi-function Input Terminal Selection	0–63	0
*	04.28	Internal Multi-function Input Terminal Setting	0–63	0

05 Multi-step Speed Parameters

	Pr.	Parameter Name	Setting Range	Default
×	05.00	1st Step Speed Frequency	0.00–400.0 Hz	0.00
×	05.01	2 nd Step Speed Frequency	0.00–400.0 Hz	0.00
×	05.02	3 rd Step Speed Frequency	0.00–400.0 Hz	0.00
×	05.03	4 th Step Speed Frequency	0.00–400.0 Hz	0.00
×	05.04	5 th Step Speed Frequency	0.00–400.0 Hz	0.00
×	05.05	6 th Step Speed Frequency	0.00–400.0 Hz	0.00
×	05.06	7 th Step Speed Frequency	0.00–400.0 Hz	0.00

06 Protection Parameters

İ			* You can set this parameter of	
	Pr.	Parameter Name	Setting Range	Default
		Over-Voltage Stall	0: Disable	
	06.00	Prevention	230V models: 330.0–410.0 V	390.0
		T TOVOTILION	460V models: 660.0–820.0 V	780.0
		Over-Current Stall		
×	06.01	Prevention during	20–250% (0: Disable)	170
		Acceleration		
		Over-Current Stall		
×	06.02	Prevention during	20–250% (0: Disable)	170
		Operation		
			0: No function	
			1: After over-torque detection during constant	
			speed operation, continues operation until	
			oL1 or oL protection activate	
			2: After over-torque detection during constant	
		Selection	speed operation, stops and shows oL2 fault	
	06.03		3: After over-torque detection during	0
			acceleration and constant speed operation,	
			continues operation until oL1 protection	
			activates	
			4: After over-torque detection during	
			acceleration and constant speed operation,	
			stops and shows oL2 fault	
*	06.04	Over-torque Detection Level	10–200%	150
	06.05	Over-torque Detection Time	0.1–60.0 sec.	0.1
			0: Standard motor	
	06.06	Electronic Thermal Relay	1: Inverter Motor	2
		Selection	2: Disabled	
	00.5=	Electronic Thermal Relay		
	06.07	Action Time	30–600 sec.	60
	06.08	Fault Record 1	0: No fault record	0
	06.09	Fault Record 2	1: Over-current (oc)	0
	06.10	Fault Record 3	2: Over-voltage (ov)	0
	06.11	Fault Record 4	3: IGBT over-heat (oH1)	0
	06.12	Fault Record 5	4: Low voltage (Lv)	0
	06.21	Fault Record 6	5: Drive over-load (oL)	0
	06.22	Fault Record 7	6: Electronics thermal relay 1 protection (oL1)	0
		1	, , ,	

Pr.	Parameter Name	Setting Range	Default
06.23	Fault Record 8	7: Motor overload (oL2)	0
06.24	Fault Record 9	8: External fault (EF)	0
06.25	Fault Record 10	9: Over-current during acceleration (ocA)	0
		10: Over-current during deceleration (ocd)	
		11: Over-current at constant speed (ocn)	
		12: Reserved	
		13: Reserved	
		14: Phase loss (PHL)	
		15: Reserved	
		16: Auto-acceleration / auto-deceleration failure	
		(cFA)	
		17: Software or password protection (codE)	
		18: Write error (cF1.0)	
		19: Read error (cF2.0)	
		20: Protection circuit error (HPF1)	
		21: Protection circuit error (HPF2)	
		22: Reserved	
		23: Protection circuit error (HPF4)	
		24: U-phase hardware error (cF3.0)	
		25: V-phase hardware error (cF3.1)	
		26: W-phase hardware error (cF3.2)	
		27: DC bus hardware error (cF3.3)	
		28: OH1 hardware error (cF3.4)	
		29: Reserved	
		30: Reserved	
		31: Reserved	
		32: Analog feedback signal error (AErr)	
		33: Reserved	
		34: Motor PTC overheating protection (PTC1)	
		35: PID feedback fault (FbE)	
		36: PID feedback error (dEv)	
		37: Output phase loss (oPHL)	
		38: Thermal cutout triggered (HotP)	
		39–40: Reserved	
06.13	Detection Time for Motor	0.0: Disabled	0
	Phase Loss	0.1–60.0 sec.	-
06.14	Detection Current Level for	10–100%	30
	Motor Phase Loss		
06.15	Thermal Cutout Protection	0–100%	1.1A ÷ Pr.00.01
	Level	-	(depending on

4-16

	Pr.	Parameter Name	Setting Range	Default
				models)
*	06.16	Detection and Resume Time for Thermal Cutout	0.0–360.0 sec.	3.0
*	06.17	Thermal Cutout Treatment	0: No function (no warning and continue operation)1: Fault and coasts to stop2: Warn and continue operation with Pr.06.19 setting frequency	0
*	06.18	Filter Time for Current of Dropping Load	0–9999	0
*	06.19	Starting Frequency after Thermal Cutout Resumes	1–100% × Pr.01.01	8%
*	06.20	Multi-function Output Terminal Selection when Load Drops then Resumes (when Pr.03.00=8 Malfunction Indication)	(Valid only when Pr.06.17=2) 0: RA-RB-RC OFF 1: RA-RB-RC ON	0
	06.26	Output Frequency Fault 1 (Hz)	0–65535	0
	06.27	Output Current Fault 1	0–65535	0
	06.28	Output Voltage Fault 1	0–65535	0
	06.29	DC bus Voltage Fault 1	0–65535	0
	06.30	Drive Internal Temperature Fault 1	0–65535	0
	06.31	Output Frequency Fault 2 (Hz)	0–65535	0
	06.32	Output Current Fault 2	0–65535	0
-		1 0	0–65535	0
	06.34	Drive Internal Temperature	0–65535 0–65535	0
-	06.36	Output Frequency Fault 3 (Hz)	0–65535	0
	06.37	Output Current Fault 3	0–65535	0
	06.38	Output Voltage Fault 3	0–65535	0
	06.39	DC bus Voltage Fault 3	0–65535	0
	06.40	Drive Internal Temperature Fault 3	0–65535	0
	06.41	Output Frequency Fault 4 (Hz)	0–65535	0

Pr.	Parameter Name	Setting Range	Default
06.42	Output Current Fault 4	0–65535	0
06.43	Output Voltage Fault 4	0–65535	0
06.44	DC bus Voltage Fault 4	0–65535	0
06.45	Drive Internal Temperature	0–65535	0
	Fault 4		
06.46	Output Frequency Fault 5	0–65535	0
	(Hz)		
06.47	Output Current Fault 5	0–65535	0
06.48	Output Voltage Fault 5	0–65535	0
06.49	DC bus Voltage Fault 5	0–65535	0
06.50	Drive Internal Temperature	0.05505	0
06.50	Fault 5	0–65535	0
06.54	OL2 Over-torque	0: Based on motor's rated current (Pr.07.00)	0
06.51	Detection Level Selection	1: Based on driver's rated current (Pr.00.01)	0

07 Motor Parameters

	Pr.	Parameter Name	Setting Range	Default
.,	07.00	Matan Data d Command	30–120% FLA	100%
*	07.00	Motor Rated Current	(FLA: drive's rated current)	FLA
~	07.01	No-Load Current for Motor	0–99% FLA	40%
	07.01	INO-LOAD CUITCHE FOI MOTO	0-33701 EA	FLA
*	07.02	Auto-Torque Compensation	0.0–10.0	0.0
*	07.03	Torque Compensation Gain	0.00–10.00	0.00
			0: Disabled	
×	07.04	Motor Parameter Auto-tuning	1: Auto-tuning R1 (motor does not run)	0
,		and the same and the same same same same same same same sam	2: Auto-tuning R1 + no-load current (motor	
-			runs)	
	07.05	Motor Resistance R1 (Line to Line)	0–65535 mΩ	0
	07.06	Motor Rated Slip	0.00–20.00 Hz	3.00
	07.07	Slip Compensation Limit	0–250%	200
	07.08	Torque Compensation Low Pass Filter Time	0.01–10.00 sec.	0.10
-	07.09	Slip Compensation Low Pass Filter Time	0.05–10.00 sec.	0.20
	07.10	Accumulated Motor Operation Time (Minutes)	00–1439 min.	0
	07.11	Accumulated Motor Operation Time (Days)	00–65535 days	0
	07.12	Motor PTC Overheating	0: Disable	0
	07.12	Protection	1: Enable	U
	07.13	Motor PTC Overheating Protection Input Filter Time	0–9999 (unit: 2ms)	100
-	07.14	Motor PTC Overheating Protection Level	0.1–10.0 V	2.4
-	07.15	Motor PTC Overheating Warning Level	0.1–10.0 V	1.2
-	07.16	Motor PTC Overheating Warning Reset Level Difference	0.1–5.0 V	0.6
	07.17	Motor PTC Overheating Action	0: Warn and ramp to stop 1: Warn and coast to stop 2: Warn and continue operation	0

08 Special Parameters

Pr.	Parameter Name	Setting Range	Default
08.00	DC Brake Current Level	0–100%	0
08.01	DC Brake Time at Start-up	0.0-60.0 sec.	0.0
08.02	DC Brake Time at STOP	0.0-60.0 sec.	0.0
08.03	DC Brake Frequency at STOP	0.00–400.0 Hz	0.00
08.04	Momentary Power Loss Action	Stop operation Operation continues after momentary power loss, speed search starts with the last	0
08.05	Maximum Allowable Power Loss Time	0.1–20.0 sec.	2.0
08.06	Base Block Speed Search	0: Disable1: Speed search starts with the last speed beforeB.B.2: Speed search starts with the minimum speed	1
08.07	Speed Tracking Delay Time	0.1–5.0 sec.	0.5
08.08	Speed Tracking Action Level	30–200%	150
08.09	Skip Frequency 1 Upper Limit	0.00–400.0 Hz	0.00
08.10	Skip Frequency 1 Lower Limit	0.00–400.0 Hz	0.00
08.11	Skip Frequency 2 Upper Limit	0.00–400.0 Hz	0.00
08.12	Skip Frequency 2 Lower Limit	0.00–400.0 Hz	0.00
08.13	Skip Frequency 3 Upper Limit	0.00–400.0 Hz	0.00
08.14	Skip Frequency 3 Lower Limit	0.00–400.0 Hz	0.00
08.15	Number of Times of Restart after Fault	0–10	0
08.16	Auto-restart Interval of Fault	0.1-6000.0 sec.	60.0
08.17	Auto-Energy Saving Operation	0: Disable 1: Enable	0
08.18		0: Enable AVR 1: Disable AVR 2: Disable AVR during deceleration 3: Disable AVR at STOP	0
	 		
08.19	Reserved		

09 Communication Parameters

	Pr.	Parameter Name	Setting Range	Default
×	09.00	Communication Address	1–254	1
			0: Baud rate 4800 bps	
×	09.01	Communication	1: Baud rate 9600 bps	1
^	09.01	Transmission Speed	2: Baud rate 19200 bps	'
			3: Baud rate 38400 bps	
			0: Warn and continue operation	
N	09.02	Communication Fault	1: Warn and ramp to stop	3
^	09.02	Treatment	2: Warn and coast to stop	
			3: No treatment and no fault	
.	09.03	Communication Time-Out	0.0: No function	0.0
^	09.03	Detection	0.1–120.0 sec.	0.0
			0: 7, N, 2 for ASCII	
			1: 7, E, 1 for ASCII	
			2: 7, O, 1 for ASCII	
			3: 8, N, 2 for RTU	
		09.04 Communication Protocol	4: 8, E, 1 for RTU	
~	00.04		5: 8, O, 1 for RTU	0
^	09.04		6: 8, N, 1 for RTU	
			7: 8, E, 2 for RTU	
			8: 8, O, 2 for RTU	
			9: 7, N, 1 for ASCII	
			10: 7, E, 2 for ASCII	
			11: 7, O, 2 for ASCII	
	09.05	Reserved		
	09.06	Reserved		
×	09.07	Communication Response	0–200 (unit: 2ms)	1
7	03.01	Delay Time	0-200 (driit. 21119)	1
₩	NQ N R	Communication Keypad	0: PU06	0
7	09.08	Selection	1: PU08	J

10 PID Control Parameters

Pr.	Parameter Name	Setting Range	Default
		0: PID function disabled	
		1: Digital keypad	
10.00	PID Set Point Selection	2: Reserved	0
		3: Reserved	
		4: PID reference target value (Pr.10.11)	
		0: Positive PID feedback from external terminal AVI (0-	
		10 V _{DC})	
		1: Negative PID feedback from external terminal AVI	
10.01	Input Terminal for PID	(0-10 V _{DC})	0
10.01	Feedback	2: Positive PID feedback from external terminal ACI	
		(4–20 mA)	
		3: Negative PID feedback from external terminal ACI	
		(4–20 mA)	
10.02	Proportional Gain (P)	0.0–10.0	1.0
10.03	Integral Time (I)	0.00-100.0 sec.	1.00
10.04	Differential Time (D)	0.00-1.00 sec.	0.00
10.05	Upper Limit of Integral Control	0–100%	100
10.06	PID Delay Time	0.0–2.5 sec.	0.0
10.07	PID Output Frequency Limit	0–110%	100
40.00	PID Feedback Signal	0.0.2000 (0.0. #	00.0
10.08	Error Detection Time	0.0–3600 sec. (0.0: disable)	60.0
	PID Feedback Signal	0: Warn and ramp to stop	
10.09	Error Treatment	1: Warn and coast to stop	0
	(Analog input)	2: Warn and continue operation	
10.10	PID Detection Value Gain	0.0–10.0	1.0
10.11	PID Target Value	0.00–400.0 Hz (valid when Pr.10.00 = 4)	0.00
10.12	PID Feedback Signal	0.0–100.0%	10.0
10.12	Error Deviation Level	0.0-100.0%	10.0
	PID Feedback Signal		
10.13	Error Deviation Detection	0.1–300.0 sec.	5.0
	Time		
10.14	Sleep Detection Time	0.0-6550 sec.	0.0
10.15	Sleep Frequency	0.00-Fmax	0.00
10.16	Wake-up Frequency	0.00-Fmax	0.00
10.17	PID Offset	0.00–60.00 Hz	0

	Pr.	Parameter Name	Setting Range	Default
	10.18	PID Feedback Physical Quantity	1.0–99.9	99.9
	10.19	PID Calculation Mode Selection	0: Serial connection 1: Parallel connection	0
	10.20	PID Error Deviation Treatment	 Warn and continue operation (no treatment) Warn and coast to stop Warn and ramp to stop Ramp to stop and restart after Pr.10.21 delay time (no fault or warning) Ramp to stop and restart after Pr.10.21 delay time. The number of times of restart is limited by Pr.10.50 	0
	10.21	PID Error Deviation Restart Delay Time	0–9999 sec.	60
*	10.22	Set Point Deviation Level	0–100%	0
×	10.23	Set Point Stop Detection Time	0–9999 sec.	10
*	10.24	Deviation Level of Liquid Leakage	0–50%	0
*	10.25	Liquid Leakage Change Detection	0: Disable 0–100%	0
*	10.26	Liquid Leakage Change Detection Time	0: Disable 0.1–10.0 sec.	0.5
	10.27 - 10.34	Reserved		
	10.35	Multi-pump Operation Mode	00: Disable01: Fixed time circulation (alternative operation)02: Fixed quantity control (multi-pump operating at constant pressure)	0
	10.36	Multi-pump ID	1: Master 2–4: Slave	0
*	10.37	Multi-pump Fixed Time Circulation Period	1–65535 min.	60
*	10.38	Pump Switching Start-up Frequency	0.00 Hz–Fmax	60.00
*	10.39	Pump Reaches Start-Up Frequency Detection Time	0.0–3600.0 sec.	1
*	10.40	Pump Switching Stop Frequency	0.00 Hz–Fmax	48.00

	Pr.	Parameter Name	Setting Range	Default
		Pump Reaches Switching		
×	10.41	Stop Frequency Detection	0.0–3600.0 sec.	1
		Time		
~	10.42	Pump's Frequency at	0.0–Fmax	0.00
	10.12	Time-Out (Disconnection)	o.o i max	0.00
			bit 0: When the operating pump is failed, whether it	
			switches to an alternative pump or not	
			0: Stop all pump action	
			1: Switch to an alternative pump	
			bit 1: During the operation, stop or standby after	
	10.43	Pump Fault Treatment	resetting from error	1
	10.10	amp radic froduitoric	0: Standby after resetting	•
			1: Stop after resetting	
			bit 2: Whether the system can run or not when the	
			pump has an error	
			0: The system cannot activate	
			1: The system selects another pump to operate	
	10.44	Pump Start-Up Sequence	0: By pump ID	0
		Selection	1: By the operating time	
\sim	10.45	Pump Alternative	0.0-360.0 sec.	60.0
		Operation Time Setting		
	10.46			
	_	Reserved		
	10.48			
			0: Use the existed setting (default), judging by the	
×	10.49	Setting Method for	feedback deviation	0
		Pr.10.12	1: Set the low water pressure percentage (%), check	
			for any fault by the feedback physical quantity	
×	10.50	Number of Times of PID	0–1000 times	
		Restart after Fault		0

4-2 Parameter Settings for Applications

Speed Search

The operating motor can be restarted without waiting for a complete stop. The drive automatically searches the motor speed, and accelerates when the speed reaches the motor speed.

Applications	Purpose	Related Parameters	
Inertial loads such as windmills	The motor restarts during	09.04.09.09	
and winding equipment	operation	08.04–08.08	

DC Brake before Operation

For a free-running motor, if the operation direction is uncertain, execute DC braking before start-up.

Applications	Purpose	Related Parameters
Loads that can be moved when	The motor restarts during	08.00, 08.01
windmills and water pumps stop	operation	08.00, 08.01

Energy-Saving Operation

Save energy according to the set proportion when the AC motor drive runs at constant speed, yet has full power during acceleration and deceleration. Applicable for vibration reduction of precision machine tools.

Applications	Purpose	Related Parameters
Punch press, precision machine	Sava anaray raduca vibration	08.17
tools	Save energy, reduce vibration	00.17

Eight-step Speed Operation

Use simple contact signals to control eight-step speed, including master frequency (four-step speed) operation.

Applications	Purpose	Related Parameters
Conveying machinery	Cyclic operation at multi-step	Pr.04.06–04.08, Pr.05.00–05.06
	speed	1 1.04.00-04.00, 1 1.03.00-03.00

Multi-step Acceleration and Deceleration Switching Operation

Use external signals to switch multi-step acceleration and deceleration operation. When an AC motor drive drives more than two motors, it reaches high speed operation, but still start/ stop smoothly.

Applications	Purpose	Related Parameters
Auto-turntable for Conveying	Switch acceleration and	Pr.01.09-01.12. Pr.04-06-04.08
machinery	deceleration time through external	
	signals	

Overheat warning

When an AC motor drive overheats, a thermal sensor triggers the overheating warning.

Applications	Purpose	Related Parameters
Air conditioners	Safety measure	Pr.03.00, Pr.04.06-04.08

Operation Command

Select the AC motor drive control by external terminals or digital keypad

Applications	Purpose	Related Parameters
General application	Select the control signal source	Pr.02.01, Pr.04.06-04.08

Frequency Hold

Hold the output frequency during acceleration and deceleration

Applications	Purpose	Related Parameters
General application	Acceleration/ deceleration pause	Pr.04.06-04.08

Auto-restart after Fault

The AC motor drive can automatically restart/ reset up to 10 times after a fault occurs.

Applications	Purpose	Related Parameters
Air conditioners	For continuous and reliable	Pr.08.15, Pr.08.16
	operation	F1.00.13, F1.00.10

DC Brake Emergency Stop

The AC motor drive can use the DC brake for emergency stop when a quick stop is needed without a brake resistor.

Applications	Purpose	Related Parameters
High-speed rotors	Emergency stop without DC resistor	Pr.08.00-08.03

Over-torque Setting

Set the internal motor or mechanical over-torque detection level. When over-torque occurs, the drive automatically adjusts the output frequency.

It is suitable for machines like fans and pumps that require continuous operation.

Applications	Purpose	Related Parameters
Pumps, fans and extruders	To protect machines and enhance	Pr.06.00-06.05
rumps, rans and extruders	continuous/ reliable operation	

Upper/ Lower Limit Frequency

When the external signals cannot provide upper/ lower limits, gain and bias, you can set the limits individually in the AC motor drive.

Applications	Purpose	Related Parameters
Pumps and fans	Control the motor speed within the	Pr.01.07, Pr.01.08
	upper/ lower limit	

Skip Frequency Setting

The AC motor drive does not run at constant speed in the skip frequency range. You can set up to three skip frequency ranges.

Applications	Purpose	Related Parameters
Pumps and fans	To prevent machine resonance vibration	Pr.08.09-08.14

Carrier Frequency Setting

Increase the carrier frequency to reduce motor noise

Applications	Purpose	Related Parameters
General application	Reduce noise	Pr.02.03

Keep Running when Frequency Command is Lost

When the frequency command is lost due to system malfunction, the AC motor drive can still operate. Applicable for air-conditioning equipment of intelligent buildings

Applications	Purpose	Related Parameters
Air conditioners	For continuous operation	Pr.02.06

Output Signal during Operation

Brake release when the AC motor drives gives a signal during motor operation. (Signal disappears when the AC motor drive is free-running.)

Applications	Purpose	Related Parameters
General application; mechanical	Provide a signal for operation	D= 02 00
brake	status	Pr.03.00

Output Signal at Zero Speed

When the drive's output frequency is lower than the minimum output frequency, it gives a signal for an external system or control wiring.

Applications	Purpose	Related Parameters
General application; machine	Provide a signal for operation	Pr.03.00
tools	status	

Output Signal at set Frequency

When the drive's output frequency reaches the set frequency, it gives a signal for an external system or control wiring.

Applications	Purpose	Related Parameters
General application; machine	Provide a signal for operation	Pr.03.00
tools	status	

Output Signal at Over-torque

When the motor over-torque is larger than the drive's setting level, it gives a signal to prevent the machine from damage due to the load.

Applications	Purpose	Related Parameters
Machine tools, fans, pumps and	To protect machines and for	Pr.03.00, Pr.06.04–06.05
extruders	reliable operation	F1.03.00, F1.00.04-00.03

Output Signal at Low Voltage

When low voltage is detected after the motor detects the P-N voltages, the drive gives a signal for an external system or control wiring.

Applications	Purpose	Related Parameters
General application	Provide a signal for operation status	Pr.03.00

Output Signal at Desired Frequency

When the drive's output frequency reaches the desired frequency, it gives a signal for an external system or control wiring.

Applications	Purpose	Related Parameters
General application	Provide a signal for operation status	Pr.03.00-03.02

Output Signal for Base Block

When the drive executes a Base Block, it gives a signal for an external system or control wiring.

Applications	Purpose	Related Parameters
General application	Provide a signal for operation	Pr.03.00
	status	

Overheating Warning for IGBT or Heat Sink

When the heat sink overheats, it gives a signal for an external system or control wiring.

Applications	Purpose	Related Parameters
General application	Safety measure	Pr.03.00

4-3 Description of Parameter Settings

00 User Parameters

✓ You can set this parameter during operation.

00.00 AC Motor Drive Identity Code

Default: #.#

Settings Read only

00.01 AC Motor Drive Rated Current Display

Default: #.#

Settings Read only

- Pr.00.00 displays the AC motor drive identity code. The identity code includes the drive's capacity, rated current, rated voltage and the maximum carrier frequency. Use the following specification table to check if the AC motor drive is correct.
- Pr.00.01 indicates the drive's rated output current. You can use it to check if the AC motor drive is correct.

Table for capacity, identity code and rated current:

230V Models								
Power (kW)	0.2	0.4	0.75	1.5	2.2			
Power (HP)	0.25	0.5	1.0	2.0	3.0			
Identity Code	0	2	4	6	8			
Rated current	1.6	2.5	4.2	7.5	11.0			
Carrier Frequency	12 kHz							

460V Models									
Power (kW)	0.4	0.75	1.5	2.2	4.0	5.5			
Power (HP)	0.5	1.0	2.0	3.0	5.5	7.5			
Identity Code	3	5	7	9	11	13			
Rated current	1.5	2.5	4.2	5.5	9.0	13			
Carrier Frequency	12 kHz								

00.02 Parameter Reset

Default: 0

Settings 0:

- 0: Parameter can be read/written
- 1: All parameters are read only
- 7: Keypad and frequency setting knob locked
- 8: Keypad lock
- 9: Reset all parameters to defaults (50 Hz, 230V/400V or 220V/380V depends on Pr.00.12)
- 10: Reset all parameters to defaults (60 Hz, 220V/440V)
- 9 or 10: Reset all parameters to defaults when the parameters settings are abnormal.
- 9: Resets all parameters to defaults for 50 Hz; the base voltage depends on the setting for Pr.00.12.
- 1: All parameters are read-only and cannot be changed. Err displays when you enter any input. To write all parameters, set Pr.00.02 = 0.

- 7: Long press the ENTER key for 5 sec. to lock the keypad and setting knob. When the frequency command source is the keypad potentiometer (Pr.02.00 = 4), set Pr.00.02 = 7 after setting the required frequency command, then the keypad potentiometer does not change the drive's frequency command.
- 8: Long press the ENTER key for 5 sec. to lock the keypad. Long press ENTER key for 5 sec. again to unlock the keypad.

Default: 0

Settings

0: F (frequency command)

1: H (output frequency)

2: A (output current)

3: U (user-defined)

4: FWD/REV command

- Determines the start-up display page after power is applied to the drive.
- Gets into the self-check state first when the drive starts-up, after displays "Pon" and flashes for 5 sec., the drive turns to start-up page.

O0.04 Content of Multi-function Display (User-Defined)

Default: 0

8 : : : : : :

Settings

- 0: Display the content of user-defined unit
- 1: Display counter value (c)
- 2: Display the status of multi-function input terminal (d)

For example

Only MI1 terminal activates:

Only MI2 terminal activates:

MI2, MI3 and MI4 operate at the same time: By analogy, MI1–MI4 are displayed in order from left to right

- 3: Display the drive's DC bus voltage (u)
- 4: Display the drive's output voltage (E)
- 5: Display PID analog feedback signal (b)
- 6: Display the drive's power factor angle (n)
- 7: Display the drive's output power (P)
- 8: Display the setting value and the feedback of PID control (P)
- 9: Display AVI analog input terminal signal (V) (I)
- 10: Display ACI analog input terminal signal (mA/V) (i)
- 11: Display IGBT temperature (°C) (h)
- When Pr.00.03 is set to 3, use Pr.00.04 to select the displayed content as needed.
- When Pr.00.04 = 5, the displayed PID feedback value is the percentage (%) of the terminal measurement range.



Target value setting display

Feedback physical quantity

In the flow control occasions such as constant pressure water pumps using PID control, set

		`	shown in the figure above). The displayed val	
	· ·	•	f PID target value; on the right of ":" shows the	e sensor output value (0–10V/
			onding to the actual physical quantity.	for the characters
			o set the target value; and Pr.10.18 to set the	
		•	ayed target value directly correspond to phys	·
	tempera	ature, flow,	etc., you also need to set Pr.00.13 and Pr.00.	14 at the same time.
×	00.05	User-De	fined Coefficient K	
				Default: 1.0
		Settings	0.1-160.0 (unit: 0.1)	
	Determ	ines the mi	ultiplying factor (K) for the user-defined unit.	User-defined unit (U) = Output
	frequen	cy (H) × us	e-defined coefficient (K) (Pr.00.05)	
	00.06	Software	e Version	
				Default: #.#
		Settings	Read only	
	00.07	Software	e Version (Date)	
				Default: Read only
		Settings	Read only	
	Display	s the currer	nt drive software version by date.	
	80.00	Paramet	ter Protection Password Input	
				Default: 0
		Settings	0–9999 (unit: 1)	
	□ 0–2: the	number of	password attempts allowed	
	When F	Pr.00.09 has	s set the parameter protection password, ente	r the set password in Pr.00.09 to
	unlock	the protecti	on and to make changes to the parameter.	ou are limited to a maximum of
	three at	tempts. Afte	er three consecutive failed attempts, a blinking	"codE" appears. You must restart
	the AC	motor drive	e before trying again to enter the correct pas	sword. To avoid problems in the
	future, k	oe sure to w	rite down the password after you set this para	meter. If you forget the password,
	send ba	ack to the fa	actory to decode.	
	00.09	Paramet	er Protection Password Setting	
				Default: 0
		Settings	0–9999 (unit: 1)	
		• .	ssword, long press the ENTER key for more	han 5 seconds to enable the
	passwo			
	•	<u>-</u>	otection or password is entered correctly (Pr.0	,
	·-		or setting the password protection. Password	•
	•		password, the value of Pr.00-08 is 1, which	·
	activate	d. On the c	contrary. Pr.00.08 = 0 means no password pro	tection. You can set and change

Pr.00.03 = 3 and Pr.00.04 = 8. When the drive reboots after powered off, the start-up screen

all parameters, including Pr.00.09. At this time, if you want to change any of the parameter settings, you must enter the correct password in Pr.00.08 to deactivate the password temporarily, and this

would make Pr.00.09 become 0.

NOTE:

If you set Pr.00.09 to 0, you deactivate the password protection function. There will be no password protection when you reboot the drive. On the contrary, when Pr.00.09 is not set to 00, the password protection is activated permanently, and is always reactivated after you reboot the motor drive. At this time, if you want to change any of the parameter settings, you must enter the correct password in Pr.00.08 to deactivate the password temporarily, and then you can set all parameters.


Pr.00-07 and Pr.00-08 are used to prevent personnel from setting other parameters by accident.

Step 1: Enter the original password in Pr.00.09 again (or you can set a new password; be sure to record it).

Step 2: Reboot the drive to enable the password protection.

Step 3: Enter any value that is not the password in Pr.00.08). (Pr.00.08 displays End regardless of whether the password is entered correctly.)

Password Decode Flow Chart

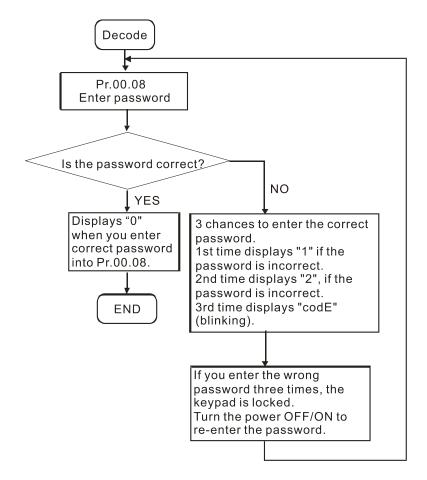

Instruction for Pr.00.02 = 8, Pr.00.08 and Pr.00.09 password usage

Protection		Protection Effort	Notes for Unlock/ Decoding
Setting 1	Password lock only Use Pr.00.09 to set protection password (1–4 digits)	 (1) Pr.00.09 displays 01 after the password is set successfully (this parameter tells whether the parameter is set). (2) Enter the password to unlock by Pr.00.08, but is shows the times of incorrect password input and displays CodE error when you enter the wrong password for three times. Reboot the motor drive to re-enter the correct password. (3) Check other parameter values that are displayed as 0.00 (according to the original decimal places of the parameters), which protects the customer's parameters. (4) You can still modify the frequency command (F) and PID target value. (5) It is not available to modify other parameters except points 2 and 4 mentioned above. 	(1) Set Pr.00.08 to the same password as Pr.00.09 to deactivate the password. (2) After deactivate the password, if you need to use the protection function, reset Pr.00.09. (3) If you forget the password in Pr.00.09, contact Delta for customer service.
Setting 2	Keypad lock only Set Pr.00.02 = 8 to lock the keypad	 (1) Parameters can still be checked after keypad locked. (2) You cannot change any parameters including frequency command (F) after keypad locked. 	(1) Long press the ENTER key for 5 seconds to unlock the keypad, and get back to Frequency command page, and then you can change parameters. If Pr.00.02 is still set to 8, the keypad is still locked when you reboot the motor drive. (2) To deactivate keypad lock, long press the ENTER key for 5 seconds, then set Pr.00.02 to 0.

Protection		Protection Effort	Notes for Unlock/ Decoding
			(1) If you need to
	Combination setting		change the process
	(1) Set Pr.00.02 = 8 to lock		controlling
	the keypad first		parameters such as
	(2) Long press the ENTER		frequency command
	key for 5 seconds, set		(F) or PID target
	Pr.00.02 = 8 to unlock the		value, long press the
	keypad and then set	(1) Check other parameter values that	ENTER key for 5
	password in Pr.00.09. After	are displayed as 0.00 (according to	seconds to modify
	the password is set, check	the original decimal places of the	these parameters.
Setting 3	Pr.00.02 displayed as 00	parameters), which protects the	But other parameters
Setting 5	(indicating that the	customer's parameters.	are still displayed as
	parameter is encrypted).	(2) You cannot change all parameters,	0.00 (according to
	(3) Reboot the drive to finish	including frequency command (F)	the original decimal
	the combination setting. If	and PID target value.	places of the
	you only finish the setting		parameter) and
	of Step 2, the keypad is		cannot be modified.
	still not locked even though		(2) To change other
	you cannot check		parameters except
	parameters through the		the above mentioned
	keypad.		in point 1, set
			Pr.00.08 again.

00.10 Control Method

Default: 0

Settings 0: V/F voltage frequency control

1: Vector control

- Determines the control mode of the AC motor drive.
- U/F voltage/ frequency control:

The V/F control is a constant value control mode. It stops the main problem of frequency decreasing and magnetic field increasing. However, the magnetic field is not constant, an insufficiency of motor's torque in a weaken low frequency magnetic field may happen as the frequency decreases. Set Pr.07.02 (Torque Compensation) properly to compensate the torque for the best operating performance.

- Applications: water pumps, conveyors, compressors and treadmills.
- □ Vector control:

Eliminate the related effect between the filed current vector and the armature flux. It auto-tunes the torque compensation and slip compensation to increase the dynamic response of the motor drive.

Applications: textile equipment, printing equipment, crane equipment and drilling machinery.

Related parameters: Pr.07.02 Torque Compensation

00.11 Reserved
00.12 50 Hz Power System Base Voltage Setting
Default: 0
Settings 0: 230V/ 400V
1: 220V/ 380V
Determines the base voltage initial value when the motor drive resets with 50 Hz power system.
00.13 User-Defined Value (corresponds to Max. operation frequency Pr.01.00)
Default: 0
Settings 0-9999
☐ Corresponds to the maximum operation frequency (Pr.01.00)
When Pr.00.13 is not set to zero, "F" automatically disappears in the frequency setting page, and
the displayed last digit blinks. The Up/down key, multi-step speed and JOG function on the keypad
all changes ranges according to Pr.00.13.
When Pr.00.13 is not set to zero, and the frequency source is communication, use Pr.02.18 to
change the frequency command instead of using communication address 2001H.
00.14 Decimal Places for User-Defined Value
Default: 0
Settings 0–3
Sets the digital places for Pr.00.13.
For example: if the corresponding physical quantity such as pressure is to be set as 10.0 bar, you
need to set Pr.00.13 to 100, and set Pr.00.14 to 1. Pressure conversion relation: 0.1 Mpa = 1 bar
= 1 kgf-cm ²
00.15 Output Phase Order Selection
Default: 0
Settings 0: Standard
1: Reverse the operation direction
Without changing the output wiring of the motor drive, the actual running direction of the motor
can be changed from forward to reverse and reverse to forward through this parameter, and the
indicator signals (FWD, REV) on the keypad remain unchanged.
When using this parameter with Pr.02.04 (Motor Direction Control), the output logic is to first judge
whether there is a prohibited direction, and then whether to output the reverse direction. If a certain
direction is prohibited, no action will be taken.
00.16 Prohibit Write EEPROM Function
Default: 0
Settings 0: Prohibit write EEPROM
1: Enable, control via MI terminal
2: Enable, MI terminal is invalid
2: Enable, MI terminal is invalid

01 Basic Parameters

✓ You can set this parameter during operation.

01.00 Max. Operation Frequency

Default: 60.00 / 50.00

Settings 50.00-400.00 Hz

01.01 Motor Rated Frequency

Default: 60.00 / 50.00

380.0/400.0

Setting 0.10-400.00 Hz

Set this parameter according to the rated voltage on the motor nameplate.

460V models: 0.1-510.0 V

01.02 Motor Rated Voltage

Default:

Settings 230V models: 0.1–255.0 V 220.0/ 230.0

The default of motor rated voltage is different according to different models of 230V/ 460V and

Pr.00.02 setting 9 or 10. Refer to the following table.

	(Pr.00-12)	(Pr.00-02)	Pr.01-01	Pr.01-02
	0	9	50.00 (Hz)	230.0 V
230V Models		10	60.00 (Hz)	220.0 V
230 V IVIOUEIS	1	9	50.00 (Hz)	220.0 V
		10	60.00 (Hz)	220.0 V
	0	9	50.00 (Hz)	400.0 V
460V Models	U	10	60.00 (Hz)	400.0 V
460 V Wodels	eis 1	9	50.00 (Hz)	380.0 V
		10	60.00 (Hz)	400.0 V

Sets the maximum output voltage. This parameter must be set smaller than or equal to the rated voltage on the motor nameplate.

01.03 Mid-Point Frequency Setting

Default: 1.5

Settings 0.10-400.0 Hz

Sets the Mid-point Frequency of any V/F curve. This setting determines the V/F ratio between the Minimum Frequency and the Mid-point Frequency.

01.04 Mid-Point Voltage Setting

Default: 10.0 / 20.0

Settings 230V models: 0.1–255.0 V

460V models: 0.1-510.0 V

- For 230V models, the default is 10.0 V; for 460V models, the default is 20.0 V.
- Sets the Mid-point Voltage of any V/F curve. This setting determines the V/F ratio between the Minimum Frequency and the Mid-point Frequency.

01.05 Min. Output Frequency Setting (Hz)

Default: 1.5

Settings 0.10-400.0 Hz

Sets the minimum start-up frequency of V/F curve.

01.06 Min. Output Voltage Setting

Default: 10.0 / 20.0

Settings 230V models: 0.1–255.0 V 460V models: 0.1–510.0 V


- For 230V models, the default is 10.0 V; for 460V models, the default is 20.0 V.
- Sets the minimum start-up voltage of V/F curve.
- The settings for Pr.01.01–Pr.01.06 must meet the condition of Pr.01.02 \geq Pr.01.04 \geq Pr.01.06 and Pr.01.01 \geq Pr.01.03 \geq Pr.01.05.

01.07 Output Frequency Upper Limit

Default: 110.0

Settings 0.1-120.0%

- This parameter must be equal to or greater than the Output Frequency Lower Limit (Pr.01.08). The Maximum Output Frequency (Pr.01.00) is equal to 100%.
- The Output Frequency Upper Limit = (01.00 × 01.07) ÷ 100

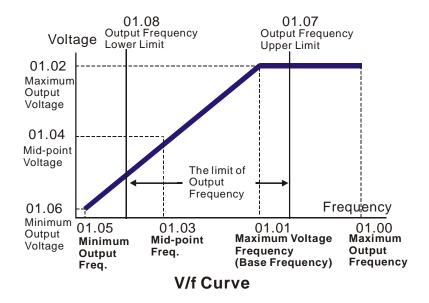

01.08 Output Frequency Lower Limit

Default: 0.0

Settings 0.0-100.0%

- Calculation: The Output Frequency Lower Limit = (01.00 × 01.08) ÷ 100
- Use the output frequency upper and lower limit settings to prevent operator misuse, overheating caused by the motor's operating at a too low frequency, or mechanical wear due to a too high speed.
- If the output frequency upper limit setting is 50 Hz and the frequency setting is 60 Hz, the maximum output frequency is 50 Hz.
- If the output frequency lower limit setting is 10 Hz and the minimum output frequency setting (Pr.01-07) is 1.5 Hz, then the drive operates at 10 Hz when the Frequency command is higher than Pr.01-07 but lower than 10 Hz. If the Frequency command is lower than Pr.01-05, the drive is in ready status without output.
- If the frequency output upper limit is 60 Hz and the frequency setting is also 60 Hz, the maximum

output frequency will not be larger than 60 Hz even executing slip compensation. If the output frequency must be larger than 60 Hz, adjust the output frequency upper limit or increase the maximum operation frequency.

×	01.09	Acceleration Time 1
×	01.10	Deceleration Time 1
×	01.11	Acceleration Time 2
×	01.12	Deceleration Time 2

Default: 10.0

Settings 0.1–600.0 sec./ 0.01–600.00 sec.


You can switch the acceleration/ deceleration time 1 or 2 by setting the external terminal MI2–MI4 to 7.

01.19 Time Unit for Acceleration and Deceleration

Default: 0

Settings 0: Unit 0.1 sec. 1: Unit 0.01 sec.

- The acceleration time determines the time required for the AC motor drive to ramp from 0.00 Hz to the maximum operation frequency (Pr.01.00). The deceleration time determines the time required for the AC motor drive to decelerate from the maximum operation frequency (Pr.01.00) down to 0 Hz.
- Select the Acceleration/Deceleration Time 1, 2, 3, 4 with the multi-function input terminal settings. The defaults are Acceleration Time 1 and Deceleration Time 1.
- The setting for Pr.01.19 changes the time unit of Pr.01.09–Pr.01.12, Pr.01.13, and Pr.01.14, further changing the setting range of the acceleration / deceleration time.

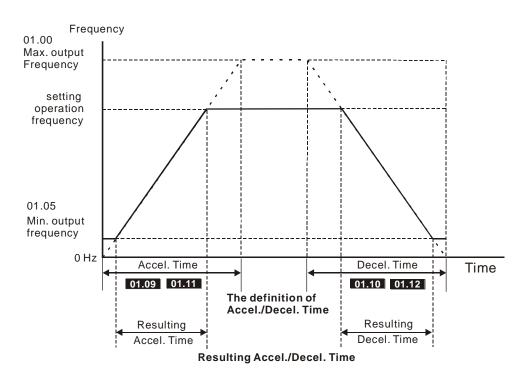

V 01.13 JOG Acceleration Time

Default: 1.00

Settings 0.1-600.0 sec./ 0.01-600.00 sec.

N 01.14 JOG Deceleration Time

Default: 1.00


Settings 0.1-600.0 sec./ 0.01-600.00 sec.

01.15 JOG Frequency Setting

Default: 6.00

Settings 0.10-400.0 Hz

- Use only external terminal JOG (setting MI2, MI3 or MI4 to 8). When the JOG command is ON, the AC motor drive accelerates from the Minimum Output Frequency (Pr.01.05) to the JOG Frequency (Pr.01.15). When the JOG command is OFF, the AC motor drive decelerates from the JOG frequency to stop. The acceleration/ deceleration time is set by the JOG Acceleration/ Deceleration time (Pr.01.13, Pr.01.14).
- The drive must be stopped before using the JOG command. During JOG operation, other operation commands are not accepted, except FORWARD/REVERSE commands.

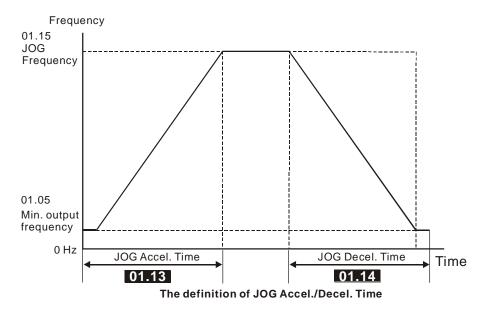

01.16 Auto-Acceleration / Auto-Deceleration Setting

Default: 0

Settings

- 0: Linear acceleration and deceleration
- 1: Auto-acceleration and linear deceleration
- Linear acceleration and auto-deceleration
- 3: Auto-acceleration and auto-deceleration (set by loads)
- 4: Auto-acceleration and auto-deceleration (set by acceleration/ deceleration time setting)
- With auto-acceleration and auto-deceleration, it is possible to reduce vibration and shocks during starting and stopping the load; the drive auto-detects the load torque and automatically accelerates from the fastest acceleration time and smoothest start-up current to the setting frequency. During deceleration, the drive automatically determines the loaded regenerative energy to steadily and smoothly stop the motor in the fastest deceleration time. When this

parameter is set to 4, the actual acceleration/deceleration time vary with the setting for Pr.01.09–Pr.01.12. Therefore, the actual acceleration/ deceleration time are equal to or greater than Pr.01.09–Pr.01.12.

Using auto-acceleration and auto-deceleration can avoid complicated adjustment procedures. It does not stall during acceleration and does not need a brake resistor during deceleration to stop. It can also improve operation efficiency and save energy.

01.17 S-Curve Acceleration Time Setting

Default: 0.0 / 0.00

Settings 0.0-10.0 sec./ 0.00-10.00 sec.

01.18 S-Curve Deceleration Time Setting


Default: 0.0 / 0.00

Settings 0.0–10.0 sec./ 0.00–10.00 sec.

- Using an S-curve gives the smoothest transition between speed changes. The acceleration and deceleration curves can be adjusted to different degrees of S-acceleration and S-deceleration curves by setting Pr.01.17–01.18. When enabled, the drive produces a different acceleration and deceleration curve according to the acceleration and deceleration time. Set these parameters to 0.0 for linear acceleration/ deceleration.
- The following diagram shows that the original setting of the Acceleration and Deceleration Time is only for reference when you enable the S-curve. The acceleration/ deceleration time become longer as the setting value increases. Pr.01.17 must be smaller than Pr.01.09 or Pr.01.11; Pr.01.18 must be smaller than Pr.01.10 or Pr.01.12. Otherwise, the S-curve is invalid.

The total acceleration time = Pr.01.09 + Pr.01.17 or Pr.01.11 + Pr.01.17

The total deceleration time = Pr.01.10 + Pr.01.18 or Pr.01.12 + Pr.01.18

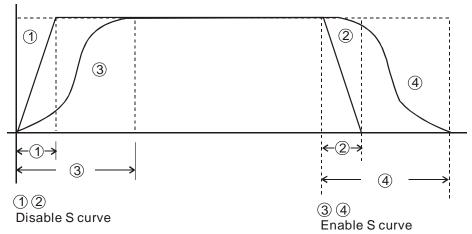

Acceleration/deceleration Characteristics

Default: 0.00


Settings 0.00-400.00 Hz

01.21 Simple Positioning Stop Frequency 1

Default: 5.00

Settings 0.00-400.00 Hz

×	01.22 Simple Positioning Stop Frequency 2
	Default: 10.00
	Settings 0.00-400.0 Hz
×	01.23 Simple Positioning Stop Frequency 3
	Default: 20.00
	Settings 0.00–400.00 Hz
×	O1.24 Simple Positioning Stop Frequency 4
	Default: 30.00
	Settings 0.00–400.00 Hz
N	O1.25 Simple Positioning Stop Frequency 5
	Default: 40.00
	Settings 0.00–400.00 Hz
N	01.26 Simple Positioning Stop Frequency 6
	Default: 50.00
,	Settings 0.00–400.00 Hz
×	O1.27 Simple Positioning Stop Frequency 7
	Default: 60.00
	Settings 0.00–400.00 Hz
	The state of the De O4 O0 De O4 O7 week fall and the state of the land
	The setting for Pr.01.20–Pr.01.27 must follow the condition below:
	\square Pr.01.20 \leq Pr.01.21 \leq Pr.01.22 \leq Pr.01.23 \leq Pr.01.24 \leq Pr.01.25 \leq Pr.01.26 \leq Pr.01.27
	Pr.01.20 \leq Pr.01.21 \leq Pr.01.22 \leq Pr.01.23 \leq Pr.01.24 \leq Pr.01.25 \leq Pr.01.26 \leq Pr.01.27 If any two of the parameters (between Pr.01.20–Pr.01.27) have the same stop frequency, set their
	\square Pr.01.20 \leq Pr.01.21 \leq Pr.01.22 \leq Pr.01.23 \leq Pr.01.24 \leq Pr.01.25 \leq Pr.01.26 \leq Pr.01.27
<i>N</i>	Pr.01.20 \leq Pr.01.21 \leq Pr.01.22 \leq Pr.01.23 \leq Pr.01.24 \leq Pr.01.25 \leq Pr.01.26 \leq Pr.01.27 If any two of the parameters (between Pr.01.20–Pr.01.27) have the same stop frequency, set their
<i>N N</i>	 □ Pr.01.20 ≤ Pr.01.21 ≤ Pr.01.22 ≤ Pr.01.23 ≤ Pr.01.24 ≤ Pr.01.25 ≤ Pr.01.26 ≤ Pr.01.27 □ If any two of the parameters (between Pr.01.20–Pr.01.27) have the same stop frequency, set their Delay Time of Simple Positioning Stop to the same values.
<i>N N N</i>	 □ Pr.01.20 ≤ Pr.01.21 ≤ Pr.01.22 ≤ Pr.01.23 ≤ Pr.01.24 ≤ Pr.01.25 ≤ Pr.01.26 ≤ Pr.01.27 □ If any two of the parameters (between Pr.01.20–Pr.01.27) have the same stop frequency, set their Delay Time of Simple Positioning Stop to the same values. O1.28 Simple Positioning Stop Delay Time 0
<i>X X X X</i>	 □ Pr.01.20 ≤ Pr.01.21 ≤ Pr.01.22 ≤ Pr.01.23 ≤ Pr.01.24 ≤ Pr.01.25 ≤ Pr.01.26 ≤ Pr.01.27 □ If any two of the parameters (between Pr.01.20–Pr.01.27) have the same stop frequency, set their Delay Time of Simple Positioning Stop to the same values. □ 01.28 Simple Positioning Stop Delay Time 0 □ 01.29 Simple Positioning Stop Delay Time 1
	 □ Pr.01.20 ≤ Pr.01.21 ≤ Pr.01.22 ≤ Pr.01.23 ≤ Pr.01.24 ≤ Pr.01.25 ≤ Pr.01.26 ≤ Pr.01.27 □ If any two of the parameters (between Pr.01.20–Pr.01.27) have the same stop frequency, set their Delay Time of Simple Positioning Stop to the same values. □ 01.28 Simple Positioning Stop Delay Time 0 □ 01.29 Simple Positioning Stop Delay Time 1 □ 01.30 Simple Positioning Stop Delay Time 2
×	 □ Pr.01.20 ≤ Pr.01.21 ≤ Pr.01.22 ≤ Pr.01.23 ≤ Pr.01.24 ≤ Pr.01.25 ≤ Pr.01.26 ≤ Pr.01.27 □ If any two of the parameters (between Pr.01.20–Pr.01.27) have the same stop frequency, set their Delay Time of Simple Positioning Stop to the same values. □ 01.28 Simple Positioning Stop Delay Time 0 □ 01.29 Simple Positioning Stop Delay Time 1 □ 01.30 Simple Positioning Stop Delay Time 2 □ 01.31 Simple Positioning Stop Delay Time 3
N	 □ Pr.01.20 ≤ Pr.01.21 ≤ Pr.01.22 ≤ Pr.01.23 ≤ Pr.01.24 ≤ Pr.01.25 ≤ Pr.01.26 ≤ Pr.01.27 □ If any two of the parameters (between Pr.01.20–Pr.01.27) have the same stop frequency, set their Delay Time of Simple Positioning Stop to the same values. □ 01.28 Simple Positioning Stop Delay Time 0 □ 01.29 Simple Positioning Stop Delay Time 1 □ 01.30 Simple Positioning Stop Delay Time 2 □ 01.31 Simple Positioning Stop Delay Time 3 □ 01.32 Simple Positioning Stop Delay Time 4
N N	 □ Pr.01.20 ≤ Pr.01.21 ≤ Pr.01.22 ≤ Pr.01.23 ≤ Pr.01.24 ≤ Pr.01.25 ≤ Pr.01.26 ≤ Pr.01.27 □ If any two of the parameters (between Pr.01.20–Pr.01.27) have the same stop frequency, set their Delay Time of Simple Positioning Stop to the same values. 01.28 Simple Positioning Stop Delay Time 0 01.29 Simple Positioning Stop Delay Time 1 01.30 Simple Positioning Stop Delay Time 2 01.31 Simple Positioning Stop Delay Time 3 01.32 Simple Positioning Stop Delay Time 4 01.33 Simple Positioning Stop Delay Time 5
N N	 Pr.01.20 ≤ Pr.01.21 ≤ Pr.01.22 ≤ Pr.01.23 ≤ Pr.01.24 ≤ Pr.01.25 ≤ Pr.01.26 ≤ Pr.01.27 If any two of the parameters (between Pr.01.20–Pr.01.27) have the same stop frequency, set their Delay Time of Simple Positioning Stop to the same values. O1.28 Simple Positioning Stop Delay Time 0 O1.29 Simple Positioning Stop Delay Time 1 O1.30 Simple Positioning Stop Delay Time 2 O1.31 Simple Positioning Stop Delay Time 3 O1.32 Simple Positioning Stop Delay Time 4 O1.33 Simple Positioning Stop Delay Time 5 O1.34 Simple Positioning Stop Delay Time 6
N N	 Pr.01.20 ≤ Pr.01.21 ≤ Pr.01.22 ≤ Pr.01.23 ≤ Pr.01.24 ≤ Pr.01.25 ≤ Pr.01.26 ≤ Pr.01.27 If any two of the parameters (between Pr.01.20–Pr.01.27) have the same stop frequency, set their Delay Time of Simple Positioning Stop to the same values. O1.28 Simple Positioning Stop Delay Time 0 O1.29 Simple Positioning Stop Delay Time 1 O1.30 Simple Positioning Stop Delay Time 2 O1.31 Simple Positioning Stop Delay Time 3 O1.32 Simple Positioning Stop Delay Time 4 O1.33 Simple Positioning Stop Delay Time 5 O1.34 Simple Positioning Stop Delay Time 6 O1.35 Simple Positioning Stop Delay Time 7
N N	 Pr.01.20 ≤ Pr.01.21 ≤ Pr.01.22 ≤ Pr.01.23 ≤ Pr.01.24 ≤ Pr.01.25 ≤ Pr.01.26 ≤ Pr.01.27 If any two of the parameters (between Pr.01.20–Pr.01.27) have the same stop frequency, set their Delay Time of Simple Positioning Stop to the same values. O1.28 Simple Positioning Stop Delay Time 0 O1.29 Simple Positioning Stop Delay Time 1 O1.30 Simple Positioning Stop Delay Time 2 O1.31 Simple Positioning Stop Delay Time 3 O1.32 Simple Positioning Stop Delay Time 4 O1.33 Simple Positioning Stop Delay Time 5 O1.34 Simple Positioning Stop Delay Time 6 O1.35 Simple Positioning Stop Delay Time 7
N N	 Pr.01.20 ≤ Pr.01.21 ≤ Pr.01.22 ≤ Pr.01.23 ≤ Pr.01.24 ≤ Pr.01.25 ≤ Pr.01.26 ≤ Pr.01.27 If any two of the parameters (between Pr.01.20–Pr.01.27) have the same stop frequency, set their Delay Time of Simple Positioning Stop to the same values. O1.28 Simple Positioning Stop Delay Time 0 O1.29 Simple Positioning Stop Delay Time 1 O1.30 Simple Positioning Stop Delay Time 2 O1.31 Simple Positioning Stop Delay Time 3 O1.32 Simple Positioning Stop Delay Time 4 O1.33 Simple Positioning Stop Delay Time 5 O1.34 Simple Positioning Stop Delay Time 6 O1.35 Simple Positioning Stop Delay Time 7 Default: 0.00 Settings 0.00–600.00 sec.
N N	 □ Pr.01.20 ≤ Pr.01.21 ≤ Pr.01.22 ≤ Pr.01.23 ≤ Pr.01.24 ≤ Pr.01.25 ≤ Pr.01.26 ≤ Pr.01.27 □ If any two of the parameters (between Pr.01.20–Pr.01.27) have the same stop frequency, set their Delay Time of Simple Positioning Stop to the same values. □ 01.28 Simple Positioning Stop Delay Time 0 □ 01.29 Simple Positioning Stop Delay Time 1 □ 01.30 Simple Positioning Stop Delay Time 2 □ 01.31 Simple Positioning Stop Delay Time 3 □ 01.32 Simple Positioning Stop Delay Time 4 □ 01.33 Simple Positioning Stop Delay Time 5 □ 01.34 Simple Positioning Stop Delay Time 6 □ 01.35 Simple Positioning Stop Delay Time 7 □ Default: 0.00 Settings
N N	 □ Pr.01.20 ≤ Pr.01.21 ≤ Pr.01.22 ≤ Pr.01.23 ≤ Pr.01.25 ≤ Pr.01.25 ≤ Pr.01.26 ≤ Pr.01.27 □ If any two of the parameters (between Pr.01.20–Pr.01.27) have the same stop frequency, set their Delay Time of Simple Positioning Stop to the same values. □ 01.28 Simple Positioning Stop Delay Time 0 □ 01.29 Simple Positioning Stop Delay Time 1 □ 01.30 Simple Positioning Stop Delay Time 2 □ 01.31 Simple Positioning Stop Delay Time 3 □ 01.32 Simple Positioning Stop Delay Time 4 □ 01.33 Simple Positioning Stop Delay Time 5 □ 01.34 Simple Positioning Stop Delay Time 6 □ 01.35 Simple Positioning Stop Delay Time 7 □ Default: 0.00 □ Settings 0.00–600.00 sec. □ Valid only when Pr.02.02 Motor Stop Method is set to 4: simple positioning stop. □ The settings 0–7 for Pr.01.20–Pr.01.27 must work with the settings 0–7 for Pr.01.28–Pr.01.35 and correspond to each other. For example, Pr.01.20 must work with Pr.01.28. □ The function of Pr.01.28–Pr.01.35 is simple positioning. Speed starts to decelerate after the time
N N	 □ Pr.01.20 ≤ Pr.01.21 ≤ Pr.01.22 ≤ Pr.01.23 ≤ Pr.01.24 ≤ Pr.01.25 ≤ Pr.01.26 ≤ Pr.01.27 □ If any two of the parameters (between Pr.01.20–Pr.01.27) have the same stop frequency, set their Delay Time of Simple Positioning Stop to the same values. □ 01.28 Simple Positioning Stop Delay Time 0 □ 01.29 Simple Positioning Stop Delay Time 1 □ 01.30 Simple Positioning Stop Delay Time 2 □ 01.31 Simple Positioning Stop Delay Time 3 □ 01.32 Simple Positioning Stop Delay Time 4 □ 01.33 Simple Positioning Stop Delay Time 5 □ 01.34 Simple Positioning Stop Delay Time 6 □ 01.35 Simple Positioning Stop Delay Time 7 □ Default: 0.00 Settings □.00–600.00 sec. □ Valid only when Pr.02.02 Motor Stop Method is set to 4: simple positioning stop. □ The settings 0–7 for Pr.01.20–Pr.01.27 must work with the settings 0–7 for Pr.01.28–Pr.01.35 and correspond to each other. For example, Pr.01.20 must work with Pr.01.28. □ The function of Pr.01.28–Pr.01.35 is simple positioning. Speed starts to decelerate after the time set at Pr.01.28–Pr.01.35 elapses. The accuracy of positioning is self-assessed by user.
N N	 □ Pr.01.20 ≤ Pr.01.21 ≤ Pr.01.22 ≤ Pr.01.23 ≤ Pr.01.24 ≤ Pr.01.25 ≤ Pr.01.26 ≤ Pr.01.27 □ If any two of the parameters (between Pr.01.20–Pr.01.27) have the same stop frequency, set their Delay Time of Simple Positioning Stop to the same values. □ 01.28 Simple Positioning Stop Delay Time 0 □ 01.29 Simple Positioning Stop Delay Time 1 □ 01.30 Simple Positioning Stop Delay Time 2 □ 01.31 Simple Positioning Stop Delay Time 3 □ 01.32 Simple Positioning Stop Delay Time 4 □ 01.33 Simple Positioning Stop Delay Time 5 □ 01.34 Simple Positioning Stop Delay Time 6 □ 01.35 Simple Positioning Stop Delay Time 7 □ Default: 0.00 Settings 0.00–600.00 sec. □ Valid only when Pr.02.02 Motor Stop Method is set to 4: simple positioning stop. □ The settings 0–7 for Pr.01.20–Pr.01.27 must work with the settings 0–7 for Pr.01.28–Pr.01.35 and correspond to each other. For example, Pr.01.20 must work with Pr.01.28. □ The function of Pr.01.28–Pr.01.35 is simple positioning. Speed starts to decelerate after the time set at Pr.01.28–Pr.01.35 elapses. The accuracy of positioning is self-assessed by user.
N N	 □ Pr.01.20 ≤ Pr.01.21 ≤ Pr.01.22 ≤ Pr.01.23 ≤ Pr.01.25 ≤ Pr.01.25 ≤ Pr.01.26 ≤ Pr.01.27 □ If any two of the parameters (between Pr.01.20–Pr.01.27) have the same stop frequency, set their Delay Time of Simple Positioning Stop to the same values. □ 01.28 Simple Positioning Stop Delay Time 0 □ 01.29 Simple Positioning Stop Delay Time 1 □ 01.30 Simple Positioning Stop Delay Time 2 □ 01.31 Simple Positioning Stop Delay Time 3 □ 01.32 Simple Positioning Stop Delay Time 4 □ 01.33 Simple Positioning Stop Delay Time 5 □ 01.34 Simple Positioning Stop Delay Time 6 □ 01.35 Simple Positioning Stop Delay Time 7 □ Default: 0.00 □ Settings 0.00–600.00 sec. □ Valid only when Pr.02.02 Motor Stop Method is set to 4: simple positioning stop. □ The settings 0–7 for Pr.01.20–Pr.01.27 must work with the settings 0–7 for Pr.01.28–Pr.01.35 and correspond to each other. For example, Pr.01.20 must work with Pr.01.28. □ The function of Pr.01.28–Pr.01.35 is simple positioning. Speed starts to decelerate after the time

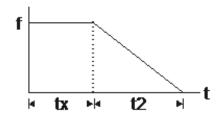

S: operation distance

(revolution)

n: rotation speed

(revolution/second)

t_x: delay time (second)

deceleration time

(second)

n: rotation speed

(revolution/ minute)


p: number of poles in the


motor

f: operation frequency (Hz)

The value of tx in the equation above describes as below.

1.1 When the slope is negative (t1 > t2) 1.2 When the slope is positive (t1 < t2)

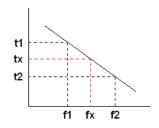

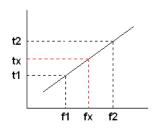


$$\mathbf{t}_{x} = t_{1} + \left(\frac{f_{x} - f_{1}}{f_{2} - f_{1}}\right) \times (t_{2} - t_{1}) = t_{1} + \left(\frac{f_{x} - f_{1}}{10}\right) \times (t_{2} - t_{1})$$

$$\mathbf{t}_{x} = t_{1} + \left(\frac{f_{x} - f_{1}}{f_{2} - f_{1}}\right) \times (t_{2} - t_{1}) = t_{1} + \left(\frac{f_{x} - f_{1}}{10}\right) \times (t_{2} - t_{1})$$

$$\mathbf{t}_{x} = t_{2} - \left(\frac{f_{2} - f_{x}}{f_{2} - f_{1}}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_{2} - t_{1}) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times (t_$$


As shown in the figure below, assume that the radius of the four-pole motor is r and rotation speed is n (rpm).

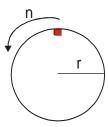

Example 1:

When the motor swivel table rotates at 50 Hz, and Pr.02.02 = 4 (Simple positioning stop; E.F.: Coast to stop), and Pr.01.26 = 50 Hz (Simple Positioning Stop Frequency 6), and its corresponding Pr.01.34 = 2 sec. (Simple Positioning Stop Delay Time 6), then the deceleration time from 50 Hz to 0 Hz is 10 seconds. After executing the stop command, Simple Positioning Stop activates, its rotation speed is $n = 120 \times 50 / 4$ (revolution / minute) = 25 (revolution / second)

The number of revolution of the swivel table = $(25 \times (2 + 12)) / 2 = 175$ (revolutions)

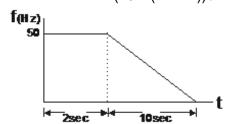

Therefore, the motor's operation distance after executing the stop command = number of revolutions x circumference = 175 x 2 π r. It also means that the swivel table goes back to the top after 175 revolutions.


Example 2:

Assume that the motor swivel table rotates at 1.5 Hz, and Pr.01.22 = 10 Hz [Simple Positioning Stop Frequency 2], and Pr.01.30 = 10 sec. [Simple Positioning Stop Delay Time 2], then the deceleration time from 60 Hz to 0 Hz is 40 seconds.

The delay time at stop for 1.5 Hz is 1.5 second; the deceleration time from 1.5 Hz to 0 Hz is 1 second.

After executing the stop command, Simple Positioning Stop activates, its rotation speed is $n = 120 \times 1.5 / 4$ (revolution / minute) = 1.5/2(revolution / second)

The number of revolution of the swivel table = $(1.5/2 \times (1.5 + 2.5)) \div 2 = 1.5$ (revolutions)

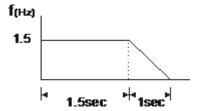

Therefore, the motor's operation distance after executing the stop command = number of revolutions × circumference = $1.5 \times 2 \, \text{mr}$. It also means that the swivel table stops after running 1.5 revolutions.

02 Operation Method Parameters

✓ You can set this parameter during operation.

Default: 0

Settings 0: Digital keypad or external terminals (up/ down function)

1: External terminal AVI analog signal DC 0-10V

2: External terminal ACI analog signal DC 4-20 mA

3: RS-485 communication input

4: Digital keypad potentiometer knob

✓ 02.09 Second Master Frequency Command Source

Default: 0

Settings 0: Digital keypad or external terminals (up/ down function)

1: External terminal AVI analog signal DC 0-10V

2: External terminal ACI analog signal DC 4-20 mA

3: RS-485 communication input

4: Digital keypad potentiometer knob

- Sets the Master Frequency Command Source for the AC motor drive.
- Pr.02.09 is valid only when you set Pr.04.06, Pr.04.08 to 22. When setting 22 is activated, the frequency command source is the setting for Pr.02.09. You can only enable only one of the first master frequency command and second master frequency command sources at one time.
- When using the AVI terminal, pay attention to the ACI / AVI dip switch location on the AC motor drive. If you select ACI, the drive receives 4–20 mA analog current signal; if you select AVI, the drive receives 0–10 V_{DC} analog voltage signal.

O2.01 Operation Command Source

Default: 0

Settings 0: Digital keypad

1: External terminals, STOP key is valid

2: External terminals, STOP key is invalid

3: RS-485 communication, STOP key is valid

4: RS-485 communication, STOP key is invalid

Sets the Operation Command Source for the AC motor drive.

✓ 02.10 First / Second Master Frequency Command Combination

Default: 0

Settings 0: Disable

1: First master frequency command + second master frequency command

2: First master frequency command - second master frequency command

Default: 0

Settings 0: Ramp to stop; E.F.: Coast to stop

1: Coast to stop; E.F.: Coast to stop


2: Ramp to stop; E.F.: Coast to stop

3: Ramp to stop; E.F.: Coast to stop


4: Simple positioning stop; E.F.: Coast to stop

- Determines how the motor is stopped when the AC motor drive receives the Stop command.
 - 1. Ramp to stop: According to the set deceleration time, the AC motor drive decelerates to 0 Hz or the minimum output frequency (Pr.01.05), and then stop.
 - 2. Coast to stop: According to the load inertia, the AC motor drive stops output immediately, and the motor coasts to stop.
 - 3. The motor stop method is usually set depending on the load or the characteristics when the machine stops.
 - (1) Use "ramp to stop" for the safety of personnel or to prevent material from being wasted in applications where the motor must stop immediately after the drive stops. You must set the deceleration time accordingly.
 - (2) If idling is allowed or the load inertia is large, use "coast to stop".

Example uses are blowers, pumps and punching machines.

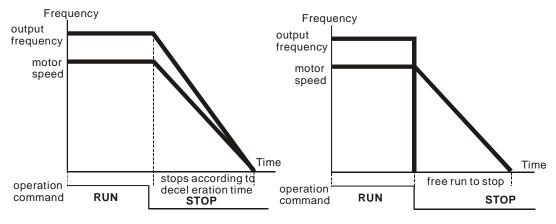

ramp to stop and free run to stop

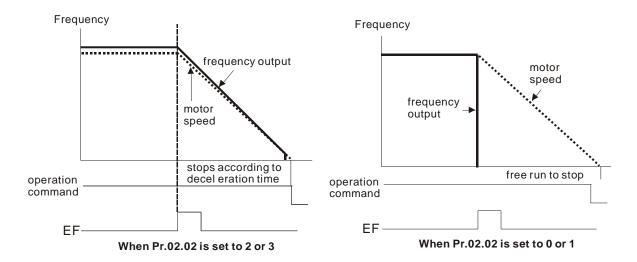

02.03 PWM Carrier Frequency Selection


Default: 8

Settings 2-12 kHz

Determines the PWM carrier frequency for the AC motor drive.


Carrier Frequency	Acoustic Noise	Electromagnetic Noise or leakage current	Heat Dissipation	Current Wave
2kHz	Significant	Minimal ↑	Minimal ↑	Minimal ↑
8kHz				
12kHz	↓ Minimal	↓ Significant	↓ Significant	Significant

- From the table, you see that the PWM carrier frequency has significant influences on the electromagnetic noise, the AC motor drive heat dissipation, and the motor acoustic noise. Therefore, if the surrounding noise is greater than the motor noise, lower the carrier frequency to reduce the temperature rise. Although the motor has quiet operation in the higher carrier frequency, consider the entire wiring and interference.
- With default carrier frequency:
 - (1) Take VFD007EL21W(-1) (need to install cooling fans) as an example, assume that the ambient temperature is 40°C, the drive output current must be controlled within 100% of the rated current. If the ambient temperature is 50°C, the drive output current should be within 80% of the rated current.
 - (2) When model VFD007EL21W(-1) works without cooling fans, assume that the ambient temperature is 40°C, the drive output current must be controlled within 100% of the rated current. If the ambient temperature is 50°C, the drive output current should not exceed 80% of the rated current.

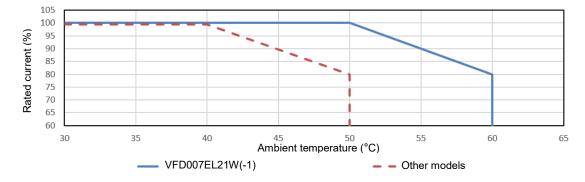

- (3) Take VFD007EL21W(-1) (need to install cooling fans) as an example, assume that the ambient temperature is 40°C and the default carrier frequency is 8 kHz, the drive output current reaches 100% of the rated current. If the carrier frequency is 12 kHz, the drive output current should be controlled within 80% of the rated current.
- (4) When model VFD007EL21W(-1) works without cooling fans, assume that the ambient temperature is 40°C and the default carrier frequency is 8 kHz, the drive output current reaches 100% of the rated current. If the carrier frequency is 12 kHz, the drive output current should be controlled within 80% of the rated current.

- (5) For model VFD055EL43W, when that the ambient temperature is 50°C and the default carrier frequency is 4 kHz, the drive output current reaches 100% of the rated current. If the carrier frequency is 12 kHz, the drive output current should be controlled within 40% of the rated current.
- (6) When the ambient temperature is 25°C, the drive is installed independently and the carrier frequency is 12 kHz, the drive output current reaches 100% of the rated current.

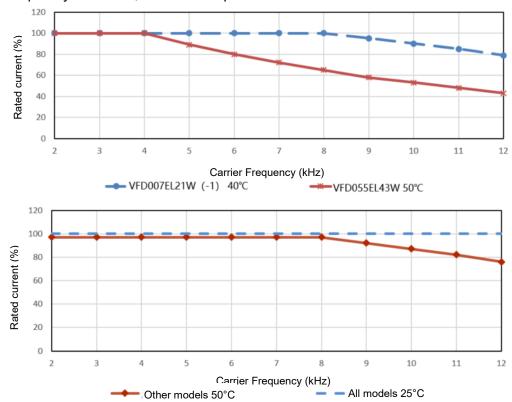

02.04 Motor Direction Control

Default: 0

Settings 0: Enable Forward/ Reverse

1: Disable reverse

2: Disable forward

Avoid damages to the motor caused by mis-operation leading to the forward and reverse rotation of the motor.

02.05

Power-On and Run Command Source Changes Motor Drive Operation Control (external terminal only)

Default: 1

Settings

- 0: Operates when power-on, remains current running status when the operation command is changed
- 1: Do not run when power-on, remains current running status when the operation command is changed
- 2: Operates when power-on, runs according to the new operation command immediately
- 3: Do not run when power-on, runs according to the new operation command immediately

- 4: Runs when reset or power-on, changes operation command according to the external terminal status when the command source is 2-wire external terminal
- As shown in the table below, when the operation command source is the external terminal, the operation command remains, and the AC motor drive power is ON, this parameter determines whether the AC motor drive changes the drive operating status or not according to the external terminal status.


Pr.02.05	Power ON	Operation Command Source Status
0	Run	Remains current operating status
1	Do not run	Remains current operating status
		Changes the operating status
2	Run	according to the new operation
		command
		Changes the operating status
3	Do not run	according to the new operation
		command
4	Dun	Changes the operation command
4	Run	according to the external terminal

- This parameter determines whether the AC motor drive receives the operation command or not when the operation command source is the external terminal, the operation command remains, and the AC motor drive power is ON.
 - 0: The drive receives the operation command and runs immediately.
 - 1: The drive does not receive the operation command. To make the motor run, cancel the operation command, and then input again.
 - 4: Transient power failure restart with external terminal control. When the motor drive has an instantaneous power failure, the DC bus drops to Lv. If you send a command from the host computer while the DC bus is at Lv, and the operating command is still on conductive trigger, the drive can be restarted.

Power ON:

When the operation command source is the external terminal and the operation command is ON (MI1-DCM = closed), the AC motor drive operates according to Pr.02.05 after power is applied.


- (1) Pr.02.05 = 0, 2 or 4: the drive runs immediately.
- (2) Pr.02.05 = 1 or 3: the drive does not run. The AC motor drive remains stopped until the operation command is received after the previous operation command is canceled.

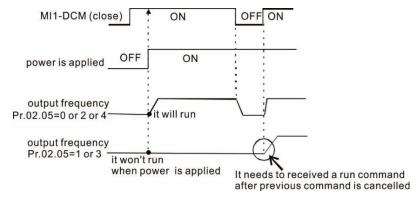

Changing operation command source:

Regardless of whether the AC motor drive runs or stops, when the new operation command source is the external terminals, and the terminal status (ON: RUN, OFF: STOP) are different with the drive current status, the AC motor drive operates according to Pr.02.05.

- (1) Pr.02.05 = 0 or 1: the status of the AC motor drive is not changed by the terminal status.
- (2) Pr.02.05 = 3 or 4: the status of the AC motor drive is changed by the terminal status.

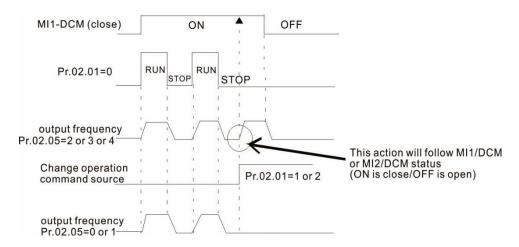

When you set Pr.02.05 = 1 or 3, it does not guarantee that the drive will never run. Be careful when using this function because the switch may bounce due to mechanical vibration or defective switch parts.

02.06 ACI Loss

Default: 0

Settings 0: Decelerates to 0 Hz

1: Stop immediately and display AErr

2: Continue operation at the last frequency

3: Operates at the frequency of Pr.02.11

- Determines the action when ACI analog input (4–20 mA) is loss.
- 1: Display the warning message "AErr" on the keypad when the ACI signal is lost and execute the Pr.02.06 setting. When the ACI signal is recovered, the warning message automatically disappears. Press "STOP/RESET" key to clear the warning message.

02.07 External Terminal Up/Down Key Mode Selection

Default: 0

Settings 0: By Up/ Down key

1: By acceleration/ deceleration time

2: By constant speed (Pr.02.08)

3: By pulse (Pr.02.08)

02.08 External Terminal Speed of the Up/ Down Key

Default: 0.01

Settings 0.01-10.00 Hz/2ms

Defines how the frequency command increases or decreases when the multi-function input terminals (Pr.04.06–04.08) are set to 10 (Up Command) or 11 (Down Command).

Chapter 4 Parameters | VFD-EL-W

Pr.02.07 = 0: Use the Up/ Down keys on the digital keypad to increase or decrease the frequency command.

Pr.02.07 = 1: The increasing or decreasing Frequency command (F) operates according to the setting for acceleration or deceleration time, only valid during operation.

Pr.02.07 = 2: Increase and decrease the frequency command according to the setting for Pr.02.08.

Pr.02.07 = 3: Increase and decrease the frequency command according to the setting for Pr.02.08 (unit: pulse input). Every ON after OFF is regarded as one input pulse.

V 02.11 Keypad Frequency Command

Default: 60.00

Settings 0.00-400.0 Hz

Sets the frequency command or reads the keypad frequency command.

02.12 Communication Frequency Command

Default: 60.00

Settings 0.00-400.00 Hz

Sets the frequency command or reads the communication frequency command.

02.13 Frequency Command Saving Mode

Default: 0

Settings 0: Save the frequency before power-off

1: Only save the keypad frequency command before power-off

2: Only save the communication frequency command before power-off

Determines whether to save the set frequency before power-off.

02.14 Initial Frequency Command Mode at Stop

Default: 0

Settings 0: Use current Frequency command

1: Use zero Frequency command

2: Refer to Pr.02.15 to set up

02.15 Initial Frequency Command Setting at Stop

Default: 60.00

Settings 0.00-400.0 Hz

Pr.02.14 and Pr.02.15 determine the initial frequency command at STOP.

Pr.02.14 = 0: Sets the initial frequency command as current frequency command at STOP.

Pr.02.14 = 1: The initial frequency command returns to zero at STOP.

Pr.02.14 = 2: The initial frequency command operates according the setting for Pr.02.15 at STOP.

02.16 Frequency Command Source Display

Default: Read only

Settings 1: bit0 = 1: First frequency command source (Pr.02.00)

2: bit1 = 1: Second frequency command source (Pr.02.09)

4: bit2 = 1: Set by external MI terminal

This parameter is read only, you can read the frequency command source from this parameter.

02.17 Operation Command Source Display

Default: Read only

Settings 1: bit0 = 1: Digital keypad

2: bit1 = 1: RS-485

4: bit2 = 1: External Terminal

8: bit3 = 1: External MI terminals

This parameter is read only, you can read the operation command source from this parameter.

02.18 User-defined Value Setting

Default: 0

Settings 0–Pr.00.13

Reads and writes the user-defined value settings. Changes the operation frequency when Pr.00.13 is not set to 0 and frequency source is from communication.

02.19 User-defined Value

Default: 0

Settings Read only

For example, assume that the frequency source is the first frequency + the second frequency, the first frequency command source is digital keypad and the second frequency source is AVI, set the user-defined value 1 as 180.0 (Pr.00.13 = 1800, Pr.00.14 = 1).

When AVI = 2V, the user-defined value is $36.0 [180.0 \div (2V/10V)]$, and the frequency is $12.0 \text{ Hz} [36.0 \div (180.0/60.0)]$.

When Pr.02.18 = 30.0, the frequency is $10.0 \text{ Hz} [30.0 \div (60.0/180.0)].$

At this time, the keypad displays 66.0 (36.0+30.0), and the output frequency is 22.0 Hz (12.0+10.0). If you read the values by using the communication address, the values display as follows: 2102H and 2103H are 22.0 Hz; 0212H (Pr.02.18) is 30.0 Hz; 0213H (Pr.02.19) is 66.0.

03 Output Function Parameters

✓ You can set this parameter during operation.

03.00 Multi-function Output Relay

Default: 8

Settings 0-23

Summary of Function Settings

ID*	Functions	Descriptions
0	No function	Output terminal with no function
1	Indication during RUN	This contact is closed when the drive is ready or RUN command is ON.
2	Indication of Master Frequency Reached	This contact is closed when output frequency of drive reaches to the setting frequency.
3	Indication at zero speed	This contact is closed when the drive output frequency is smaller than the start-up frequency.
4	Over-torque detection	This contact is closed when the drive detects over-torque. Pr.06.04 sets the over-torque detection level, and Pr.06.05 sets the over-torque detection time.
5	Base Block (B.B) indication	This contact is closed when external interrupt (B.B.) occurs in the drive and stops outputting.
6	Low-voltage indication	This contact is closed when the drive detects that the input voltage is too low.
7	Operation mode indication	This contact is closed when the drive operation command source is external terminals.
8	Malfunction indication	This contact is closed when fault occurs. (oc, ov, oH1, oL, oL1, EF, cF3.0–5, HPF1, 2, 4, ocA, ocd, ocn)
9	Desired frequency reached	This contact is closed when the desired frequency (Pr.03.02) is reached.
10	Terminal count value reached	When the drive executes external counter, this contact is closed if the count value is equal to the setting value for Pr.03.05.
11	Terminal count value reached	When the drive executes external counter, this contact is closed if the count value is equal to the setting value for Pr.03.06.
12	Over-voltage stall prevention	This contact is closed when over-voltage stall prevention is ON.
13	Over-current stall prevention	This contact is closed when the over-current stall prevention is ON.
14	IGBT over-heating warning	This contact is closed when IGBT overheats to prevent the drive from shutting down due to overheating. > 85°C ON, < 80°C OFF
15	Over-voltage	This contact is closed when the drive detects that the DC bus voltage is too high.
16	PID feedback error	This contact is closed when the PID feedback signal error is detected. (Refer to Pr.10.08, Pr.10.12)
17	Forward command	This contact is closed when the drive operates in a forward direction.
18	Reverse command	This contact is closed when the drive operates in a reverse direction.

ID*	Functions	Descriptions
19	Zero speed including STOP	Zero speed output signal (including STOP)
20	Warning indication	This contact is closed when warning occurs. (CExx, AUE, FbE, SAvE)
21	Icontrol	This contact is closed when the output frequency ≥ Pr.03.11 setting value When the drive stops and the output frequency ≤ Pr.03.12 setting value, this contact is opened.
22	Drive is ready	This contact is closed when the drive is ready.
23	Indication of multi-pump system error (only Master)	When all AC motor drives in multi-pump system are failed, the contact "closed" means it is ON or in low potential.


"Closed" means the relay is ON or low voltage.

03.02 Desired Frequency Reached

Default: 0.00

Settings 0.00-400.0 Hz

Once the output frequency reaches the desired frequency, if the corresponding multi-function output terminal is set to 9 (Pr.03.00–Pr.03.01), this multi-function output terminal is "closed".

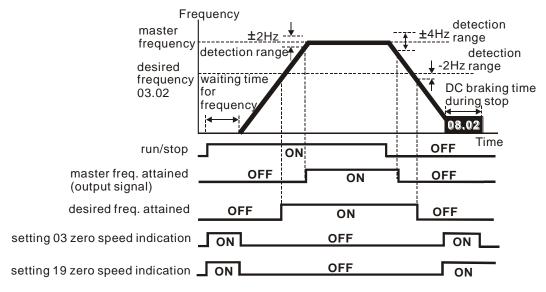

output timing chart of multiple function terminals when setting to frequency attained or zero speed indication

03.01	Reserved
03.03	Reserved
03.04	Reserved
03.05	Count Value Reached
	Default: 0

Settings 0-9999

Sets the count value of the internal counter. You can use the external multi-function input terminals on the control terminals to trigger the counter. When the count reaches the setting value, the specified output terminal activates by setting one of the multi-function input terminals (the count value resets after reaching the setting for Pr.03.05).

NOTE:

When the display shows c555, the drive has counted 555 times. If the display shows c555•, it means that the actual counter value is between 5,550 and 5,559.


03.06 Preliminary Count Value Reached

Default: 0

Settings 0-9999

When the count value counts from c1 to reach this value, the corresponding multi-function output terminal is activated. You can use this parameter as the end of counting to make the drive run from the low speed to stop.

The timing diagram shows as follows:

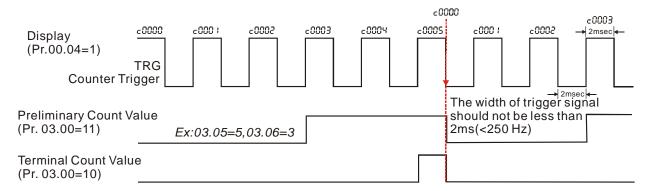

03.07 EF Activates when the Terminal Count Value Reached

Default: 0

Settings 0: Terminal count value reached, no EF displays

1: Terminal count value reached, EF activates

When Pr.03.07 = 1: the drive stops and shows "EF" message when the counter value reached, and continues to run when the fault is RESET.

03.08 Fan Cooling Control

Default: 3

Settings

- 0: Fan is always ON
- 1: Fan is OFF after the AC motor drive stops for one minute.
- 2: Fan is ON when the AC motor drive runs; fan is OFF when the AC motor drive stops
- 3: Fan turns ON when temperature (IGBT) reaches (60°C ON, 50°C OFF)
- 4: Fan is ON when the AC motor drive runs; fan is OFF when the AC motor drive stops. Fan is in stand-by mode at zero speed.
- Determines the operation mode of the cooling fan.
- This parameter is only valid for models with cooling fan.

03.09 Reserved

03.10 Reserved

03.11 Mechanical Brake Release Frequency

Default: 0.00


Settings 0.00-20.00 Hz

03.12 Mechanical Brake Active Frequency

Default: 0.00

Settings 0.00-20.00 Hz

Set the closing (ON) and breaking frequency of the output terminal (Relay) corresponding to the control parameter 03.00 multi-function output terminal 21: Mechanical brake control.

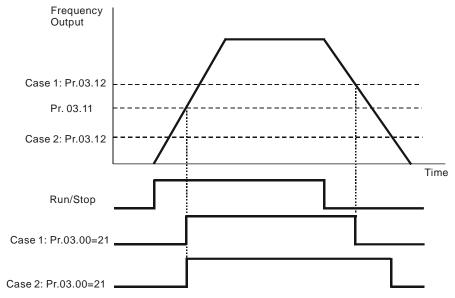

Pr.03.00 multi-function output terminal 21: Mechanical brake control: When the output frequency reaches Pr.03.11 (Mechanical brake release frequency), this terminal is closed (ON); when the output frequency reaches Pr.03.12 (Mechanical brake active frequency), this terminal is OFF.

03.13 Display the Status of Multi-function Output Terminal

Default: Read only

Settings Read only

The multi-function output terminal is falling-edge triggered, Pr.03.13 displays 1 when the relay is OFF.

04 Input Function Parameters

✓ You can set this parameter during operation.

Keypad Potentiometer Bias 04.00

Default: 0.00

Settings 0.0-100.0%

04.01 **Keypad Potentiometer Bias Direction**

Default: 0

Settings 0: Positive bias

1: Negative bias

04.02 Keypad Potentiometer Gain

Default: 100.0

Settings 0.1-200.0%

04.03 Keypad Potentiometer Negative Bias with Reverse Motion

Default: 0

Settings 0: Positive bias only

1: Negative bias with reverse command

- Pr.04.00–04.03 are applied to set and adjust the frequency by the digital keypad knob signal. The knob of the digital keypad is not connected externally, but the knob voltage is required when setting parameters. Refer to the following example for further explanation.
- As shown in the figure below, turn the digital keypad knob to the position shown on the left represents the min. position corresponding to the minimum voltage 0 V_{DC} of the knob; turn it to the position shown on the right represents the Max. position corresponding to the maximum voltage $5 V_{DC}$ of the knob.






The minimum

The maximum

Example 1:

Set Pr.02.00 to 4 and remain Pr.04.00-04.03 as default setting values, then you can use the digital keypad knob to set the corresponding main frequency command.

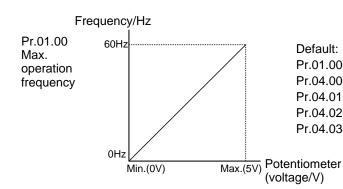

Default: Pr.01.00=60 Hz Pr.04.00=0 % Pr.04.01=0


Bias adjustment Bias direction adjustment Pr.04.02=100 % Gain of frequency adjustment Pr.04.03=0

No negative bias command

Max. operation frequency

Example 2:

If you want the corresponded minimum value to be 12 Hz when the keypad potentiometer is turned to the minimum position (Min.), you need to adjust other frequencies manually. From the diagram below, you can see that the correspondence between the keypad potentiometer (voltage) and setting frequency has been changed from 0–5 V (min.–max.) / 0–60 Hz to 0–4 V / 0–60 Hz. Therefore, the 4 V and above from the keypad potentiometer all correspond to 60 Hz. To use the full potentiometer range, refer to Example 3.

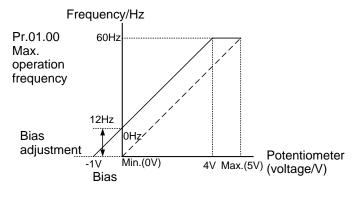


Default:
Pr.01.00=60 Hz Max. operation frequency
Pr.04.00=20 % Bias adjustment
Pr.04.01=0 Bias direction adjustment
Pr.04.02=100 % Gain of frequency adjustment
Pr.04.03=0 No negative bias command

To count the bias (See α in the formula)

$$\frac{60\text{-}0 \text{ Hz}}{5\text{V}} = \frac{12\text{-}0 \text{ Hz}}{\alpha\text{V}} \rightarrow \alpha$$
 α= 1V
∴ Pr.04.00 = $\frac{1\text{V}}{5\text{V}}$ ×100 %=20 %

Example 3:

As shown in this example, the keypad potentiometer can be used for all ranges of 0-5 V / 0-60 Hz settings. This increases flexibility.

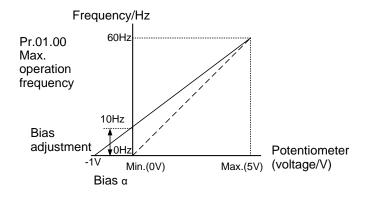


Default:
Pr.01.00=60 Hz Max. operation frequency
Pr.04.00=20 % Bias adjustment
Pr.04.01=0 Bias direction adjustment
Pr.04.02=83.3 % Gain of frequency adjustment
Pr.04.03=0 No negative bias command

To count the bias (See α in the formula) $\frac{60\text{-}10\text{H z}}{5\text{V}} = \frac{10\text{-}0\text{ Hz}}{\alpha\text{ V}} \rightarrow \alpha\text{=}1\text{V}$ $\therefore 04.00 = \frac{1\text{V}}{5\text{V}}\text{x}100 \%\text{=}20 \%$ To count the gain value

Pr.04.02 =
$$\frac{5V}{[5-(-1)]V}$$
 ×100 %=83.3 %

Example 4:

This example shows how to use the first half range 0-2.5 V (min. $-1/2 \times \text{max.}$) from the keypad potentiometer to set 0-60 Hz frequency settings. You can achieve the same results by either adjusting Pr.04.02 gain or setting Pr.01.00 to 120 Hz.

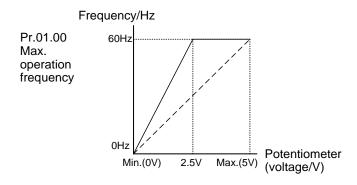


Default:
Pr.01.00=60 Hz Max. operation frequency
Pr.04.00=0.0 % Bias adjustment
Pr.04.01=0 Bias direction adjustment
Pr.04.02=200 % Gain of frequency adjustment
Pr.04.03=0 No negative bias command

To count the gain value $Pr.04.02 = \frac{5V}{(5-2.5)V} \times 100 \% = 200 \%$


Example 5:

Using negative bias to set the frequency greatly reduces the noise interference. In a noisy environment, do NOT use signals less than 1V to set the drive's operation frequency.

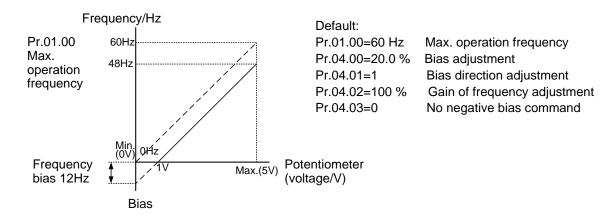


Example 6:

This example is an extension application of Example 5. In addition, it uses the gain correction to set to the maximum operating frequency. This type of application is extremely extensive, you can apply it flexibly.

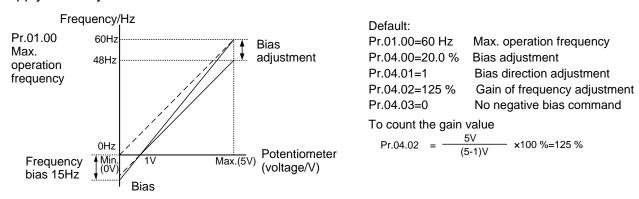

Example 7:

This example is the culmination of all potentiometer applications. With the application of forward and reverse rotation areas, it can be easily combined with the system to make various complex applications. When this application is set, the forward and reverse commands of the external terminals will automatically fail, pay extra attention.

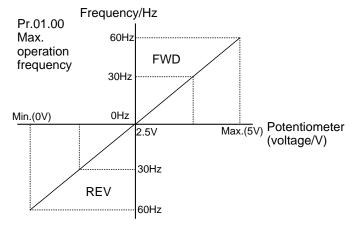

Default:
Pr.01.00=60 Hz
Pr.04.00=50.0 %
Pr.04.01=1
Pr.04.02=200 %
Pr.04.03=1

Max. operation frequency
Bias adjustment
Bias direction adjustment
Gain of frequency adjustment
No negative bias command


To count the bias (See α in the formula) $\frac{60 \cdot (-60) \text{Hz}}{5 \text{V}} = \frac{60 \cdot 0 \text{Hz}}{\alpha \text{ V}} \rightarrow \alpha = 2.5 \text{V}$ $\therefore \text{ Pr.04.00} = \frac{2.5 \text{V}}{5 \text{V}} \times 100\% = 50\%$

To count the gain value $Pr.04.02 = \frac{5V}{[5-(2.5)]V} \times 100\% = 200\%$

Example 8:

This example uses negative slope.

The rotate direction of this application cannot be changed, and the drive can only operates in a reverse direction. Pay extra attention when using this application.

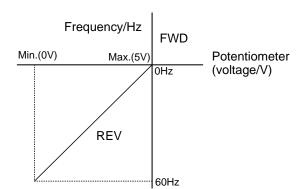

Default: Pr.01.00=60 Hz Pr.04.00=100 % Pr.04.01=1 Pr.04.02=100 % Pr.04.03=1

Max. operation frequency
Bias adjustment
Bias direction adjustment
Gain of frequency adjustment
No negative bias command

✓ 04.11 Minimum AVI Input Voltage

Settings 0.0–10.0 V

Minimum AVI Input Frequency

Default: 0.0

Default: 0.0

Settings 0.0–100.0% [100% corresponds to Fmax (Pr.01.00)]

04.13 Maximum AVI Input Voltage

Default: 10.0

Settings 0.0-10.0 V

04.14 Maximum AVI Input Frequency

Default: 100.0

Settings 0.0–100.0% [100% corresponds to Fmax (Pr.01.00)]

Minimum ACI Input Current

Default: 4.0

Settings 0.0-20.0 mA

Minimum ACI Input Frequency

Default: 0.0

Settings 0.0–100.0% [100% corresponds to Fmax (Pr.01.00)]

Maximum ACI Input Current

Default: 20.0


Settings 0.0–20.0 mA


Maximum ACI Input Frequency

Default: 100.0

Settings 0.0–100.0% [100% corresponds to Fmax (Pr.01.00)]

Sets the corresponding function between analog input value and maximum operating frequency (Pr.01.00) (used in open-loop control), as shown in the figure below.

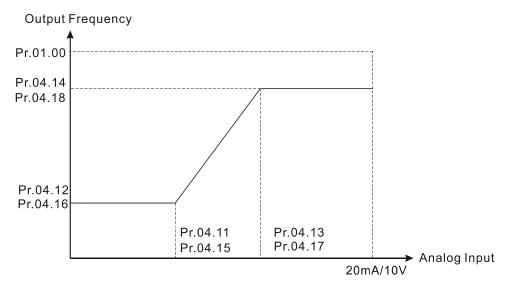

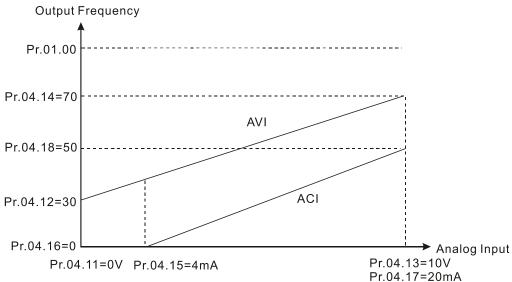

04.04 MI Terminal Start/ Stop Method and Multi-function Input Selection

Default: 0

Settings Mode 1: Pr.04.19 = 0

0: MI1 activates (FWD lights ON) / stops


Mode 2: Pr.04.19 = 1

0: Two-wire (1) MI1, MI2

1: Two-wire (2) MI1, MI2

3: Three-wire MI1, MI2 and MI3

- Pr.04.19 determines the setting range and function of this parameter.
- Mode 1 Pr.04.19 = 0: MI1 controls activation or stop; MI2, MI3 and MI4 are set as multi-function terminals.
- Mode 2 Pr.04.19 = 1: two-wire (1)/two-wire (2) MI1 and MI2 are used for start-up/stop and forward/reverse control; MI3 and MI4 are set as multi-function terminals; three-wire (MI1, MI2 and MI3) are used for start-up/stop and forward/reverse control; MI4 is set as the multi-function terminal.

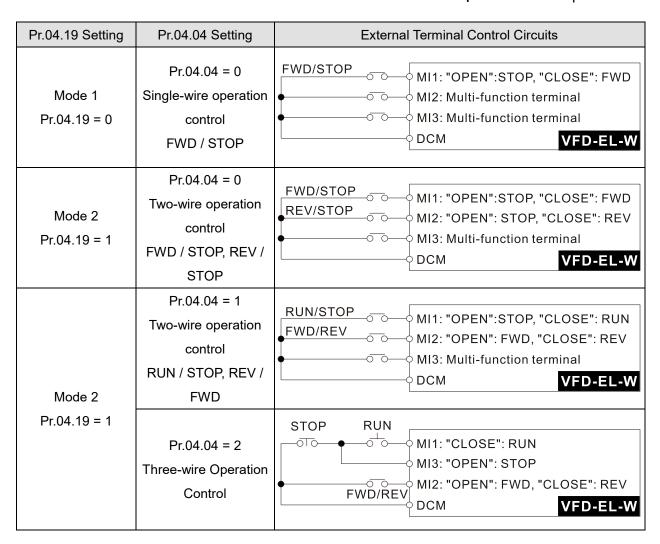

04.19 MI Terminal Control Mode Selection

Default: 0

Settings 0: Mode 1 (MI1: Start/Stop, MI2 and MI3: multi-function input terminals)

1: Mode 2 (MI1, MI2 and MI3 support two-wire/ three-wire start-up)

- MI terminal control mode is affected by the setting for Pr.04.19 and divided into two modes.
- Mode 1: MI1 is Start/Stop terminal; MI2 and MI3 are multi-function input terminals
- Mode 2: MI1, MI2 and MI3 support two-wire/ three-wire start-up.

04.05 Reserved

04.06 Start/ Stop or Multi-function Input Command 1 (MI2)

Default: 1

04.07 Start/ Stop or Multi-function Input Command 2 (MI3)

Default: 2

04.08 Multi-function Input Command 4 (MI4)

Default: 3

Settings 0-25

Use this parameter to set the function of multi-function input terminals.

Summary of Function Settings

ID*	Functions	Descriptions					
0	No function	This setting disables the terminal function, the drive does not take any action even when there is a signal input. Set the unused terminal to 0 to prevent mis-connection or malfunction.					
1	Multi-step speed command 1						
2	Multi-step speed command 2	Use these three terminals to set the seven-step speed operation. There are nine-step speed frequencies (including Master Frequency and Jog					
3	Multi-step speed command 3	Frequency) available.					
4	Reserved						
5	Reset	Use this terminal to reset the drive after clearing a drive fault.					
6	Acceleration / deceleration speed inhibit	When you enable this function, the drive stops acceleration or deceleration immediately. The AC motor drive resumes from the inhibit point once this function is disabled. Frequency Setting frequency Accel. inhibit area Actual operation frequency Decel. inhibit area Actual operation frequency Operation command ON OFF					
7	1st and 2nd acceleration / deceleration time selection	You can select the acceleration and deceleration time of the drive with this function, or from the digital status of the terminals; there are two acceleration and deceleration selections. Frequency Setting frequency Pr.01.10 Pr.01.12 Pr.01.12 Time MIx-GND Operation ON ON ON ON ON OFF					
8	JOG operation	The JOG operation executes when the drive stops completely. While running, you can still change the operation direction; and the STOP key on the keypad is valid. When the external terminal is OFF, the motor stops in the JOG deceleration time. Refer to Pr.01.13–01.15 for details.					

ID*	Functions	Descriptions					
9	External interrupt B.B. input (Base Block)	ON: the output of the drive stops immediately and the motor is in free run status. When Base Block control is deactivated, the drive starts its speed search function and synchronizes with the motor speed, and then accelerates to the set frequency. Even if the motor has completely stopped after the Base Block, it executes the speed tracking as soon as the function is OFF. (NOTE: bb: Base block) (Refer to descriptions of Pr.08.06–08.07) External B.B. Output Frequency The drive traces speed downstairs from the speed before B.B. Output Voltage Output Voltage Speed sync detection downstairs from the speed before B.B. Speed searching					
10	Digital up command	ON: the frequency of the drive increases or decreases by one unit. If this function remains ON continuously, the frequency increases or decreases according to Pr.02.07 / Pr.02.08. The Digital up command and Digital					
11	Digital down command	down command are the same as the up/down key on the digital keypad, the only difference is that they cannot be used to change parameter settings. These two functions are only valid when the frequency command source is digital keypad (Pr.02.00/ Pr.02.09 = 0).					
12	Counter triggered signal input	Uses external signals such as connecting ON/OFF switch, lightening senor, etc., to trigger the counter. You can also use signals of the multifunction output terminal (counter reached, desired counter reached) to control the applications that based on the counter. For example: winding machine, packing machine. (Refer to Pr.03.05 and Pr.03.06 for details.)					
13	Clear the counter	ON: the current counter value is cleared and displays c0. The drive counts up when this function is disabled.					
14	External Fault (EF) input	When the drive receives status change from the EF terminal, it stops output immediately and shows EF on the digital keypad. The drive keeps running until the external fault is cleared after you press RESET on the keypad (EF: External Fault). (EF: External Fault)					
15	PID Control Disabled	ON: the PID control function is disabled.					
16	Output stop	AC motor drive stops output and the motor coasts if one of these settings is enabled. If the status of terminal is changed, AC motor drive restarts from 0 Hz.					

ID*	Functions	Descriptions				
17	Parameter lock	ON: all parameters are read as 0. Change the terminal status to OFF to read the parameter settings.				
18	Operation command selection (Pr.02.01): External terminals	ON: operation command source is external terminals OFF: operation command source is Pr.02.01 setting (NOTE: When 18, 19 and 20 are ON at the same time, the priority of operation command source is 18 > 19 > 20.)				
19	Operation command selection (Pr.02.01): Digital keypad	ON: operation command source is digital keypad OFF: operation command source is Pr.02.01 setting (NOTE: When 18, 19 and 20 are ON at the same time, the priority of operation command source is 18 > 19 > 20.)				
20	Operation command selection (Pr.02.01):	ON: operation command source is communication (RS-485). OFF: operation command source is Pr.02.01 setting (NOTE: When 18, 19 and 20 are ON at the same time, the priority of operation command source is 18 > 19 > 20.)				
21	FWD / REV	ON: Reverse; OFF: Forward You cannot change the direction through the up/down keys on the keypad.				
22	Second frequency command source	ON: Pr.02.09 setting is valid. It is used to switch the first/ second frequency command and the operation command source.				
23	Simple positioning When the motor receives this signal while running in a forward.					
24	Simple positioning REV When the motor receives this signal while running in a reverstop limit it stops running reverse.					
25	25: Multi-pump manual/ auto switch	When this function is enabled, switch to HAND or AUTO mode through this terminal.				
29	Prohibit Write EEPROM Function	ON: determines whether to enable the Prohibit write EEPROM function				


04.09 Status Selection of Multi-function Input Terminal

Default: 0

Settings 0–63

Sets the contact status of external multi-function input terminals MI2–MI4 to be normally open (N.O.) or normally closed (N.C.) according to the start-up / stop mode (Pr.04.19 and Pr.04.04).

When the start-up/stop mode is single-wired (Pr.04.04 = 0, Pr.04.19 = 0), MI1 setting is invalid; when the start-up/stop mode is two-wired (Pr.04.04 = 0 or 1, Pr.04.19 = 1), MI2 setting is invalid; when the start-up/stop mode is three-wired (Pr.04.04 = 2, Pr.04.19 = 1), MI2 and MI3 settings are invalid. See the table below for details.

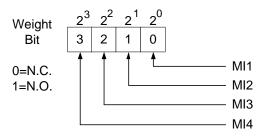


Start-up/ Stop Mode			MI4	MI3	MI2	MI1	MI Terminal Status Setting	
Mode	Pr.04.19	Pr.04.04	bit 3	bit 2	bit 1	bit 0	Multi-function Input Terminal	Terminals Occupied by the Start-up/ Stop Function
Single- wire operation control	0	0	0/1	0/1	0/1	-	MI4, MI3 and MI2 can be set as N.O. or N.C.	MI1 is only controlled by external terminals
Two-wire operation control	1	0 or 1	0/1	0/1	1	ı	MI4 and MI3 can be set as N.O. or N.C.	MI1 and MI2 are only controlled by external terminals
Three- wire operation control	1	2	0/1	-	-	-	MI4 can be set as N.O. or N.C.	MI1, MI2 and MI3 are only controlled by external terminals

Setting method:

When setting this parameter, convert bit3-bit0 that represent the status of MI4-MI1 from binary to decimal.

For example: setting MI3 and MI4 to be 1 = N.C.; setting MI1 and MI2 to be 0 = N.O. Pr.04.09 should be set to 12.

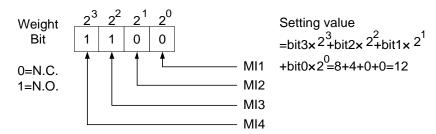

04.10 Digital Terminal Input Response Time

Default: 1

Settings 1–20 (*2ms)


This function is to delay and confirm the digital input terminal signal (unit: 2 ms). The time for delay is also the time for confirmation. The confirmation prevents interference that could cause error in the input to the digital terminals. But in the meanwhile, it delays the response time though confirmation improves accuracy.

04.26 Display the Status of Multi-function Input Terminal

Default: Read only

Settings Read only

- Displays 63 in Pr.04.26 when all the MI terminals are not active.
 - When MI1 (corresponds to bit0) is triggered, and the weight is 1, Pr.04-26 = 62 (63-1).
 - When MI2 (corresponds to bit1) is triggered, and the weight is 2, Pr.04-26 = 61 (63-2).
 - When MI3 (corresponds to bit2) is triggered, and the weight is 4, Pr.04-26 = 59 (63-4).
 - When MI4 (corresponds to bit3) is triggered, and the weight is 8, Pr.04-26 = 55 (63-8).
 - If more than one MI terminals are triggered, use 63 minus the weight that corresponds to the MI terminal.

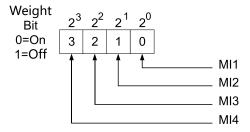

For example, if you set MI2 and MI3 to ON, Pr.04.26 displays 57 (63-2-4=57, decimal)




M 04.27 Internal/ External Multi-function Input Terminal Selection


Default: 0

Settings 0-63

Selects the terminals MI1–MI4 to be either internal terminal or external terminal. You can activate internal terminals with Pr.04.28. When a terminal is set to internal terminal, the corresponded external terminal is deactivated.

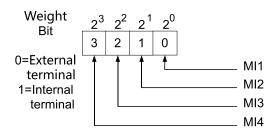

When setting this parameter, convert bit3-bit0 that represent the status of MI4-MI1 from binary to decimal, and then set this parameter. Set MI3 and MI4 as internal terminals; set MI1 and MI2 as external terminals. Pr.04.27 should be set to 12.

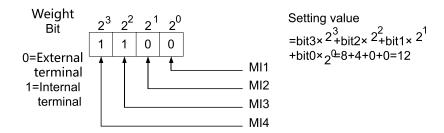


6 04.28 Status Selection of Multi-function Input Terminal


Default: 0

Settings 0-63

Sets the internal terminal action (ON/OFF) through the keypad or communication. And use this parameter with Pr.04.27.

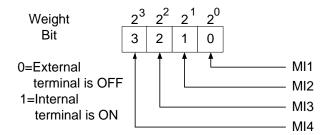

Setting method: set Pr.04.28 to 12 to activate MI3 and MI4.

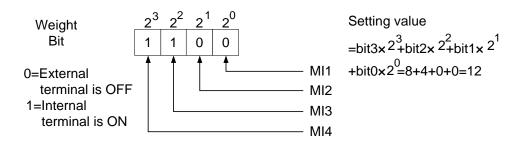

04.20

Reserved

04.25

05 Multi-step Speed Parameters

✓ You can set this parameter during operation.

×	05.00	1 st Step Speed Frequency
×	05.01	2 nd Step Speed Frequency
×	05.02	3 rd Step Speed Frequency
×	05.03	4 th Step Speed Frequency
×	05.04	5 th Step Speed Frequency
×	05.05	6 th Step Speed Frequency
×	05.06	7 th Step Speed Frequency

Default: 0.00

Settings 0.00-400.00 Hz

☐ Use the multi-function input terminals (refer to Pr.04.06–04-08) to select the multi-step speed command (the maximum is 7th step speed). Pr.05.00 to Pr.05.06 sets the multi-step frequency as shown in the following table.

	Pr.	Multi-step Speed	Multi-step Speed	Multi-step Speed	
		Command 1	Command 2	Command 3	
Master	Master Speed	OFF	OFF	OFF	
Frequency	Master Opeed	OH	OH		
1st Step	05.00	ON	OFF	OFF	
Speed	03.00	ON	OFF		
2nd Step	05.01	OFF	ON	OFF	
Speed	03.01	OFF	ON		
3rd Step	05.02	ON	ON	OFF	
Speed	05.02	ON	ON	OFF	
4th Step 05.03		OFF	OFF	ON	
Speed	03.03	OFF	OFF	ON	
5th Step	05.04	ON	OFF	ON	
Speed	05.04	ON	OFF		
6th Step	05.05	OFF	ON	ON	
Speed	05.05	UFF	ON	ON	
7th Step					
Speed	05.06	ON	ON	ON	
Frequency					

06 Protection Parameters


✓ You can set this parameter during operation.

06.00 Over-voltage Stall Prevention

Default: 390.0 / 780.0

Settings 230V models: 330.0–410.0 V (0: Disable) 460V models: 660.0–820.0 V (0: Disable)

- The default for 230V models is 390.0; the default for 460V models is 780.0.
- Set Pr.06-01 to 0.0 disables the over-voltage stall prevention function (connected with braking unit or brake resistor).
- During deceleration, the DC bus voltage may exceed its Maximum Allowable Value due to motor regeneration. When this function is enabled and the DC bus voltage detected is too high, the drive stops decelerating (output frequency remains unchanged) until the DC bus voltage drops below the setting value.
- This parameter is suitable for uncertain load inertia. When stopping under normal load, the overvoltage does not occur during deceleration and meet the deceleration time setting. Sometimes it may not stop due to over-voltage during decelerating to STOP when the load regenerative inertia increases. In this case, the AC motor drive extends the deceleration time automatically until the drive stops. If the deceleration time affects your application, it is not recommended to use this function. You can also install a brake resistor to absorb the excessive regenerative voltage.

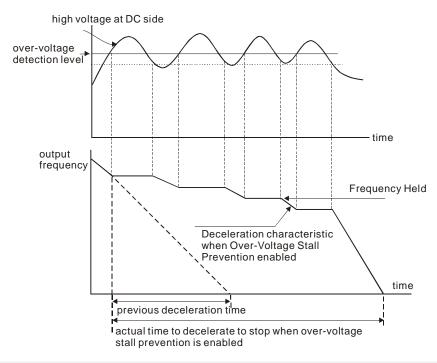


O6.01 Over-current Stall Prevention during Acceleration

Default: 170

Settings 20–250% (0: Disable)

During acceleration, the AC motor drive output current may increase abruptly and exceed the value specified in Pr.06.01 due to rapid acceleration or excessive load on the motor. When this function is enabled, the AC motor drive stops accelerating and keeps the output frequency constant until the current drops below this setting.

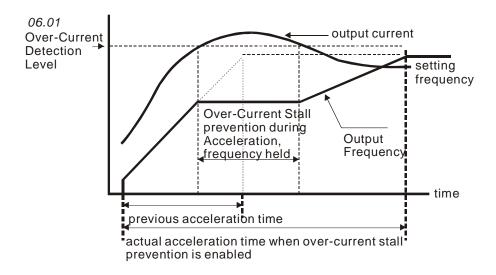


06.02 Over-current Stall Prevention during Operation

Default: 170

Settings 20-250% (0: Disable)

If the output current exceeds the setting value for Pr.06-02 when the drive is operating, the drive decreases its output frequency to prevent motor stall. If the output current is lower than the setting value for Pr.06.02, the drive accelerates again to the setting frequency.

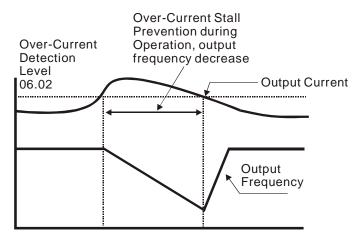

over-current stall prevention during operation

06.03 Over-torque Detection Selection (oL2)

Default: 0

Settings 0: Disabled

- 1: After over-torque detection during constant speed operation, continues operation until oL1 or oL protection activate
- 2: After over-torque detection during constant speed operation, stops and shows oL2 fault
- 3: After over-torque detection during acceleration and constant speed operation, continues operation until oL1 protection activates
- 4: After over-torque detection during constant speed operation, stops and shows oL2 fault
- Determines the operation mode of the drive after detecting over-torque (OL2). Detecting method: when the output current exceeds the setting for Pr.06.04, and the detection time is longer than the

setting for Pr.06.05, the warning message "OL2" displays. If a multi-functional output terminal is set to over-torque (OL2) detection (Pr.03.00), the output is ON. (Refer to Pr.03.00)

M 06.04 Over-torque Detection Level

Default: 150

Settings 10-200%

- Refer to Pr.06.51 to select whether the over torque level is based on the motor rated current or the drive rated current.
- When Pr.06.51 is set to 0: The over-torque level is based on the motor rated current (Pr.07.00), set Pr.06.04 as the motor allowable overload coefficient.
- When Pr.06.51 is set to 1: The over-torque level is based on the drive rated current (Pr.00.01), it needs to be converted and calculated according to the motor rated current and overload capacity. The calculation is as the following:

Motor rated current × Motor allowable overload factor ÷ Inverter rated current × 100%

06.51 OL2 Over-torque Detection Level Selection

Default: 0

Settings 0: Based on motor's rated current (Pr.07.00)

1: Based on driver's rated current (Pr.00.01)

06.05 Over-torque Detection Time

Default: 0.1

Settings 0.1-60.0 sec.

- Sets the drive action modes after over-torque detection.
- Over-torque detection method: when output current exceeds the over-torque detection level (Pr.06.04) and the detection time is longer than the setting for Pr.06.05, if the MO terminal is set to over-torque detection, the contact is "closed". Refer to Pr.03.00 for details.
- Set the overload time corresponding to the allowable overload coefficient of the motor, which cannot exceed the allowable overload time of the motor.

06.06 Electronic Thermal Relay Selection (oL1)


Default: 2

Settings 0: Standard motor (fan cooling)

1: Special motor (forced external cooling)

2: Disabled

Sets the operation of the electronic thermal overload relay that protects the motor from overloading or overheating.

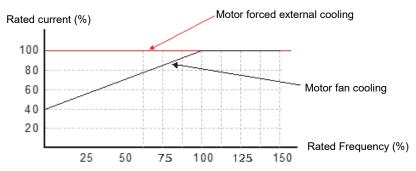


06.07 Electronic Thermal Relay Action Time

Default: 60

Settings 30-600 sec.

Determines the time required to activate the I²t electronic thermal protection function. The figure below shows I²t curves for 150% output power for one minute.

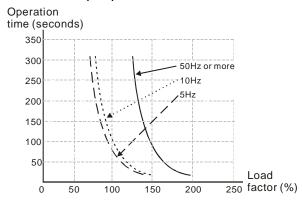

06.08	Fault Record 1
06.09	Fault Record 2
06.10	Fault Record 3
06.11	Fault Record 4
06.12	Fault Record 5
06.21	Fault Record 6
06.22	Fault Record 7
06.23	Fault Record 8
06.24	Fault Record 9
06.25	Fault Record 10

Default: 0

Settings 0-40

☐ Fault record description

ID No.	Descriptions	
0	0: No fault record	
1	Over-current (oc)	
2	Over-voltage (ov)	
3	IGBT over-heat (oH1)	
4	Low voltage (Lv)	
5	Drive over-load (oL)	
6	Electronics thermal relay 1 protection (oL1)	
7	Motor overload (oL2)	
8	External Fault (EF)	
9	Over-current during acceleration (ocA)	
10	Over-current during deceleration (ocd)	
11	Over-current at constant speed (ocn)	
12	Reserved	

ID No.	Descriptions
13	Reserved
14	Phase loss (PHL)
15	Reserved
16	Auto-acceleration / auto-deceleration failure (cFA)
17	Software or password protection (codE)
18	Write error (cF1.0)
19	Read error (cF2.0)
20	Protection circuit error (HPF1)
21	Protection circuit error (HPF2)
22	Reserved
23	Protection circuit error (HPF4)
24	U-phase hardware error (cF3.0)
25	V-phase hardware error (cF3.1)
26	W-phase hardware error (cF3.2)
27	DC bus hardware error (cF3.3)
28	OH1 hardware error (cF3.4)
29	Reserved
30–31	Reserved
32	Analog feedback signal error (AErr)
33	Reserved
34	Motor PTC overheating protection (PTC1)
35	PID feedback fault (FbE)
36	PID feedback error (dEv)
37	Output phase loss (oPHL)
38	Thermal cutout triggered (HotP)
39-40	Reserved

M 06.13 Detection Time for Motor Phase Loss

Default: 0.0

Settings 0.0: Disable OPHL detection

0.1-60.0 sec.

Moderation Current Level for Motor Phase Loss

Default: 30

Settings 10–100%

Use Pr.06.13 with Pr.06.14. When three-phase imbalance occurs among three-phase motors and the imbalance reaches Pr.06.14 setting percentage (the percentage is 100% equal to the AC motor drive's rated current settings in Pr.00.01), and lasts for the time set in Pr.06.13, OPHL warning displays and the drive stops to prevent the motor from damage due to the three-phase unbalanced operation.

✓ 06.15 Thermal Cutout Protection Level

Unit: 1

Default: 1.1A ÷ Pr.00.01

Settings 0–100% (0: Disabled)

- Pr.06.15 protection level is calculated by the formula: 1.1A ÷ Pr.00.01 (depending on models).
- Example: If the rated current of VFD007EL21W shown in Pr.00-01 is 4.2A, then Pr.06.15 protection level is 26% [=1.1÷4.2].

Ø 06.16 Detection and Resume Time for Thermal Cutout

Unit: 0.1

Default: 3.0

Settings 0.0–360.0 sec.

M 06.17 Thermal Cutout Treatment

Unit: 1

Default: 0


Settings 0: No function (no warning and continue operation)

1: Fault and coasts to stop

2: Warn and continue operation with Pr.06.19 setting frequency

• Pr.06.17=1:

If Pr.06.17=1, when dropping load resumes but output remains in a stopping status, fault should be reset so as to resume operation.

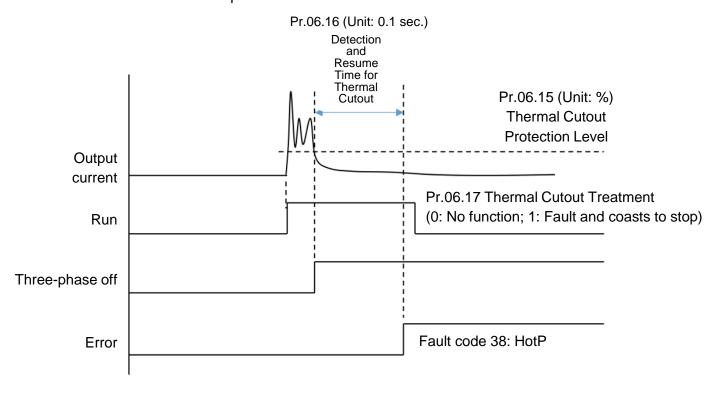


MOTE:

- 1. When in standby status, function is disabled and accumulated time for low-current detection is reset.
- 2. When Pr.06-17=0, function is disabled and accumulated time for low-current detection is

reset.

- 3. When output current exceeds [low-current setting level + 5%], function is disabled and accumulated time for low-current detection is reset.
- 4. When output current exceeds low-current setting level and lower than [low-current setting level + 5%], it is a grey area, which means the function is disabled, but accumulated time for low-current detection is not reset.
- Pr.06.17=2
- If Pr.06.17=2, when dropping load resumes and warning disappears, output frequency accelerates from Pr.06.19 setting value (according acceleration time) to the targeted frequency.
- If Pr.06.17=2, when load drops, the level that current resumes is calculated from Pr.06.15x(1+5%).

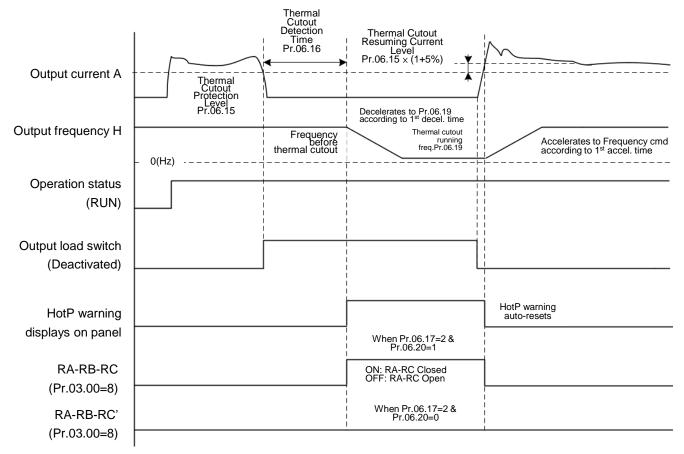

Filter Time for Current of Dropping Load

Unit: 1

Default: 0

Settings 0-9999

M 06.19 Starting Frequency after Thermal Cutout Resumes

Unit: 1

Default: 8%

Settings 1-100% × Pr.01.01

Multi-function Output Terminal Selection when Load Drops then Resumes (when Pr.03.00=8 Malfunction Indication)

(Valid only when Pr.06.17=2)

Default: 0

Unit: 1

Settings 0: RA-RB-RC OFF

1: RA-RB-RC ON

06.26	Output Frequency Fault 1 (Hz)
06.27	Output Current Fault 1
06.28	Output Voltage Fault 1
06.29	DC bus Voltage Fault 1
06.30	Drive Internal Temperature Fault 1
06.31	Output Frequency Fault 2 (Hz)
06.32	Output Current Fault 2
06.33	Output Voltage Fault 2
06.34	DC bus Voltage Fault 2
06.35	Drive Internal Temperature Fault 2
06.36	Output Frequency Fault 3 (Hz)
06.37	Output Current Fault 3
06.38	Output Voltage Fault 3
06.39	DC bus Voltage Fault 3
06.40	Drive Internal Temperature Fault 3
06.41	Output Frequency Fault 4 (Hz)
06.42	Output Current Fault 4
06.43	Output Voltage Fault 4
06.44	DC bus Voltage Fault 4
06.45	Drive Internal Temperature Fault 4
06.46	Output Frequency Fault 5 (Hz)
06.47	Output Current Fault 5
06.48	Output Voltage Fault 5
06.49	DC bus Voltage Fault 5
06.50	Drive Internal Temperature Fault 5
	D () ()

Default: 0

Settings 0-65535

Records the drive status corresponded from Fault 1 to Fault 5

07 Motor Parameters

✓ You can set this parameter during operation.

Motor Rated Current

Default: 100%FLA

Settings 30.0-120.0% FLA

- Sets this value according to the specification as indicated on the motor nameplate. Set the default value according to the drive rated current, therefore, the default is 100% of the drive rated current (FLA).
- There will be a 0.1 error between the actual set value and the minimum value of the motor.
- If the power of the drive and the motor do not match, the motor needs to be overloaded. Set Pr.06.03, 06.04, and 06.05 motor over-torque protection related parameters.

№ 07.01 No-Load Current for Motor

Default: 40%FLA

Settings 0.0–99.0% FLA

The setting for the motor no-load current affects the slip compensation.

✓ 07.02 Auto-Torque Compensation

Default: 0.0

Settings 0.0–10.0

Sets the AC motor drive to automatically increase voltages to get a higher torque when the AC motor drive is running.

✓ 07.03 Torque Compensation Gain

Default: 0.00

Settings 0.00-10.00

For an asynchronous motor, increasing the load on the AC motor drive causes slip to increase and results in decreased speed. Use this parameter to set the compensation frequency, and reduce the slip to maintain the synchronous speed when the motor runs at the rated current in order to improve the accuracy of the drive. When the output current of the AC motor drive is larger than the motor no-load current value (Pr.07.01), the AC motor drive adjusts the output frequency according to this parameter. If the actual speed ratio is slower than expected, increase the parameter setting value; otherwise, decrease the setting value.

Motor Parameter Auto-tuning Motor Parameter Auto-

Default: 0

Settings 0: Disabled

1: Auto-tuning R1 (motor does not run)

2: Auto-tuning R1 + no-load current (motor runs)

Set this parameter to 1 and 2 for motor auto-tuning, the drive starts auto-tuning when receiving RUN command. 1: Auto-detect only the R1 value, and manually enter Pr.07.01; 2: Unload the AC motor drive and automatically set the values for Pr.07.01 and Pr.07.05.

Motor auto-tuning process:

- Ensure that all the parameters are set to defaults and the motor wiring is correct.
- 2. Ensure that the motor is not loaded before executing auto-tuning and that the shaft is not connected to any belt or reducer.
- Enter the correct settings for Pr.01.01 Motor Rated Frequency (Fbase), Pr.01.02 Motor 3. Rated Voltage (Vbase), Pr.07.00 Motor Rated Current, and Pr.07.06 Motor Rated Slip (Motor 0).
- After you set Pr.07.04 to 2, the AC motor drive executes auto-tuning immediately after 4. receiving a RUN command. (NOTE: be careful for personnel and mechanical damage from the motor operation.) The total auto-tuning time is 15 seconds = Pr.01.09 + Pr.01.10. (Higher-power drives need longer acceleration and deceleration time.)
- 5. After executing auto-tuning, check to ensure there are values filled in for Pr.07.01 and Pr.07.05. If not, press the RUN key after setting Pr.07.04 again to repeat auto-tuning.
- If the result of above auto-tuning is correct, set Pr.00.10 to 1 and set other parameters according to your application requirements.

Related parameters:

- Pr.01.01 Motor Rated Frequency
- Pr.01.02 Motor Rated Voltage
- Pr.07.00 Motor Rated Current
- Pr.07.01 Motor No-load Current
- Pr.07.05 Motor Resistance R1
- Pr.07.06 Motor Rated Slip

NOTE: In vector control mode, it is not recommended to have motors run in parallel, or operate the motor with a rated power that exceeds the rated power of the AC motor drive.

07.05	Motor R	Resistance R1 (L	Line to Line)				
					Default: 0		
	Settings	0–65535 mΩ					
This par	ameter is	automatically set	after the motor	auto-tunes.	You can also	set this para	ameter

according to the known motor correct parameter. This resistance value is the R value between phase and phase of the motor. Regardless of the motor wiring method, this resistance value is the measured value of any two motor leads.

07.06 Motor Rated Slip Default: 3.00 Settings 0.00-20.00 Hz Sets the motor rated slip. Enter the actual rated RPM from the motor nameplate.

Refer to the rated RPM and the number of poles from the motor nameplate and use the following equation to calculate the rated slip:

Rated Slip = $F - N \times P/120$

F: Rated frequency (Hz)

N: Rated speed (rpm)

P: number of poles (Pole)

Chapter 4 Parameters VFD-EL-W
 Assume that the motor rated frequency is 60 Hz with 4 poles, and the rated motor speed is 1650 rpm. The rated slip calculated by the formula is 60 Hz − (1650 rpm × 4/ 120) = 5 Hz. This parameter is related to Pr.07.03 Slip Compensation Gain. To get the best slip compensation effect, you must enter the correct settings. The incorrect setting may cause invalid slip compensation and even damage to the motor and to the AC motor drive. Related Parameters: Pr.07.03 Torque Compensation Gain
07.07 Slip Compensation Limit
Default: 200 Settings 0–250%
Sets the upper limit of the compensation frequency for the correction amount of the slip compensation function, that is, the multiplier of Pr.07.06 motor rated slip. If the motor speed is lower than the target speed and the speed does not change after adjusting the Pr.07.03 setting the AC motor drive may reach the upper limit of the compensation frequency. Increase the Pr.07.07 setting and check again. Related parameters: Pr.07.03 Torque Compensation Gain Pr.07.06 Motor Rated Slip
07.08 Torque Compensation Low Pass Filter Time
Default: 0.10
Settings 0.01–10.00 sec.
This function is usually applied in applications with heavy load where the motor current changes frequently for the current compensation to increase the output torque. The frequent current change causes machine vibration. Increase the Pr.07.08 setting to solve this problem.
07.09 Slip Compensation Low Pass Filter Time
Default: 0.20 Settings 0.05–10.00 sec.
 This function is usually applied in applications with heavy load where the motor current changes frequently for the current compensation to reach the synchronous speed. The frequent current change causes machine vibration. Increase the Pr.07.09 setting to solve this problem. If you set Pr.07.08 and Pr.07.09 to 10 seconds, the compensation response time is the slowest however, the system may be unstable if you set the time too short.
07.10 Accumulated Motor Operation Time (minutes)
Default: 0

Accumulated Motor Operation Time (days)

Default: 0

Settings 0-65535

Record the motor operation time. To clear the operation time, set Pr.07.10 and Pr.07.11 to 0. Any operation time shorter than 60 seconds is not recorded.

07.12 Motor PTC Overheating Protection

Default: 0

Settings 0: Disabled

1: Enable

07.14 Motor PTC Overheating Protection Level

Default: 2.4

Settings 0.1-10.0 V

- Running the motor at low frequency for a long time reduces the cooling function of the motor fan.

 To prevent overheating, use a Positive Temperature Coefficient thermistor on the motor, and connect the thermistor output signal to the drive's corresponding control terminals.
- When you set the source of the first and second frequency command to AVI (Pr.02.00 = 1 / Pr.02.09 = 1), you disable the motor PTC overheat protection (that is, Pr.07.12 cannot be set to 1).
- If the temperature exceeds the setting level, the motor coasts to stop and PtC1 (P t C) displays. When the temperature decreases below the level of (Pr.07.15 minus Pr.07.16) and stops blinking, you can press the RESET key to clear the fault.
- Pr.07.14 (overheat protection level) must be greater than Pr.07.15 (overheat warning level).
- The PTC function uses the AVI, +10V and ACM terminals, when PTC enables (Pr.07.12 = 1), it uses AVI as PTC input and is connected with a resistor-divider as shown in the diagram below.
 - 1. The voltage between +10V to ACM: lies within 10.4–11.2V.
 - 2. The internal impedance for AVI is around 47 k Ω Recommended value for divider resistance is 1K–10K Ω .
 - 3. Contact your motor dealer for the curve of temperature and resistance value for PTC.


Protection level: Pr.07.14 = V+10 × $(R_{PTC1}//47k)$ ÷ $[R1+ (R_{PTC1}//47k)]$

Warning level: Pr.07.15 = V+10 × $(R_{PTC2}//47k)$ ÷ $[R1+ (R_{PTC2}//47k)]$


V+10: voltage between +10V-ACM actual value;

R_{PTC1}: motor PTC overheat protection level; R_{PTC2}: motor PTC overheat warning level

47 kΩ: the AVI input impedance; R1: divider resistance (recommended value: 1–10k Ω)

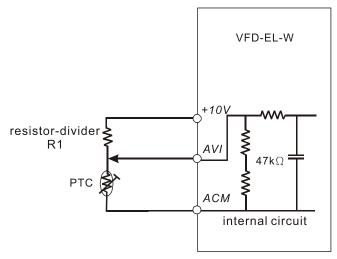

Take the standard PTC thermistor as an example: if the protection level is 1330 Ω , the actual voltage between +10V-ACM is 10.5 V and divider resistance R1 is 4.4k Ω .

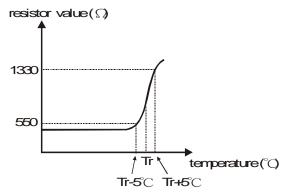

Refer to the following calculation when Pr.07.14 is set to 2.4 and motor temperature overheating protection level is 1330 Ω :

$$1330//47000 = (1330 \times 47000) \div (1330 + 47000) = 1293.4$$

 $10.5 \times 1293.4 \div (4400 + 1293.4) = 2.38 \text{ (V)} = 2.4 \text{ (V)}$

07.15 Motor PTC Overheating Warning Level

Default: 1.2

Settings 0.1-10.0 V

07.16 Motor PTC Overheating Warning Reset Level

Default: 0.6

Settings 0.1-5.0 V

07.17 Motor PTC Overheating Action

Default: 0

Settings 0: Warn and ramp to stop

1: Warn and coast to stop

2: Warn and continue operation

If the temperature reaches the motor PTC Overheat Warning Level (Pr.07.15), the drive acts according to Pr.07.17 and displays PtC2 (₱₺₵०) on the digital keypad. If the temperature decreases below the result of (Pr.07.15 minus Pr.07.16), the warning message disappears.

07.13 Motor PTC Overheating Protection Input Filter Time

Default: 100

Settings 0-9999 (unit: 2ms)

08 Special Parameters

✓ You can set this parameter during operation.

08.00 DC Brake Current Level

Default: 0

Settings 0-100%

Sets the level of the DC brake current output to the motor at start-up and stop. When setting the DC brake current, the rated current is 100%. Therefore, when you set this parameter, increase the level slowly to reach the desired holding torque. The set value cannot exceed the motor rated current.

08.01 DC Brake Time at Start-up

Default: 0.0

Settings 0.0-60.0 sec.

This parameter determines the duration of the DC brake current output to the motor when the drive starts up.

08.02 DC Brake Time at STOP

Default: 0.0

Settings 0.0–60.0 sec.


This parameter determines the duration of the DC Brake current output to the motor when braking. To enable the DC brake at STOP, you must set Pr.02.02 (Stop Method) to 0 or 2 (ramp to stop).

08.03 DC Brake Frequency at STOP

Default: 0.00

Settings 0.00-400.00 Hz

Determines the start frequency of the DC brake before the drive ramps to stop. When this setting is less than Pr.01.05 (Start-up Frequency), the start frequency for the DC brake begins at the minimum frequency.

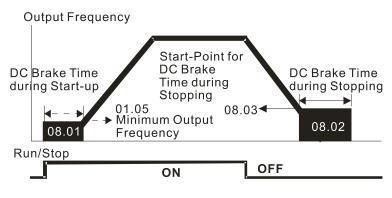

DC Brake Time

- Use the DC brake before running the motor when the load is movable at stop, such as with fans and pumps. The motor is in free running status and in unknown rotation direction before the drive starts up. Execute the DC brake before you start the motor.
- Use the DC Brake at STOP when you need to brake the motor quickly or to control the positioning. Such as cranes or cutting machines.

08.04 Momentary Power Loss Action

Default: 0

Settings 0: Stop operation

- 1: Operation continues after momentary power loss, speed search starts with the last frequency
- 2: Operation continues after momentary power loss, speed search starts with the minimum frequency
- Determines the operation mode when the drive restarts from a momentary power loss.

08.05 Maximum Allowable Power Loss Time

Default: 2.0

Settings 0.1–20.0 sec.


- Determines the maximum time of allowable power loss. If the duration of a power loss exceeds this parameter setting, the AC motor drive stops output after the power recovers.
- The selected operation after power loss in Pr.08.04 is only executed when the maximum allowable power loss time is ≤ 5 seconds and the AC motor drive keypad displays "Lv". If the AC motor drive is powered off due to overload, even if the maximum allowable power loss time is ≤ 5 seconds, the drive does not execute the operation mode you set for Pr.08.04. In that case it starts up normally.

08.06 Base Block Speed Search

Default: 1

Settings 0: not using

- 1: Speed search starts with the last speed before B.B.
- 2: Speed search starts with the minimum speed (Pr.01.05)
- Determines the AC motor drive restart method after an External Base Block is enabled.

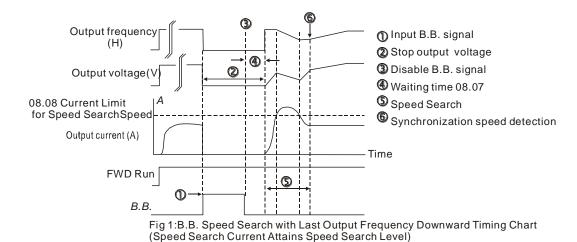

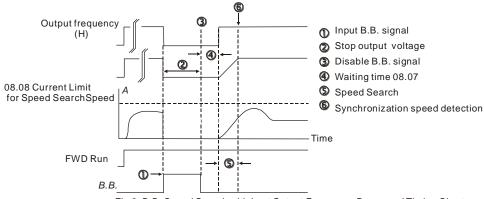


Fig 2: B.B. Speed Search with Last Output Frequency Downward Timing Chart (Speed Search Current doesn't Attain Speed Search Level)

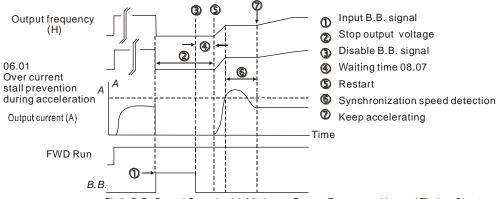


Fig3: B.B. Speed Search with Minimum Output Frequency Upward Timing Chart

08.07 Speed Tracking Delay Time

Default: 0.5

Settings 0.1–5.0 sec.


- When momentary power loss is detected, the AC motor drive blocks its output and then waits for a specified period of time before resuming operation. Set this parameter to the time that allows the residual voltage at the output side to decrease to 0V before activating the drive again.
- When the external interrupt (B.B.) resets and restarts after fault, you can also use this parameter for speed tracking.

08.08 Speed Tracking Action Level

Default: 150

Settings 30–200%

- Limits the drive output current during the speed tracking.
- When executing the speed tracking, the V/F curve is defined by the settings in Parameter Group 01.

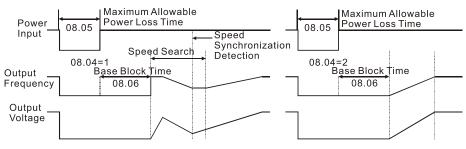


Momentary Power Loss Operation

×	08.09	Skip Frequency 1 Upper Limit
×	08.10	Skip Frequency 1 Lower Limit
×	08.11	Skip Frequency 2 Upper Limit
×	08.12	Skip Frequency 2 Lower Limit
×	08.13	Skip Frequency 3 Upper Limit
×	08.14	Skip Frequency 3 Lower Limit

Default: 0.00

Settings 0.00-400.00 Hz

Sets the AC motor drive's skip frequency. The drive's frequency setting skips these frequency ranges. However, the frequency output is continuous. Set these six parameters as follows Pr.08.09 ≥ Pr.08.10 ≥ Pr.08.11 ≥ Pr.08.12 ≥ Pr.08.13 ≥ Pr.08.14.

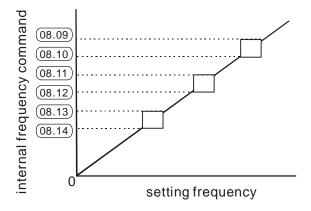

08.15 Number of Times of Restart after Fault

Default: 0

Settings 0–10

- After fault (allowed fault: oc, ov) occurs, the AC motor drive can reset and restart automatically up to 10 times.
- If Pr.08.15 is set to 0, the drive does not reset or restart automatically after faults occur. When the drive restarts after fault, it starts by speed tracking from top to bottom.
- If the number of faults exceeds the Pr.08.15 setting, the drive does not reset and restart until you press "RESET" manually and execute the operation command again.

08.16 Auto-restart Interval of Fault

Default: 60.0

Settings 0.1-6000.0 sec.


- Use this parameter in conjunction with Pr.08.15. When a reset/ restart occurs after a fault, the drive uses Pr.08.16 as a timer and starts counting the number of faults within this time period. Within this period, if the number of faults does not exceed the setting for Pr.08.15, the counting clears and starts from 0 when the next fault occurs.
- If you set Pr.08.15 to 10 and Pr.08.16 to 600 seconds (10 minutes), when there is no fault for over 600 seconds from the restart for the previous fault, the AC motor drive can automatically reset/restart up to ten times.

08.17 Auto-Energy Saving Operation

Default: 0

Settings 0: Disable 1: Enable

When energy-saving is enabled, the motor acceleration/ deceleration operates with full voltage. During constant speed operation, it automatically calculates the best voltage value according to the load power. This function is not suitable for fluctuating loads or loads that are nearly full during operation.

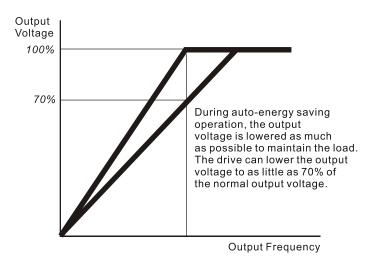

08.18 Automatic Voltage Regulation (AVR) Function

Default: 0

Settings 0: Enable AVR

1: Disable AVR

2: Disable AVR during deceleration

3: Disable AVR at STOP

- The rated voltage of a 220V motor is usually 200 V_{AC}, 60 Hz / 50 Hz, and the input voltage of the AC motor drive may vary from 180–264 V_{AC}, 50 Hz / 60 Hz. Therefore, when the AC motor drive is used without the AVR function, the output voltage is the same as the input voltage. When the motor runs at the voltage exceeding 12–20% of the rated voltage, it causes higher temperatures, damaged insulation, and unstable torque output, which result in losses due to shorter motor lifetime.
- The AVR function automatically regulates the output voltage of the AC motor drive to the motor's rated voltage when the input voltage exceeds the motor's rated voltage. For example, if the V/F curve is set at 200 V_{AC}/ 50 Hz and the input voltage is at 200–264 V_{AC}, then the drive automatically reduces the output voltage to the motor to a maximum of 200 V_{AC}/ 50 Hz. If the input voltage is at 180–200 V_{AC}, the output voltage to motor is in direct proportion to the input voltage.
- When the motor ramps to stop, disable the AVR function to shorten the deceleration time. Then, use with the auto-acceleration and auto-deceleration functions to make the motor's deceleration more stable and quicker.

08.19 Reserved

Default: 0.0

Settings 0.0-5.0

The drift current occurs in a specific zone of the motor and it causes serious motor vibration. Adjust this parameter could greatly improve this situation. (The drift current zone for high-power motors is usually in the low frequency area.) The recommended setting value is 2.0.

09 Communication Parameters

Serial interface

1: NC 5: SG+ 2: Vcc 6-7: NC

3: GND 8: Vcc 4: SG- Note: NC: Not Connect VCC: Power GND: Grounded

✓ You can set this parameter during operation.

Communication Address

Default: 1

Settings 1-254

Sets the communication address for the drive if the AC motor drive is controlled through RS-485 serial communication. The communication address for each AC motor drive must be unique.

✓ 09.01 Communication Transmission Speed

Default: 1

Settings 0: Baud rate 4800 bps

1: Baud rate 9600 bps

2: Baud rate 19200 bps 3: Baud rate 38400 bps

☐ Sets the transmission speed of RS-485 serial communication.

N 09.02 Communication Fault Treatment

Default: 3

Settings 0: Warn and continue operation

1: Warn and ramp to stop

2: Warn and coast to stop

3: No Warn and continue operation

Determines the drive action when a transmission fault occurs.

✓ 09.03 Communication Time-Out Detection

Default: 0.0

Settings 0.0–120.0 sec.

Sets the detection time for communication time-out. When there is no data transmission during the setting time of Pr.09.03, it means the communication time-out. If you set Pr.09.02 to 0–2, then the digital keypad shows "cE10".

Communication Protocol

Default: 0

Settings 0: 7, N, 2 for ASCII

1: 7, E, 1 for ASCII

2: 7, O, 1 for ASCII

3: 8, N, 2 for RTU

4: 8, E, 1 for RTU

5: 8, O, 1 for RTU

6: 8, N, 1 for RTU

7: 8, E, 2 for RTU

8: 8, O, 2 for RTU

9: 7, N, 1 for ASCII

10: 7, E, 2 for ASCII

11: 7, O, 2 for ASCII


- Computer Link: When using the RS-485 serial communication interface, you must specify each drive's communication address in Pr.09.00. The computer then implements control using the drives' individual addresses.
- The VFD-EL-W series drive uses Modbus networks communication protocol. The Modbus uses one of the following two modes: ASCII (American Standard Code for Information Interchange) or RTU (Remote Terminal Unit). The ASCII mode transfers the data into corresponded ASCII code before transmission; meanwhile, the RTU directly transmits the data without translation. The followings are descriptions for ASCII mode:
- The CPU delays about 1 second when using the communication reset; therefore, there is at least 1 second delay time in the master station.
- Each 8-bit data is the combination of two ASCII characters. For example, one byte of data: 64 Hex, shown as '64' in ASCII, consists of '6' (36Hex) and '4' (34Hex). The following table is the ASCII characters:

Character	'0'	'1'	'2'	'3'	'4'	' 5'	'6'	'7'
ASCII code	30H	31H	32H	33H	34H	35H	36H	37H
	<u> </u>							
Character	'8'	'9'	'A'	'B'	Ċ,	'Ď'	Ě	'F'


Data Format


For ASCII

(7, N, 2)

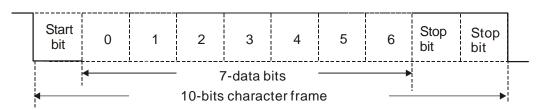


(7, E, 1)

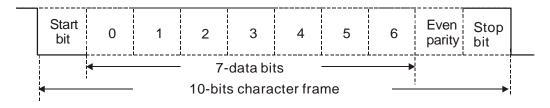

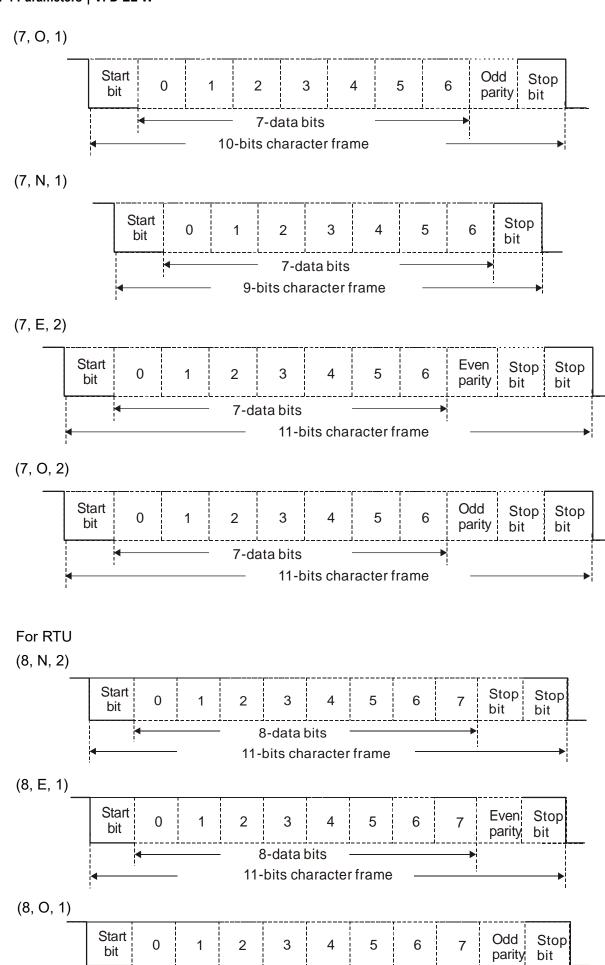

8-data bits

11-bits character frame

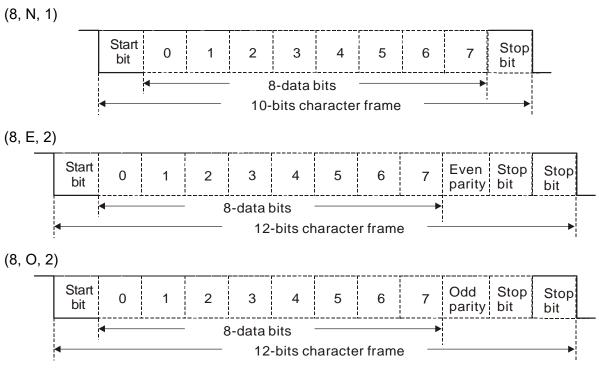

Communication Protocol

3.1 Communication Data Frame

ASCII mode:

STX	Start character = ':'(3AH)
Address High	Communication address:
Address Low	one 8-bit address consists of 2 ASCII codes
Function High	Command code:
Function Low	one 8-bit command consists of 2 ASCII codes
DATA (n-1)	Contents of data:
	n x 8-bit data consists of 2n ASCII codes
DATA 0	n ≤ 20, maximum of 40 ASCII codes (20 sets of data)
LRC Check High	LRC checksum:
LRC Check Low	one 8-bit checksum consists of 2 ASCII codes
END High	End characters:
END Low	END High = CR (0DH), END Low = LF (0AH)

RTU mode:

START	A silent interval of more than 10 ms				
Address	Communication address: 8-bit binary address				
Function	Command code: 8-bit binary command				
DATA (n-1)	Contents of data.				
	Contents of data:				
DATA 0	–n×8-bit data, n ≤ 40 (20 x 16-bit data).				
LRC Check Low	CRC checksum:				
LRC Check High	one 16-bit CRC checksum consists of 2 8-bit binary characters				
END	A silent interval of more than 10 ms				

Chapter 4 Parameters | VFD-EL-W

3.2 Communication Address (Address)

00H: Broadcast to all AC motor drives

01H: AC motor drive at address 01

0FH: AC motor drive at address 15

10H: AC motor drive at address 16, and so on up to 254 (FEH).

3.3 Function (Function code) and DATA (Data characters)

03H: Read data from register

06H: Write single register

08H: Loop detection

Function code 03H: read data from registers (multi-read up to 20 data)

Example: Reading two continuous data from register address 2102H. AMD address is 01H.

ASCII mode:

Command Message

Response Message

	<u> </u>	•	•
STX		STX	·.·
Address	,0,	Address	'0'
Address	'1'	Address	'1'
Function	,0,	Function	'0'
Function	'3'	Function	'3'
	'2'	Number of data	'0'
Chautius addus a	'1'	(count by byte)	'4'
Starting address	·0'		'1'
	'2'	Content of starting address 2102H	'7'
	,0,		'7'
Number of data	·0'		'0'
(count by word)	·0'		'0'
	'2'	0 1 1 5 11 040011	'0'
L DO Ob a ale	'D'	Content of address 2103H	'0'
LRC Check	'7'		'0'
END	CR	LDC Charle	'7'
	LF	LRC Check	'1'
		END	CR
		END	LF

RTU mode:

Command Message

Response Message

Address	01H
Function	03H
Starting data address	21H

Address	01H
Function	03H
Number of data	0.411
(count by byte)	04H

Command Message

	02H	
Number of data	00H	
(count by word)	02H	
LRC Check Low	6FH	

F7H

Response Message

Content of data address	17H
2102H	70H
Content of data address	00H
2103H	00H
LRC Check Low	FEH
LRC Check High	5CH

Function code 06H: write single register (can write up to 20 data to the register at the same time)

Example: Writing data 6000 (1770H) to register 0100H. AMD address is 01H.

ASCII mode:

LRC Check High

Command Message

Response Message

		. Koopenee Medaage	
STX	.,,	STX	٠.,
Address	·0'	A d dua a a	' 0'
Address	'1'	Address	'1'
Function	,0,	Function	'0'
Function	'6'	Function	'6'
	,0,		'0'
Data addraga	'1'	Data address	'1'
Data address	,0,	Data address	'0'
	,0,		'0'
	'1'		'1'
Data contout	'7'	Data content	'7'
Data content	'7'	Data content	'7'
	,0,		'0'
LRC Check	'7'	LPC Chook	'7'
	'1'	LRC Check	'1'
END	CR	END	CR
	LF	END	LF

RTU mode:

Command Message

Response Message

ADR	01H	ADR	01H
CMD	H80	CMD	08H
Dete	00H		00H
Data	00H	Data	00H
Data	17H	Data	17H
Data	70H	Data	70H
LRC Check Low	8EH	LRC Check Low	8EH
LRC Check High	0EH	LRC Check High	0EH

(1) ASCII mode (LRC Check):

LRC (Longitudinal Redundancy Check) is calculated by summing up the values of the bytes from ADR1 to the last data character then calculating the hexadecimal representation of the 2's-complement negation of the sum. Take the above 3.3.1 Command Message for example: 01H + 03H + 21H + 02H + 00H + 02H = 29H, take complementary number of 2 = D7H LRC (Longitudinal Redundancy Check) is calculated from Address to Data content. It is calculated by the following steps:

- Step 1: Load a 16-bit register (called CRC register) with FFFH.
- Step 2: Exclusive OR the first 8-bit byte of the command message with the low order byte of the 16-bit CRC register, and put the result in the CRC register.
- Step 3: Examine the LSB of CRC register.
- Step 4: If the LSB of CRC register is 0, shift the CRC register one bit to the right, fill MSB with zero, then repeat step 3. If the LSB of CRC register is 1, shift the CRC register one bit to the right, fill MSB with zero, Exclusive OR the CRC register with the polynomial value A001H, then repeat step 3.
- Step 5: Repeat step 3 and 4 until you perform eight shifts. This processes a complete 8-bit byte.
- Step 6: Repeat step 2 through 5 for the next 8-bit byte of the command message. Continue doing this until all bytes are processed. The final contents of the CRC register are the CRC value. When transmitting the CRC value in the message, the upper and lower bytes of the CRC value must be swapped, that is, the lower order byte is transmitted first.

The following is an example of CRC generation using C language. The function takes two arguments:

Unsigned char* data ← a pointer to the message buffer

Unsigned char length ← the quantity of bytes in the message buffer

The function returns the CRC value as a type of unsigned integer. Unsigned int crc_chk(unsigned char* data, unsigned char length)

```
{
int j;
unsigned int reg_crc=0xffff;
while(length--){
  reg_crc ^= *data++;
  for(j=0;j<8;j++){
    if(reg_crc & 0x01){     /* LSB(b0)=1 */
        reg_crc=(reg_crc>>1) ^ 0xa001;
    }else{
        reg_crc=reg_crc>>1;
```

```
}
}
return reg_crc;
```

// return register CRC

Address list

Content	Parameter Address	Function			
AC motor drive	GGnnH	GG is the parameter group, nn is the parameter number. For			
parameters		-	ne address of Pr.04.10 is 0401H.		
Command write only	2000H	bit0–1	00B: No function		
,		_	01B: Stop		
			10B: Run		
			11B: JOG + RUN		
		bit2-3	Reserved		
		bit4–5	00B: No function		
			01B: FWD		
			10B: Direction reverse		
			11B: Change direction		
		bit6–7	00B: 1st step accel./decel.		
			01B: 2nd step accel./decel.		
		bit8-15	Reserved		
	2001H	Frequency	command		
	2002H	bit0	1: EF ON		
		bit1	1: Reset command		
		bit2	1: Base Block (B.B) ON		
		bit3–4 bit6–15	Reserved		
E E: NA		1.75	00B: No function		
Enable Fire Mode		bit5	01B: Start Fire Mode (without RUN command)		
Status monitor read only	2100H	Error code			
		0: No fault record			
		1: Over-cur	rent (oc)		
		2: Over-volt	tage (ov)		
		3: IGBT ove	er-heat (oH1)		
		4: Low volta	age (Lv)		
		5: Drive ove	er-load (oL)		
		6: Electroni	cs thermal relay 1 protection (oL1)		
		7: Motor overload (oL2)			
		8: External fault (EF)			
		9: Over-cur	rent during acceleration (ocA)		
		10: Over-cu	rrent during deceleration (ocd)		
		11: Over-current at constant speed (ocn)			
		12: Reserve	12: Reserved		
		13: Reserved			
		14: Phase I	14: Phase loss (PHL)		

Content	Parameter Address		Function	
	7 144 417 5 5 5	15: Reserved		
		16: Auto-acceleration / auto-deceleration failure (cFA)		
			e or password protection (codE)	
		18: Write er	. , ,	
		19: Read er		
			on circuit error (HPF1)	
			on circuit error (HPF2)	
			22: Reserved	
		23: Protecti	on circuit error (HPF4)	
			e hardware error (cF3.0)	
		-	e hardware error (cF3.1)	
		•	e hardware error (cF3.2)	
			hardware error (cF3.3)	
			rdware error (cF3.4)	
		29: Reserve	ed	
		30: Reserve	ed	
		31: Reserve	ed	
		32: Analog	feedback signal error (AErr)	
		33: Reserve	ed	
		34: Motor P	TC overheating protection (PTC1)	
		35: PID fee	dback fault (FbE)	
		36: PID feedback error (dEv)		
		37: Output	37: Output phase loss (oPHL)	
		38: Therma	I cutout triggered (HotP)	
		39: Reserve	ed	
		40: Reserve	ed	
	2101H	bit 0–1	LED status of digital keypad	
			00B: RUN LED is OFF, STOP LED is ON (the drive	
			stops)	
			01B: RUN LED flashes, STOP LED is ON (when drive	
			decelerates to stop)	
			10B: RUN LED is ON, STOP LED flashes (the drive is	
			standby)	
			11B: RUN LED is ON, STOP LED is OFF (the drive runs)	
		bit 2	1: JOG command	
		bit 3–4	00B: FWD light is ON, REV light is OFF (the drive runs	
			in a forward direction)	
			01B: FWD light is ON, REV light flashes (when the	
			drive changes the running direction from REV to FWD)	
			10B: FWD light flashes, REV light is ON (when the	
			drive changes the running direction from FWD to	
			REV)	
			11B: FWD light is OFF, REV light is ON (the drive runs	
			in a reverse direction)	
		bit 5–7	Reserved	
		bit 8	1: Master frequency controlled by the communication	

Content	Parameter Address		Function
			interface
		bit 9	Master Frequency command controlled by analog signal input
		bit 10	Operation command controlled by the communication interface
		bit 11–15:	Reserved
	2102H	Frequency command (F)	
	2103H	Output frequency (H)	
	2104H	Output current (XX.XA)	
	2105H	Reserved	
	2106H	Reserved	
	2107H	Reserved	
	2108H	DC bus voltage (XXX.X V)	
	2109H	Output voltage (XXX.X V)	
	210AH	IGBT temperature (°C)	
	2116H	User-defined (Low word)	
	2117H	User-defined (High word)	

NOTE:

2116H is the number display for Pr.00.04. The high byte of 2117H is the number of decimal places for 2116H. The low byte of 2117H is the ASCII code of the alphabetic display for Pr.00.04.

Exception response:

When the drive is using the communication connection, if an error occurs, the drive responds to the error code and sets the highest bit (bit 7) of the command code to 1 (function code AND 80H) then responds to the control system to signal that an error occurred. If the keypad displays "CEXX" as a warning message, "XX" is the error code at that time. Refer to the table of error codes for communication error for reference.

The following table shows some examples:

ASCII mode:

STX	·.•
Address	' 0'
Address	'1'
Function	'8'
FullClion	'6'
Evention and	' 0'
Exception code	'2'
LRC Check	'7'
LRC Check	'7'
END	CR
END	LF

RTU mode:

Address	01H
Function	86H
Exception code	02H
LRC Check Low	СЗН
LRC Check High	A1H

Table of fault codes:

Fault code	Descriptions
01	Illegal function code: the drive cannot recognize the function code (03H, 06H,
	08H, 10H).
02	Illegal data address: the drive cannot recognize the data address.
03	Illegal data value: the data value received in the command message is not
	available for the drive.
04	Slave device failure: the drive is unable to perform the requested action.
10	Transmission time-out

Communication program of PC:

The following is a simple example of how to write a communication program for Modbus ASCII mode on a PC by C language.

```
#include<stdio.h>
#include<dos.h>
#include<conio.h>
#include<process.h>
#define PORT 0x03F8 /* the address of COM1 */
/* the address offset value relative to COM1 */
#define THR 0x0000
#define RDR 0x0000
#define BRDL 0x0000
#define IER 0x0001
#define BRDH 0x0001
#define LCR 0x0003
#define MCR 0x0004
#define LSR 0x0005
#define MSR 0x0006
unsigned char rdat[60];
/* read 2 data from address 2102H of AC drive with address 1 */
unsigned char tdat[60]={':' · '0' · '1' · '0' · '3' · '2' · '1' · '0' · '2' · '0' · '0' · '2' · 'D' · '7' · '\r' · '\n'};
void main(){
  int i;
  outportb(PORT+MCR · 0x08); /* interrupt enable */
  outportb(PORT+IER · 0x01);
                                          /* interrupt as data in */
  outportb(PORT+LCR · (inportb(PORT+LCR) | 0x80));
    /* the BRDL/BRDH can be access as LCR.b7==1 */
  outportb(PORT+BRDL · 12);
                                          /* set baudrate=9600 · 12=115200/9600*/
  outportb(PORT+BRDH · 0x00);
  outportb(PORT+LCR · 0x06);
                                          /* set protocol · <7 · N · 2>=06H ·
```

09.05 Reserved


09.06 Reserved

✓ 09.07 Communication Response Delay Time

Default: 1

Settings 0–200 (Unit: 2 ms)

If the host controller does not finish the transmitting/receiving process, you can use this parameter to set the response delay time after the AC motor drive receives communication command as shown in the following picture.

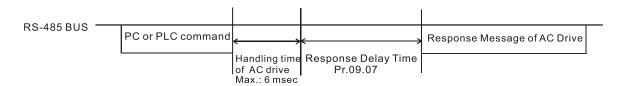

✓ 09.08 Communication Keypad Selection

Default: 0

Settings 0: PU06 1: PU08

After changing the communication method, you need to power off and reboot the drive, or unplug the keypad and plug it in again to establish new communication.

10 PID Control Parameters

✓ You can set this parameter during operation.

10.00 PID Set Point Selection

Default: 0

Settings 0: PID function disabled

1: Digital keypad

2: Reserved

3: Reserved

4: PID reference target value (Pr.10.11)

- Set Pr.00.03 = 3 and 00.04 = 8 for feedback value to display the PID set point on the control panel at the same time.
- When Pr.10.00 is set to 1 and operated by the keypad, adjust the set point by pressing the up/down keys directly on any display interface if you need to set the set point.
- When Pr.10.00 is set to 4, the setting range of Pr.10.11 is limited by the maximum operating frequency of Pr.01.00. The maximum frequency value of 01.00 is the maximum value of the physical quantity to the set point corresponds to the maximum range of the physical quantity measured by the sensor (set in Pr.10.18).
- If the set and displayed target value directly correspond to physical quantities such as pressure, temperature, flow, etc., you also need to set Pr.00.13 and Pr.00.14 at the same time. For example, when the maximum range of the set point set as 16.0 bar, you also need to set Pr.00.13 = 160, 00.14 = 1.
- The target physical quantity corresponding to the frequency set by Pr.10.11 = (Pr.10.11/ Pr.01.00) \times Pr.00.13 \times 10^{-(Pr.00.14)}. For example, Pr.10.11 = 20 Hz, Pr.01.00 = 50 Hz, Pr.00.13 = 160, Pr.00.14 = 1, then the target physical quantity = 20 / 50 \times 160 \times 0.1 = 8.0.
- The following table shows the set point physical quantity and the operating frequency of the drive, sensor feedback value correspond to the physical quantity, set point setting method and relationship.

Corresponded Relation	Set Point Physical Quantity	Corresponded Drive Operation Frequency	Sensor Feed Value Corresponding to the Physical Quantity	PID Se	t Point
Parameter Setting	Pr.00.13 = 160 Pr.00.14 = 1	Pr.00.02 = 9 Pr.01.00 = 50	Pr.10.18 = 16.0	Pr.10.00 = 1 Keypad up/down keys	Pr.10.00 = 4 Pr.10.11 = 50
Lower Limit	0	0	0	0	0
Upper Limit	16.0	50	16.0	16.0	16.0

10.01 Input Terminal for PID Feedback

Default: 0

Settings 0: Positive PID feedback from external terminal AVI (0–10 V_{DC})

1: Negative PID feedback from external terminal AVI (0–10 V_{DC})

2: Positive PID feedback from external terminal ACI (4–20 mA)

3: Negative PID feedback from external terminal ACI (4–20 mA)

Select the input terminal as the PID detection terminal, and note that the master frequency source

	cannot	be the sam	ne.				
	Negative	∕e feedbacl	k: Error = Target	value (set point) -	- Feedback. U	se negative fee	dback when the
	detection	on value ind	creases if the ou	tput frequency inc	creases.		
	Positive	e feedback:	: Error = - Target	t value (set point)	+ Feedback. l	Jse positive fee	dback when the
	detection	on value de	ecreases if the o	utput frequency in	creases.		
N	10.11	PID Tar	get Value				
					[Default: 0.00	
		Settings	0.00-400.00 H	Ηz			
	Sets the	e target val	lue when Pr.10.0	00 (PID Set Point	Selection) is s	et to 4.	
N	10.02	Proporti	ional Gain (P)				
		_			D	efault: 1.0	
		Settings	0.0–10.0				
	Gain P	responds t	o the degree of	deviation, and the	deviation is re	educed proporti	onally by setting
	this par	ameter.					
	Increas	ing Gain P	can speed up	the system respo	nse and reduc	ce the steady-s	tate error. But if
	•		•	cause overshoot a	•		•
	•		the setting valu	ie may slow down	the system re	esponse, but it o	can increase the
	•	stability.		15)			
	☐ If you s	et the othei	r two gains (I and	d D) to zero, propo	ortional control	is the only effe	ctive parameter.
N	10.03	Integral	Time (I)				
					Γ	Default: 1.00	
		Settings					
		•		nate the deviation	_	•	_
				til the deviation is			
				, the stronger the ir	•	•	
			•	m. Accordingly, th often used with the	•	-	
	controll		tegral control is t	onten usea with the	ouiei two coi	III OIS IOI IIIE FI	
			ime of the I contr	roller. When the in	tegral time is l	ong, there is a	small I controller
		•		low external contro	•		
	large I	controller g	jain, with faster r	esponse and rapid	d external con	trol.	
	When t	he integral	time is too short	t, it may cause ove	ershoot or osc	illation for the c	output frequency
	and sys	stem.					
	☐ Set Inte	gral Time t	to 0.00 to disable	e the I controller.			
N	10.04	Differen	ntial Time (D)				
						Default: 0.00	
		Settings	0.00-1.00 sec).			
	₩ Use the	e differentia	al controller to s	show the system	deviation cha	nge, as well as	to preview the

to improve the system state. Using a suitable differential time can reduce overshoot and shorten

adjustment time; however, the differential operation increases noise interference. Note that a too large differential causes more noise interference. In addition, the differential shows the change and the differential output is 0 when there is no change. Note that you cannot use the differential control independently. You must use it with the other two controllers for the PD controller or PID controller.

- Sets the D controller gain to determine the deviation change response. Using a suitable differential time reduces the P and I controllers overshoot to decrease the oscillation for a stable system. A differential time that is too long may cause system oscillation.
- The differential controller acts on the change in the deviation and cannot reduce the interference.

 Do not use this function when there is significant interference.

10.05 Upper Limit of Integral Control

Default: 100

Settings 0-100%

- Defines an upper bound for the integral gain (I) and therefore limits the master frequency. The formula is: Integral upper bound = Maximum Operation Frequency (Pr.01.00) × (Pr.10.05 %).
- An excessive integral value causes a slow response due to sudden load changes and may cause motor stall or machine damage. If so, decrease it to a proper value.


10.06 PID Delay Time

Default: 0.0

Settings 0.0-2.5 sec.

The PID delay output reduces the system oscillation.

PID Control:

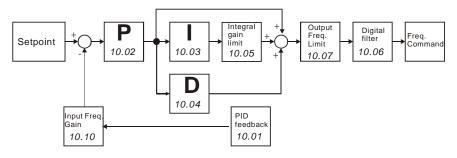

10.07 PID Output Frequency Limit

Default: 100

Settings 0-110%

Defines the percentage of the output frequency limit during the PID control. The formula is Output Frequency Limit = Maximum Operation Frequency (Pr.01.00 × Pr.10.07%).

10.08 PID Feedback Signal Error Deviation Detection Time

Default: 60.0

Settings 0.0-3600.0 sec.

Defines the detection time when the PID feedback ACI signal is abnormal. You can also use it when the system feedback signal response is extremely slow. (Setting the detection time to 0.0 disables the detection function.)

10.09 PID Feedback Signal Error Treatment

Default: 0

Settings 0: Warn and ramp to stop

1: Warn and coast to stop

2: Warn and continue operation

Sets the treatments when the PID feedback signal (such as ACI analog signal) is abnormal.

10.10 PID Detection Value Gain

Default: 1.0

Settings 0.0-10.0

Sets the gain adjustment over the feedback detection value, use this parameter to adjust the deviation between the set point and the feedback signal value.

10.12 PID Feedback Signal Error Deviation Level

Default: 10.0

Settings 0.0-100.0%

10.13 PID Feedback Signal Error Deviation Detection Time

Default: 5.0

Settings 0.1–300.0 sec.

- The base for Pr.10.12 is Pr.01.00. When the PID feedback control is enabled, and (PID set point source feedback) is larger than Pr.10.12, and the time exceeds the Pr.10.13 setting, then the multi-function output terminal #16 (PID Feedback Error) displays as a warning and acts according to Pr.10.20 settings.
- When you set Pr.10.12 to 0, the PID feedback error detection function is disabled.

10.17 PID Offset

Default: 0.00

Settings 0.00–60.00 Hz

Selects the minimum output frequency in the PID control mode according to your applications.

10.14 Sleep Detection Time

Default: 0.0

Settings 0.0–6550.0 sec.

10.15 Sleep Frequency

Default: 0.00

Settings 0.00–400.00 Hz


10.16 Wake-up Frequency

Default: 0.00

Settings 0.00–400.00 Hz

- Sleep mode setting requirements:
 - PID function must be enabled when using Sleep mode.
 - The wake-up frequency Pr.10.16 setting must be higher than the sleep frequency Pr.10.15, and ensure that there must be an appropriate difference between them (5 Hz or above) to

- prevent frequent switching between the two frequency status.
- The sleep frequency Pr.10.15 setting must be higher than the Pr.01.08 output frequency lower limit to prevent being limited for sleep mode.
- The sleep frequency Pr.10.15 setting must be higher than the Pr.01.05 minimum output frequency.
- Sleep/ wake-up mode status description for the AC motor drive:
 - When the actual output frequency H < Pr.10.15 and the time exceeds the Pr.10.14 setting, the AC motor drive no longer outputs and is in sleep mode after the AC motor drive decelerates to Pr.01.05 minimum output frequency following the deceleration time limit (Pr.10.15).
 - When the AC motor drive is in sleep mode, the frequency command F is still calculated by PID.
 The state of the wake-up shows as the following diagram.
 - 1. Before the frequency command F calculated by the PID reaches the wake-up frequency Pr.10.16, the AC motor drive is in sleep mode, and the output frequency H is 0 Hz. The duration of this period of time is affected by the PID parameters (Pr.10.02, Pr.10.03, and Pr.10.04).
 - 2. When the frequency command F calculated by the PID reaches the wake-up frequency Pr.10.16, the AC motor drive output frequency H accelerates from Pr.01.05 minimum output frequency to Pr.10.16 wake-up frequency following the V/F curve.
 - 3. When the actual output frequency H of the AC motor drive accelerates to Pr.10.16 wakeup frequency, control the AC motor drive output frequency H by PID.

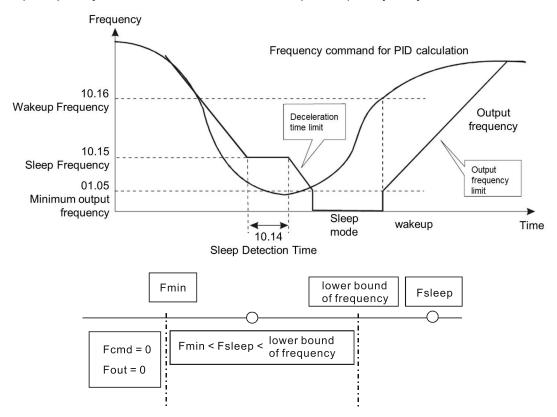

- When the PID function is enabled and the sleep mode is disabled:
 - If Pr.01.08 > Pr.01.05, the lower limit of the drive output frequency H is limited by Pr.01.08.
 - If Pr.01.08 ≤ Pr.01.05, the lower limit of the drive output frequency H is limited by Pr.01.05.
 When it reaches Pr.01.05, the drive stops output and is in ready status.

10.18 PID Feedback Physical Quantity

Default: 99.9

Settings 1.0-99.9

- Pr.10.18 set value is the conversion base of the corresponding relationship between the sensor feedback analog quantity and the feedback physical quantity, and usually set to the maximum value of the sensor input range physical quantity.
- Select Pr.10.01 value according to the sensor output signal type 0–10 V/ 4–20 mA and specific control requirements.
 - The sensor output range is 4–20 mA, the feedback physical quantity = (sensor measurement feedback current 4) ÷ (20 4) × Pr.10.18.
 - The sensor output range is 0–10 mA, the feedback physical quantity = (sensor measurement feedback voltage - 0) ÷ (10 - 0) × Pr.10.18.
 - For example, the pressure sensor range is 0–16.0 bar, and the corresponding output range is 4–20 mA. When the Pr.10.18 is set to 16.0 and the sensor's actual measurement output is 12 mA, the actual feedback physical quantity = (12 4) ÷ (20 4) × 16.0 = 8.0 bar, the corresponding relationship is shown in the table below.
- Set Pr.00.03 = 3 and Pr.00.04 = 8 to display the actual feedback physical quantity on the digital keypad. And the physical quantity correspond to the feedback value displayed on the right side of ":". Refer to Pr.00.04 description for more details.

Corresponded Relation	Sensor Fee	Feedback Value Corresponds to the Physical	
Parameter	ACI	AVI	Quantity
Setting	Pr.10.01 = - 2 or 3	Pr.10.01 = - 0 or 1	Pr.10.18 = 16.0
Lower Limit	4 mA	0 V	0 bar
Medium value	12 mA	5 V	8.0 bar
Upper Limit	20 mA	10 V	16.0 bar


10.19 PID Calculation Mode Selection

Default: 0


Settings 0: Serial connection

1: Parallel connection

Serial connection

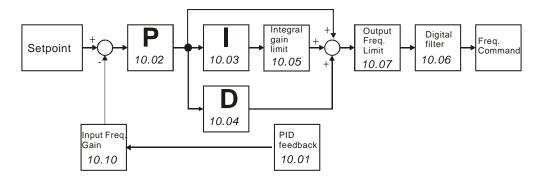

Parallel connection

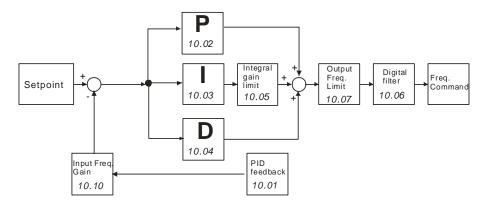

10.20 PID Error Deviation Treatment

Default: 0

Settings 0: Warn and continue operation (no treatment)

- 1: Warn and coast to stop
- 2: Warn and ramp to stop
- 3: Coast to stop and restart after Pr.10.21 delay time (no warning)
- 4: Ramp to stop and restart after Pr.10.21 delay time. The number of times of restart is limited by Pr.10.50
- In PID control mode, the AC motor drive acts according to this parameter when it detects PID feedback deviation level occurs (Pr.10.12 and Pr.10.13).

10.21 PID Error Deviation Restart Delay Time

Default: 60

Settings 0-9999 sec.

X 10.22 Set Point Deviation Level

Default: 0

Settings 0–100%

X 10.23 Set Point Stop Detection Time

Default: 10

Settings 0-9999 sec.

Pr.10.22 is based on the PID set point. If the deviation is less than Pr.10.22 and exceeds the time set in Pr.10.23, the drive decelerates to stop to be constant pressure status (this deceleration time is based on the setting for Pr.01.12). If the deviation is still in the range of the error set during deceleration to stop, the system is in standby status.

Example:

If the set point of constant pressure control of a pump is 4 kg, Pr.10.22 is set to 5%, Pr.10.23 is set to 15 seconds, then the deviation is 0.2 kg (4 kg × 5% = 0.2 kg). It means when the feedback value is higher than 3.8 kg for a time exceeding 15 seconds, the AC motor drive decelerates to stop, this deceleration time acts according to Pr.01-12. When the feedback value is less than 3.8 kg, the AC motor drive starts to run.


M 10.24 Deviation Level of Liquid Leakage

Default: 0

Settings 0-50%

- This parameter is based on the PID set point. When the drive does not run and is in a constant pressure status, and if the deviation is higher than Pr.10.24 due to liquid leakage (minor pressure loss), the AC motor drive starts to run.
- Use this parameter to avoid the drive frequent start-up and stop due to liquid leakage (minor pressure loss).

Liquid Leakage Deviation Level Detection

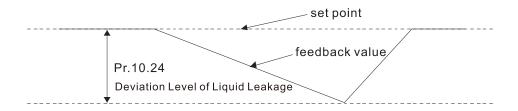

10.25 Liquid Leakage Change Detection

Default: 0


Settings 0: Disable 0–100%

10.26 Liquid Leakage Change Detection Time

Default: 0.5

Settings 0: Disable 0.1–10.0 sec.

- Pr.10.25 and Pr.10.26 define the variation of the feedback value within a time unit in the case of liquid leakage (minor pressure loss).
- Pr.10.25 sets the variation of the feedback value based on the PID set point; Pr.10.26 is the setting value within a time unit. If the variation of the feedback value is less than the settings for Pr.10.25 and Pr.10.26, the liquid leakage occurs. When the drive does not run and is in a constant pressure status, and if the variation of the feedback value is higher than the settings for Pr.10.25 and Pr.10.26, the AC motor drive starts to run in order to keep the system stable.
- Liquid Leakage/ Usage Deviation Level Detection

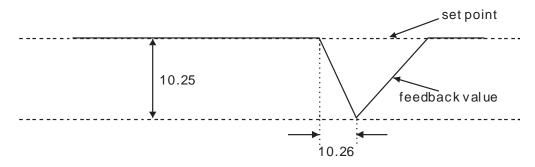

Example:

If the set point of constant pressure control of a pump is 4 kg, Pr.10.22 is set to 5%, Pr.10.23 is set to 15 seconds, Pr.10.24 is set to 25%, Pr.10.25 is set to 3% and Pr.10.26 is set to 0.5 seconds,

then the deviation is 0.2 kg (4 kg × 5% = 0.2 kg). It means when the feedback value is higher than 3.8 kg for a time exceeding 15 seconds, the AC motor drive decelerates to stop, this deceleration time acts according to Pr.01.12.

Case 1: Assume that when the AC motor drive does not run and is in a constant pressure status, the variation of the feedback value is less than 0.12 kg (4 kg \times 3% = 0.12 kg) within 0.5 second. When the feedback value continues to decrease to make the deviation of the set point be less than 1 kg (4 kg \times 25% = 1 kg), that is, when the feedback value is less than 3 kg, the AC motor drive starts to run.

Case 2: When the AC motor drive is in constant pressure status, it does not operate until the feedback change value exceeds 0.12 bar within 0.5 seconds, which means the AC motor drive starts operating when the feedback value is less than 3.88 bar within 0.5 seconds.

10.27	Reserved
10.28	Reserved
10.29	Reserved
10.30	Reserved
10.31	Reserved
10.32	Reserved
10.33	Reserved

10.35 Multi-pump Operation Mode

Default: 0

Settings 0–2

00: Disable

01: Fixed time circulation (alternative operation)

02: Fixed quantity control (multi-pump operating at constant pressure)

When using the multi-pump control mode, you must set Pr.10.35 for each pump to the same value.

10.36 Multi-pump ID

Default: 0

Settings 0-4

0: Disable multi-pump function

1: Master

2-4: Slave

When using the multi-pump control mode, the settings of each pump for Pr.10.36 cannot be the same.

Multi-pump Fixed Time Circulation Period

Default: 60

Settings 1-65535 min.

- Fixed time circulation mode (alternative operation): Assume that when pump #1's operating time is longer than the setting for Pr.10.37, pump #1 stops, and then pump #2 activates, and so on.
- Fixed quantity control (multi-pump operating at constant pressure): Assume that when the master

switch alternatively. This parameter is only valid for master pump settings. Pump Switching Start-up Frequency Default: 60 Settings 0.00 Hz-Fmax 10.39 Pump Reaches Start-Up Frequency Detection Time Default: 1.0 Settings 0.0–3600.0 sec. 10.40 Pump Switching Stop Frequency Default: 48.00 Settings 0.00 Hz-Fmax 10.41 Pump Reaches Switching Stop Frequency Detection Time Default: 1.0 Settings 0.0–3600.0 sec. This parameter is only valid for master pump settings. This parameter is only valid for fixed quantity control (multi-pump operating at constant pressure) mode. When master pump operation frequency ≥ Pr.10.38 and the time exceeds the setting in Pr.10.39, activate the next pump; if the water is still insufficient, activate the third, the forth pump according to the same conditions. When master pump operation frequency ≤ Pr.10.40 and the time exceeds the setting in Pr.10.41, deactivate the first slave pump; if the master pump still fulfills the conditions, deactivate pump #2, pump #3 in sequence, and leave the master pump in operation only. Whether the master pump stops depends on the stopping detection function. Pump's Frequency at Time-Out (Disconnection) Default: 0.00 Settings 0.0–Fmax This parameter is only valid for Slave pump. Refer to Pr.09.02 (COM1 transmission fault handling) and Pr.09.03 (COM1 time-out detection) for the communication failure conditions and fault handling. If a disconnection occurs in the fixed quantity control (multi-pump operating at constant pressure), the frequency command of slave pump is Pr.10.42; the slave pump is in standalone mode after STOP commend is given. (Set the RUN command and operation frequency by the slave pump parameters.) **10.43** Pump Fault Treatment Default: 1

pump's operating time is longer than the setting for Pr.10.37, the master pump and the slave pump

bit 0: When the operating pump is failed, whether it switches to an alternative pump or not

Settings bit0-bit2

This parameter is only valid for master pump settings.

- 0: Stop all pump action
- 1: Switch to an alternative pump

Example: bit0 = 0, when an error occurs to the running pump, all pumps stop.

bit0 = 1, when an error occurs to the running pump, switch the erroneous pump to an alternative one.

- it 1: During the operation, stop or standby after resetting from error
 - 0: Set the erroneous pump to be in a standby status after reset (the pump receives the RUN command)
 - 1: Set the erroneous pump to be in a stop status after reset (the pump does not receive the RUN command).

Example: bit1 = 0, after you reset the erroneous pump, it can be set running through the controller

- bit1 = 1, after you reset the erroneous pump, it cannot be set running through the controller until the master pump gives a STOP command.
- bit 2: Whether the master pump receives the RUN command or not when the pump has an error0: The master pump does not receive RUN command when an error occurs to the running

pump

1: The master pump can choose an alternative pump to run when an error occurs to the running pump

Example: bit 2 = 0: when an error occurs to Pump #2, the master pump does not accept the RUN command.

- bit 2 = 1: when an error occurs to Pump #2, the master pump receives the RUN command and chooses to run with an alternative pump.
- This parameter is only valid in AUTO mode.

10.44 Pump Start-Up Sequence Selection

Default: 0

Settings 0-1

0: By pump ID

1: By the operating time

- \square 0: By pump ID $(1 \rightarrow 2 \rightarrow 3 \rightarrow 4 \rightarrow 1)$
- 1: By the shortest operating time

N 10.45 Pump Alternative Operation Time Setting

Default: 60.0

Settings 0.0–360.0 sec.

Sets the time for switching the master pump and the slave pump. This parameter is only valid for master pump settings.

10.46

Reserved

10.48

X 10.49 Setting Method for Pr.10.12

Default: 0

Settings 0: Use the existed setting (default), judging by the feedback deviation

1: Set the low water pressure percentage (%), check for any fault by the feedback physical quantity

- When the pressure sensor is set to 10 kg, set Pr.10.49 = 0 and Pr.10.12 = 10.0% (that is, deviation=1 kg), and if the set point = 3 kg and feedback < 2 kg, then the AC motor drive follows the setting for Pr.10.20.
- When the pressure sensor is set to 10 kg, set Pr.10.49 = 1 and Pr.10.12 = 10.0% (that is, deviation=1 kg), and if the set point = 3 kg and feedback < 1 kg, then the AC motor drive follows the setting for Pr.10.20.

Number of Times of Restart after Fault

Default: 0

Settings 0-1000 times


Sets the number of times of restart after Fault when Pr.10.20 = 4.

4-4 Adjustment and Application

Using PID control in a constant pressure pump feedback application:

Set the application constant pressure value (bar) as PID set point. The pressure sensor sends the actual value as the PID feedback value. After comparing the PID set point and PID feedback, an error displays. The PID controller calculates the output by using proportional gain (P), integral time (I) and differential time (D) to control the pump. It controls the drive to use a different pump speed and achieves constant pressure control.

- The general pressure measuring range of the pressure sensor is 0–10 bar, correspond to 4–20 mA as the drive feedback signal.
- Pressure conversion relation: 0.1 Mpa = 1 bar = 1 kgf-cm²

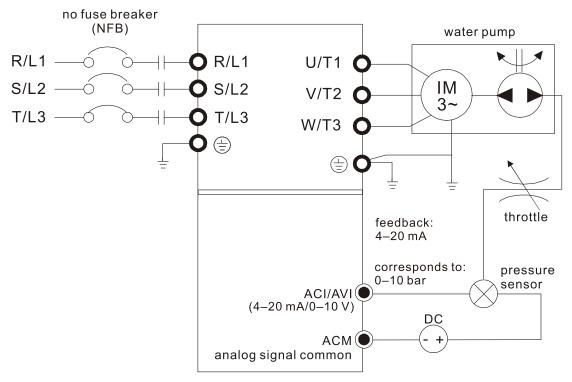

STEP	Functions	Related Parameters	Description			
1	PID Setting	Pr.10.00 PID Set Point Selection Pr.10.01 Input Terminal for PID Feedback	Multi-pump system: the pressure feedback signal only connects to the Master pump, so set the PID for the master pump only.			
2	P, I, D Gain	Pr.10.02 (P) Pr.10.03 (I) Pr.10.04 (D)	Multi-pump system: Each drive has a PID controller. Set the parameters for all drives.			
3	Acceleration and deceleration setting	Pr.01.09 Acceleration Time 1 Pr.01.10 Deceleration Time 1	Multi-pump system: set the acceleration and deceleration time for each drive			
4	Keypad multi- function display	Pr.00.04 Content of Multi-function Display (User-Defined) 5 (Display PID analog feedback signal (b)) 8 (Display the setting values for PID control and feedback signal)	The VFD-EL-W keypad displays the PID setting and physical quantity feedback values. Refer to the following description for parameters			
5	Correspondence setting of frequency and physical quantity	Pr.00.13 User-defined value Pr.00.14 Decimal Places for User- Defined Value Pr.10.18 PID Feedback Physical Quantity	settings. 2. Multi-pump system: set the above related parameters of keypad for each drive.			

STEP	Functions	Related Parameters	Description
6	Stopping detection function	Pr.10.22 Set point deviation level Pr.10.23 Set Point Stop Detection Time Pr.01.12 Deceleration Time 2	Multi-pump system: all drives must have the stopping detection function. Set the related parameters for all drives.
7	Liquid leakage	Pr.10.24 Deviation Level of Liquid Leakage Pr.10.25 Liquid Leakage Change Detection Pr.10.26 Liquid Leakage Deviation Level Detection	All drives must have the restart function for liquid leakage. Set the related parameters for all drives.
8	Sleep/ wake up function	Pr.10.14 Sleep Detection Time Pr.10.15 Sleep Frequency Pr.10.16 Wake-up Frequency	The multi-pump system has its own wheel pump control function, the sleep function is recommended to use only for single pump drive function.
9	Multi-functional pump function	Refer to the following description in "Multi-communication application setting case" for parameters setting according to the functions of the Master and Slave pumps.	

Related parameters for PID set point and feedback value corresponds to the physical quantity

Default: 0

Settings 0: F (frequency command)

1: H (output frequency)

2: A (output current)

3: U (user-defined)4: FWD/REV command

- Determines the start-up display page after power is applied to the drive.
- Gets into the self-check state first when the drive starts-up, after displays "Pon" and flashes for 5 sec., the drive turns to start-up page.

00.04 Content of Multi-function Display (User-Defined)

Default: 0

Settings 5: Display the PID feedback value after enabling the PID function

in %


8: Display the setting value and the feedback of PID control (P)

9: Display AVI analog input terminal signal (1.) (Unit: %)

10: Display AVI analog input terminal signal (1.) (Unit: %)

0000 1 00 2 00

- When Pr.00.03 is set to 3, use Pr.00.04 to select the displayed content as needed.
- When Pr.00.04 = 5, the displayed PID feedback value is the percentage (%) of the terminal measurement range.

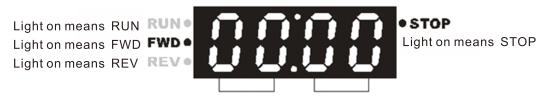

Target value setting display

Feedback physical quantity

Chapter 4 Parameters | VFD-EL-W

	Pr.00.03 = 3 and displays 00:00 (as quantity of PID tar	Pr.00.04 = 8. When the drive reboots after powered off, the start-up screen shown in the figure above). The displayed value on the left of ":" is the physical get value; on the right of ":" shows the sensor output value (0–10V/ 4–20 mA) the actual physical quantity.						
	Refer to Pr.10.00 to set the target value; and Pr.10.18 to set the feedback value.							
	If the set and disp	layed target value directly correspond to physical quantities such as pressure,						
	temperature, flow,	etc., you also need to set Pr.00.13 and Pr.00.14 at the same time.						
	00.13 User-de	fined Value						
		Default: 0						
	Settings	0–9999						
	Corresponds to the	e maximum operation frequency (Pr.01.00)						
	When Pr.00.13 is	not set to zero, "F" automatically disappears in the frequency setting page, and						
	the displayed last	digit blinks. The Up/down key, multi-step speed and JOG function on the keypad						
	all changes ranges	s according to Pr.00.13.						
	When Pr.00.13 is	not set to zero, and the frequency source is communication, use Pr.02.18 to						
	change the freque	ncy command instead of using communication address 2001H.						
	00.14 Decima	l Places for User-Defined Value						
		Default: 0						
	Settings	0–3						
	Sets the digital pla	ices for Pr.00.13.						
	For example: if the	e corresponding physical quantity such as pressure is to be set as 10.0 bar, you						
	need to set Pr.00.	13 to 100, and set Pr.00.14 to 1. Pressure conversion relation: 0.1 Mpa = 1 bar						
	= 1 kgf-cm ²							
,	10.00 PID Set	Point Selection						
	1 12 000	Default: 0						
	Settings	0: PID function disabled						
		1: Digital keypad						
		2: Reserved						
		3: Reserved						
		4: Set by Pr.10.11						
	Set Pr.00.03 = 3 a	nd 00.04 = 8 for feedback value to display the PID set point on the control panel						
	at the same time.							
	When Pr.10.00 is s	set to 1 and operated by the keypad, adjust the set point by pressing the up/down						
		ny display interface if you need to set the set point.						
	•	set to 4, the setting range of Pr.10.11 is limited by the maximum operating						
		1.00. The maximum frequency value of 01.00 is the maximum value of the						
	•	to the set point corresponds to the maximum range of the physical quantity						
		sensor (set in Pr.10.18).						
	•	layed target value directly correspond to physical quantities such as pressure,						

temperature, flow, etc., you also need to set Pr.00.13 and Pr.00.14 at the same time. For example, when the maximum range of the set point set as 16.0 bar, you also need to set Pr.00.13 = 160, 00.14 = 1.

- The target physical quantity corresponding to the frequency set by Pr.10.11 = (Pr.10.11/ Pr.01.00) \times Pr.00.13 \times 10^{-(Pr.00.14)}. For example, Pr.10.11 = 20 Hz, Pr.01.00 = 50 Hz, Pr.00.13 = 160, Pr.00.14 = 1, then the target physical quantity = 20 / 50 \times 160 \times 0.1 = 8.0.
- The following table shows the set point physical quantity and the operating frequency of the drive, sensor feedback value corresponding to the physical quantity, set point setting method and relationship.

Corresponded Relation	Set Point Physical Quantity	Corresponded Drive Operation Frequency	Sensor Feedback Value Corresponding to the Physical Quantity PID Set Poin		Point
Parameter Setting	Pr.00.13 = 160 Pr.00.14 = 1	Pr.00.02 = 9 Pr.01.00 = 50	Pr.10.18 = 16.0	Pr.10.00 = 1 Keypad up/down keys	Pr.10.00 = 4 Pr.10.11 = 50
Lower Limit	0	0	0	0	0
Upper Limit	16.0	50	16.0	16.0	16.0

10.01 Input Terminal for PID Feedback

Default: 0

Settings 0: Positive PID feedback from external terminal AVI (0–10 V_{DC})

1: Negative PID feedback from external terminal AVI (0–10 V_{DC})

2: Positive PID feedback from external terminal ACI (4–20 mA)

3: Negative PID feedback from external terminal ACI (4-20 mA)

- Select the input terminal as the PID detection terminal, and note that the master frequency source cannot be the same.
- Negative feedback: Error = Target value (set point) Feedback. Use negative feedback when the detection value increases if the output frequency increases.
- Positive feedback: Error = Target value (set point) + Feedback. Use positive feedback when the detection value decreases if the output frequency increases.

10.18 PID Feedback Physical Quantity

Default: 99.9

Settings 1.0–99.9

- Pr.10.18 set value is the conversion base of the corresponding relationship between the sensor feedback analog quantity and the feedback physical quantity, and usually set to the maximum value of the sensor input range physical quantity.
- Select Pr.10.01 value according to the sensor output signal type 0–10 V/ 4–20 mA and specific control requirements.
 - The sensor output range is 4–20 mA, the feedback physical quantity = (sensor measurement feedback current 4) ÷ (20 4) × Pr.10.18.
 - The sensor output range is 0–10 mA, the feedback physical quantity = (sensor measurement feedback voltage 0) ÷ (10 0) × Pr.10.18.

Chapter 4 Parameters | VFD-EL-W

- For example, the pressure sensor range is 0–16.0 bar, and the corresponding output range is 4–20 mA. When the Pr.10.18 is set to 16.0 and the sensor's actual measurement output is 12 mA, the actual feedback physical quantity = (12 4) ÷ (20 4) × 16.0 = 8.0 bar, the corresponding relationship is shown in the table below.
- Set Pr.00.03 = 3 and Pr.00.04 = 8 to display the actual feedback physical quantity on the digital keypad. And the physical quantity correspond to the feedback value displayed on the right side of ":". Refer to Pr.00.04 description for more details.

Corresponded Relation	Sensor Fee	Sensor Feedback Value		
Parameter	ACI	AVI	Quantity	
Setting	Pr.10.01 =- 2 or 3	Pr.10.01 =- 0 or 1	Pr.10.18 = 16.0	
Lower Limit	4 mA	0V	0 bar	
Medium value	12 mA	5V	8.0 bar	
Upper Limit	20 mA	10V	16.0 bar	

Multi-communication Application Setting Case

01 Pr.10.35 = 1 Fixed time circulation (alternative operation)

- Enables four pumps to operate alternatively by time to extend the life span.
- Keeps the water pressure at 3 kg in a water system with constant pressure.



Related parameters (Pr.10.35 = 1)

	Pr.	Function	Setting Range	Default	User's Master	User's Slave	Note
×	00.03	Start-up Display	0: F (frequency command) 1: H (output frequency) 2: A (output current) 3: U (user-defined) 4: FWD/REV command	0	3	3	
M	00.04	Content of Multi- function Display (User-Defined)	O: Display the content of userdefined unit 1: Display counter value (c) 2: Display the status of multifunction input terminal (d) 3: Display the drive's DC bus voltage (u) 4: Display the drive's output voltage (E) 5: Display PID analog feedback signal (b) 6: Display the drive's power factor angle (n) 7: Display the drive's output power (P) 8: Display the setting value and the feedback of PID control (P) 9: Display AVI analog input terminal signal (V) (I) 10: Display ACI analog input terminal signal (mA/V) (i) 11: Display IGBT temperature (°C) (h)	0	8	8	
	00.13	User-Defined Value (Max. operation frequency)	0–9999	0	100	100	Sets the constant pressure control to correspond to the
	00.14	Decimal Places for User-Defined Value	0–3	0	01	01	largest physical quantity and the decimal place. The number displayed is 10.0 currently.

	Pr.	Function	Setting Range	Default	User's Master	User's Slave	Note
	01.00	Max. Operation Frequency	50.00–400.0 Hz	60.00	60.00	60.00	Set the parameters
	01.01	Motor Rated Frequency	0.10–400.0 Hz	60.00	60.00	60.00	according to the specifications of
	01.02	Motor Rated Voltage	230V models: 0.1–255.0 V 460V models: 0.1–510.0 V	220.0 400.0	220.0 400.0	220.0 400.0	pumps.
×	01.09	· ·	0.1–600.0 sec./ 0.01–600.00 sec.	10.0	0.5	0.5	Adjust the parameter
*	01.10	Deceleration Time 1	0.1-600.0 sec./ 0.01-600.00 sec.	10.0	5.0	5.0	according to customer's applications
*	01.12	Deceleration Time 2	0.1-600.0 sec./ 0.01-600.00 sec.	10.0	3.0	3.0	The time for the drive decelerating to stop when the pressure reaches the setting value.
*	02.00	First Master Frequency Command Source	0: Digital keypad 1: External terminal AVI analog signal DC 0–10V 2: External terminal ACI analog signal DC 4–20 mA 3: RS-485 communication input 4: Digital keypad potentiometer knob	0	2	2	Adjust the parameter according to customer's applications
*	02.01	Operation Command Source	Digital keypad External terminals, STOP key is valid External terminals, STOP key is invalid RS-485 communication, STOP key is valid RS-485 communication, STOP key is valid RS-485 communication, STOP key is invalid	0	0	0	Adjust the parameter according to customer's applications
	10.35	Multi-pump Operation Mode	0: Disable 1: Fixed time circulation (alternative operation) 2: Fixed quantity control (multipump operating at constant pressure)	0	1	1	
	10.36	Multi-pump ID	0: Disable multi-pump function 1: Master 2–4: Slave	0	1	2	
	10.37	Multi-pump Fixed Time Circulation Period	1–65535 min.	60	1	1	
	10.42	Pump's Frequency at Time-Out (Disconnection)	0.0–Fmax	0.00	60	60	
	10.42	Pump Fault Treatment bit 0: When the operating pump is failed, whether it switches to an alternative pump or not	0: Stop all pump action 1: Switch to an alternative pump	1	1 1	1 1	000 = 0 001 = 1 010 = 2 011 = 3 100 = 4 101 = 5 110 = 6 111 = 7
	10.43	bit 1: During the operation, stop or standby after resetting from error bit2 Whether the	Standby after resetting Stop after resetting				
		system can run or not when the pump has an error	O: The system cannot activate The system selects another pump to operate				

	Pr.	Function	Setting Range	Default	User's Master	User's Slave	Note
	10.44	Pump Start-Up Sequence Selection	0: By pump ID 1: According to the operating time	0	1	1	Adjust the parameter according to customer's applications
	10.45	Pump Alternative Operation Time Setting	0.0–360.0 sec.	60.0	60.0	60.0	Adjust the parameter according to customer's applications
	10.00	PID Set Point Selection	0: PID function disabled1: Digital keypad2: Reserved3: Reserved4: PID reference target value (Pr.10.11)	0	1	1	Adjust the parameter according to customer's applications
	10.01	Input Terminal for PID Feedback	 0: Positive PID feedback from external terminal AVI (0–10 V_{DC}) 1: Negative PID feedback from external terminal AVI (0–10 V_{DC}) 2: Positive PID feedback from external terminal ACI (4–20 mA) 3: Negative PID feedback from external terminal ACI (4–20 mA) 	0	3	3	
×	10.02	Proportional Gain (P)	0.0–10.0	1.0	1.2	1.2	Adjust the parameter according to
×		Integral Time (I)	0.00-100.0 sec.	1.00	0.7	0.7	customer's
*		Differential Time (D) PID Feedback Signal Error Deviation Level	0.00–1.00 sec. 1.0–50.0%	10.0	5	5	applications When the pressure feedback is < 0.5 kg
	10.13	PID Feedback Signal Error Deviation Detection Time	0.1–300.0 sec.	5.0	15	15	and time > 15 sec., follow the settings for Pr.10.20.
	10.18	PID Feedback Physical Quantity	1.0–99.9	99.9	10	10	Sets the maximum feedback of PID physical quantity value to be 10 kg.
	10.19	PID Calculation Mode Selection	0: Serial connection 1: Parallel connection	00	01	01	The parallel PID calculation mode applies for the constant pressure water supply control.
	10.20	PID Error Deviation Treatment	0: Warn and continue operation (no treatment)1: Coast to stop2: Ramp to stop3: Ramp to stop and restart after Pr.10.21 delay time	0	3	3	When there is water shortage or unusual pressure feedback, the pump stops running for 1800 sec. (30 minutes) until the
	10.21	PID Error Deviation Restart Delay Time	1–9999 sec.	60	1800	1800	pressure feedback is back to normal.
*	10.22	Set Point Deviation Level	0–100%	0	5	5	If the feedback value and the set point
	10.23	Set Point Stop Detection Time	1–9999 sec.	10	10	10	deviation are both is 0.15 kg (3 kg × 5% = 0.15 kg), that is, when feedback value is ≥ 2.85 kg and time > 10 seconds, the AC motor drive starts to

4-119

Chapter 4 Parameters | VFD-EL-W

	Pr.	Function	Setting Range	Default	User's Master	User's Slave	Note
							decelerate to stop. The deceleration time is according to the Deceleration Time 2 set in Pr.01.12. When the feedback value is less than 2.85 kg, the drive starts to run.
×	10.24	Deviation Level of Liquid Leakage	0–50%	0	33	33	Liquid Leakage: Assume that when
×	10.25	Liquid Leakage Change Detection	0: Disable 0–100%	0	4	4	the drive does not run and is in a constant
*	10.26	Liquid Leakage Change Detection Time	0: Disable 0.1–10.0 sec.	0.5	2	2	pressure status, the variation of the feedback value is less than 0.12 kg (3 kg × 4% = 0.12 kg) within 2 second. When the feedback value continues to decrease to make the deviation of the set point be less than 0.99 kg (3 kg × 33% = 0.99 kg), that is, when the feedback value is less than 2.01 kg, the drive starts to run. Liquid Usage after Liquid Leakage: When the drive does not run and is in a constant pressure status, the variation of the feedback value is higher than 0.12 kg within 2 seconds, the drive starts to run.

02 Pr.10.35 = 2 Fixed quantity control (multi-pump operating at constant pressure)

Related parameters (Pr.10.35 = 2)

	Pr.	Function	Setting Range	Default	User's Master	User's Slave	Note
*	00.03	Start-up Display	0: F (frequency command) 1: H (output frequency) 2: A (output current) 3: U (user-defined) 4: FWD/REV command	0	3	3	
*	00.04	Content of Multi- function Display (User-Defined)	 0: Display the content of userdefined unit 1: Display counter value (c) 2: Display the status of multifunction input terminal (d) 3: Display the drive's DC bus voltage (u) 4: Display the drive's output voltage (E) 5: Display PID analog feedback signal (b) 6: Display the drive's power factor angle (n) 7: Display the drive's output power (P) 8: Display the setting value and the feedback of PID control (P) 9: Display AVI analog input terminal signal (V) (I) 10: Display ACI analog input terminal signal (mA/V) (i) 11: Display IGBT temperature (°C) (h) 	0	8	8	
	00.13	User-Defined Value (Max. operation frequency)	0–9999	0	100	100	Sets the constant pressure control to correspond to the largest
	00.14	Decimal Places for User-Defined Value	0–3	0	1	1	physical quantity and the decimal place. The number displayed is 10.0 currently.
		Max. Operation Frequency	50.00–400.0 Hz	60.00	60	60	Cat the management
	01.01	Motor Rated Frequency	0.10–400.0 Hz	60.00	60.00		Set the parameters according to the specifications of pumps.
	01.02	Motor Rated Voltage	230V models: 0.1–255.0 V 460V models: 0.1–510.0 V	220.0 400.0	220.0 400.0	220.0 400.0	specifications of pumps.
×	01.09	Acceleration Time	0.1-600.0 sec./ 0.01-600.00 sec.	10.0	0.5	0.5	Adjust the parameter
×	01.10	Deceleration Time	0.1-600.0 sec./ 0.01-600.00 sec.	10.0	5.0	5.0	according to customer's applications
*	01.12	Deceleration Time 2	0.1-600.0 sec./ 0.01-600.00 sec.	10.0	3.0	3.0	The time for the drive decelerating to stop when the pressure reaches the setting value.
*		First Master Frequency Command Source	0: Digital keypad 1: External terminal AVI analog signal DC 0–10V 2: External terminal ACI analog signal DC 4–20 mA 3: RS-485 communication input 4: Digital keypad potentiometer knob	0	2	2	Adjust the parameter according to customer's applications

	Pr.	Function	Setting Range	Default	User's Master	User's Slave	Note
/	02.01	Operation Command Source	Digital keypad External terminals, STOP key is valid External terminals, STOP key is invalid RS-485 communication, STOP key is valid RS-485 communication, STOP key is valid RS-485 communication, STOP key is invalid	0	0	0	Adjust the parameter according to customer's applications
=	10.35	Multi-pump Operation Mode	Disable Tixed time circulation (alternative operation) Fixed quantity control (multipump operating at constant pressure)	0	2	2	
-	10.36	Multi-pump ID	0: Disable multi-pump function 1: Master 2–4: Slave	0	1	2	
	10.37	Multi-pump Fixed Time Circulation Period	1–65535 min.	60	1	1	
	10.42	Pump's Frequency at Time-Out (Disconnection)	0.0–Fmax	0.00	60	60	
	10.43	Pump Fault Treatment bit 0: When the operating pump is failed, whether it switches to an alternative pump or not bit 1: During the	0: Stop all pump action 1: Switch to an alternative pump	1	1	1	000 = 0 001 = 1 010 = 2 011 = 3 100 = 4 (bit2: 1, bit1: 0, bit0: 0) 101 = 5 110 = 6 111 = 7 (bit 2 < bit 1 < bit 0)
		operation, stop or standby after resetting from error bit2 Whether the system can run or not when the pump has an error	Standby after resetting Stop after resetting The system cannot activate The system selects another pump to operate				
•	10.44	Pump Start-Up Sequence Selection	0: By pump ID 1: According to the operating time	0	1	1	Adjust the parameter according to customer's applications
	10.45	Pump Alternative Operation Time Setting	0.0-360.0 sec.	60.0	60.0	60.0	Adjust the parameter according to customer's applications
	10.00	PID Set Point Selection	O: PID function disabled 1: Digital keypad 2: Reserved 3: Reserved 4: PID reference target value (Pr.10.11)	0	1	1	Adjust the parameter according to customer's applications
	10.01	Input Terminal for PID Feedback	O: Positive PID feedback from external terminal AVI (0–10 VDC) 1: Negative PID feedback from external terminal AVI (0–10 VDC) 2: Positive PID feedback from external terminal ACI (4–20 mA) 3: Negative PID feedback from external terminal ACI (4–20 external terminal terminal terminal ACI (4–20 external terminal terminal terminal terminal terminal terminal termina	0	3	3	

	Pr.	Function	Setting Range	Default	User's Master	User's Slave	Note
~	10.02	Proportional Gain	mA) 0.0–10.0	1.0	1.2	1.2	A discretation in a new parts of
~	10.03	(P) Integral Time (I)	0.00-100.0 sec.	1.00	0.7	0.7	Adjust the parameter according to customer's
<i>*</i>	10.04	Differential Time (D)	0.00–1.00 sec.	0.00	-	-	applications
		PID Feedback Signal Error Deviation Level	1.0–50.0%	10.0	5	5	When the pressure feedback is < 0.5 kg and
	10.13	PID Feedback Signal Error Deviation Detection Time	0.1–300.0 sec.	5.0	15	15	time > 15 sec., follow the settings for Pr.10.20.
	10.18	PID Feedback Physical Quantity	1.0–99.9	99.9	10	10	Sets the maximum feedback of PID physical quantity value to be 10 kg.
	10.19	PID Calculation Mode Selection	0: Serial connection 1: Parallel connection	0	1	1	The parallel PID calculation mode applies for the constant pressure water supply control.
	10.20	PID Error Deviation Treatment	0: Warn and continue operation (no treatment)1: Coast to stop2: Ramp to stop3: Ramp to stop and restart after Pr.10.21 delay time	0	3	3	When there is water shortage or unusual pressure feedback, the pump stops running for 1800 sec. (30 minutes) until the pressure
	10.21	PID Error Deviation Restart Delay Time	1–9999 sec.	60	1800	1800	feedback is back to normal.
×	10.22	Set Point Deviation Level	0–100%	0	5	5	If the feedback value and the set point
	10.23	Set Point Stop Detection Time	1–9999 sec.	10	10	10	deviation are both is 0.15 kg (3 kg × 5% = 0.15 kg), that is, when feedback value is ≥ 2.85 kg and time > 10 seconds, the AC motor drive starts to decelerate to stop. The deceleration time is according to the Deceleration Time 2 set in Pr.01.12. When the feedback value is less than 2.85 kg, the drive starts to run.
×	10.24	Deviation Level of Liquid Leakage	0–50%	0	33	33	Liquid Leakage: Assume that when the
×	10.25	Liquid Leakage	0: Disable 0–100%	0	4	4	drive does not run and is in a constant pressure
*	10.26	Liquid Leakage Change Detection Time	0: Disable 0.1–10.0 sec.	0.5	2	2	status, the variation of the feedback value is less than 0.12 kg (3 kg × 4% = 0.12 kg) within 2 second. When the feedback value continues to decrease to make the deviation of the set point be less than 0.99 kg (3 kg × 33% = 0.99 kg), that is, when the feedback value is less than 2.01 kg, the drive starts to run.

Chapter 4 Parameters | VFD-EL-W

Pr.	Function	Setting Range	Default	User's Master	User's Slave	Note
						Liquid Usage after Liquid Leakage: When the drive does not run and is in a constant pressure status, the variation of the feedback value is higher than 0.12 kg within 2 seconds, the drive starts to run.

Optional Accessories for Multi-pumps Alternative Operation

When you use the multi-pump operation, pay attention to the following wirings.

- 1. Use a RJ45 cable (8 pin, Internet cable) without an adapter. Simply connect the master/slave communication port. If there are more than two pumps, use RMKE-HUB01 to connect RJ45.
- 2. Use a RJ11 (6 pin) cable with an adapter to connect the master/ slave communication port.
- 3. You can also directly connect to SG+/SG- lock wire terminals without using accessories to form multiple communication alternate operation systems.



RMKE-HUB01

RS-485 One-wire to Two-wire



VFD-CMD04
RS-485 RJ11 Four-port communication breakout box

[This page is intentionally left blank]


Chapter 5 Troubleshooting

- 5-1 Over-Current (oc)
- 5-2 Over-Voltage (ov)
- 5-3 Low Voltage (Lv)
- 5-4 Overheat (oH1)
- 5-5 Overload (oL)
- 5-6 Keypad Display is Abnormal
- 5-7 Phase Loss (PHL)
- 5-8 Motor Does Not Run
- 5-9 Motor Speed Cannot be Changed
- 5-10 Motor Stalls During Acceleration
- 5-11 The Motor Does Not Run as Expected
- 5-12 Electromagnetic/Induction Noise
- 5-13 Operating Environment Condition
- 5-14 Affecting Other Machines




To prevent accidents, only technicians can work on checking items.


5-1 Over-Current (oc)

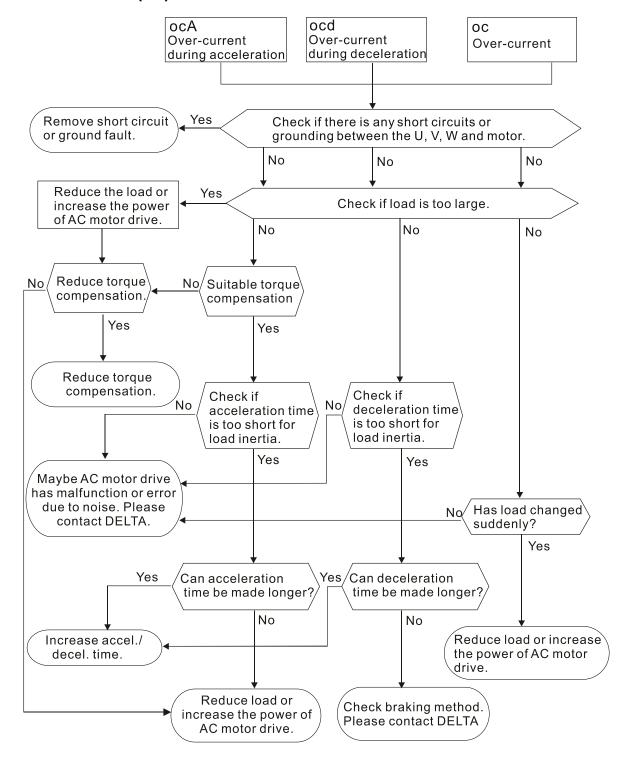


5-2 Over-Voltage (ov)

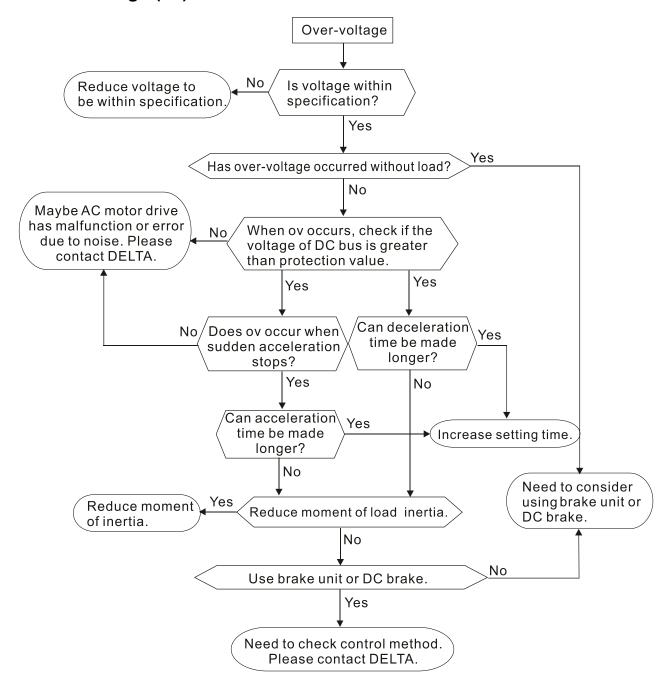


5-3 Low Voltage (Lv)

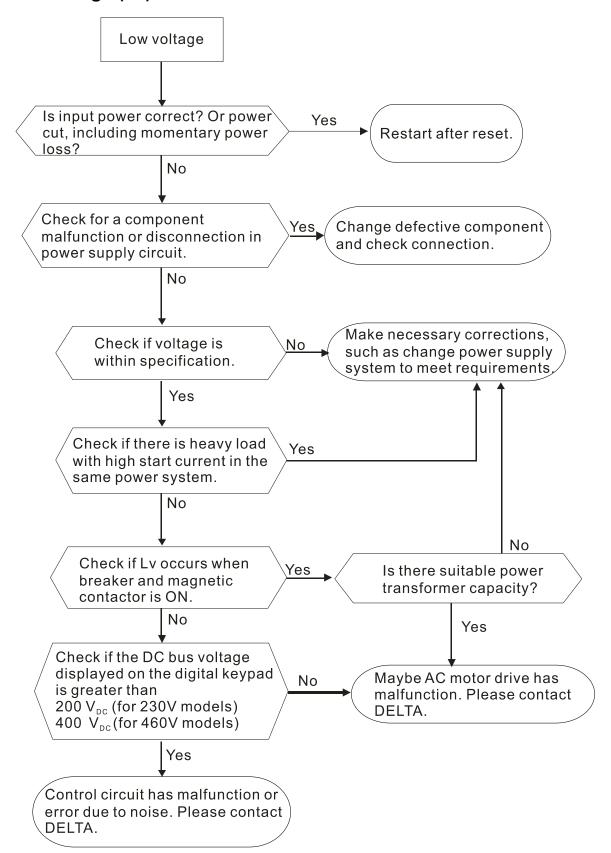


5-4 Overheat (oH1)

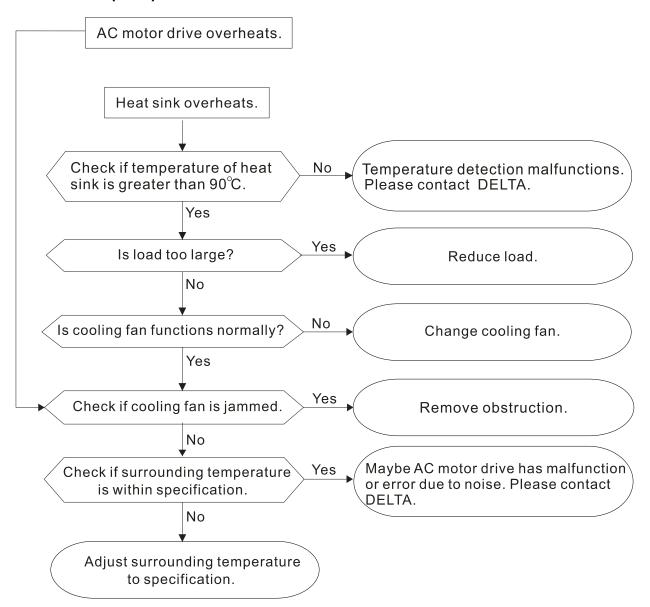


5-5 Overload (oL)

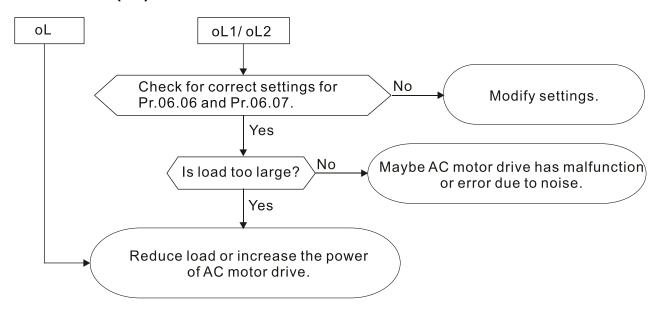


5-6 Keypad Display is Abnormal

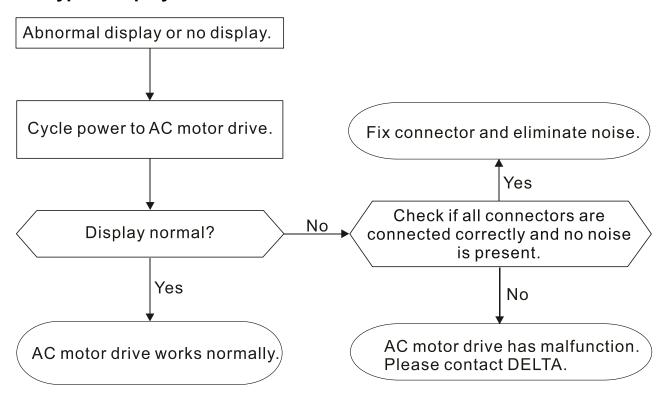


5-7 Phase Loss (PHL)

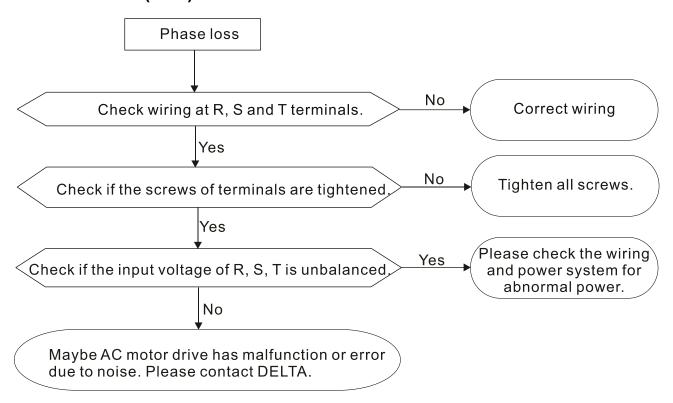


5-8 Motor Does Not Run

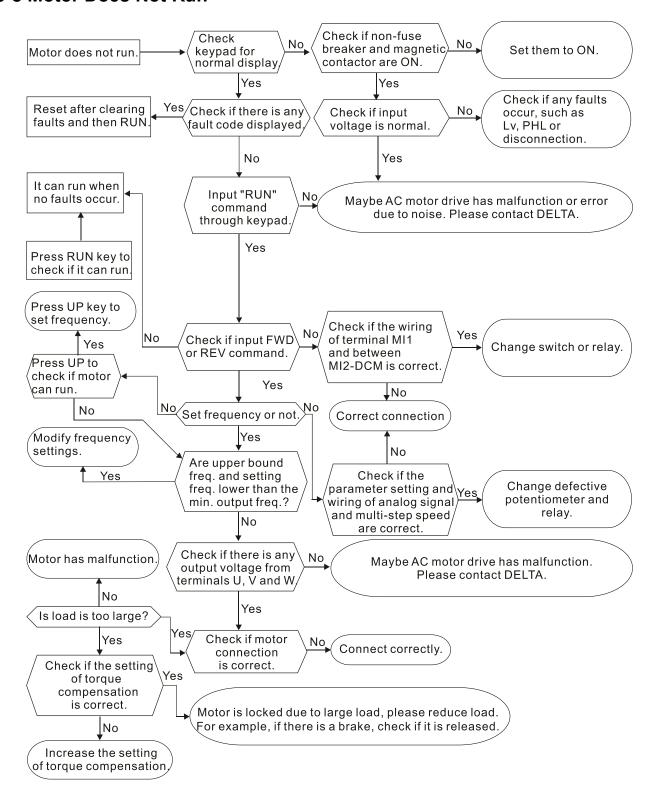


5-9 Motor Speed Cannot be Changed

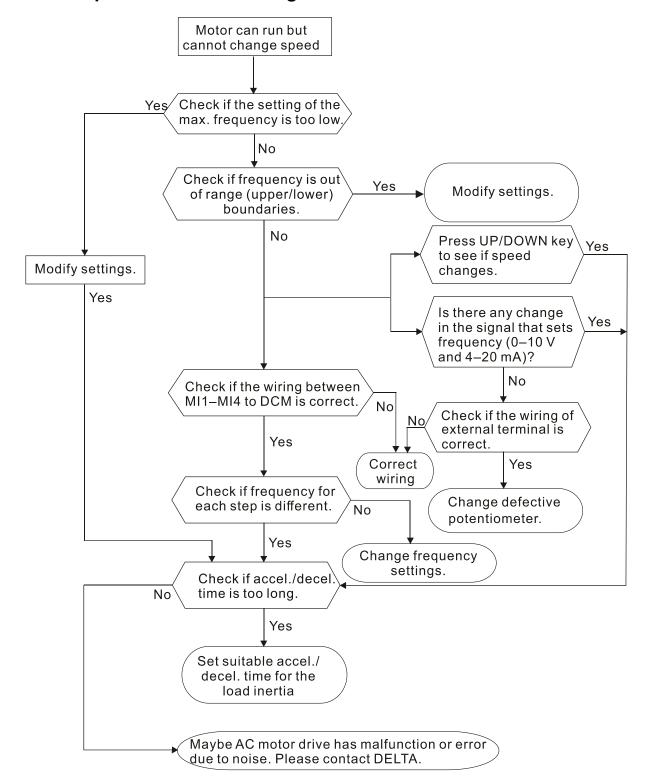

5-10 Motor Stalls during Acceleration

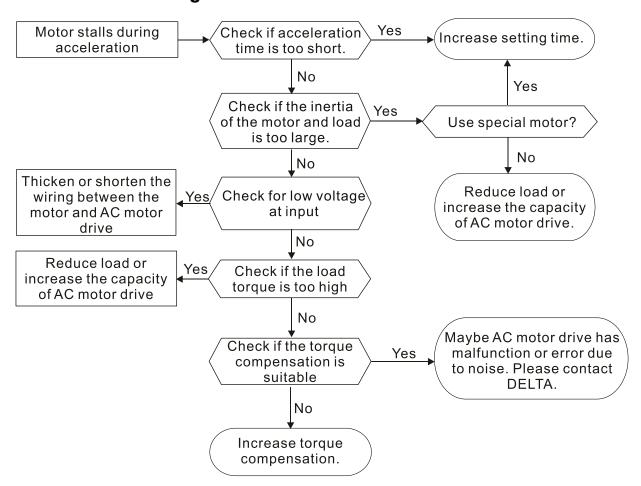

5-11 The Motor Does Not Run as Expected

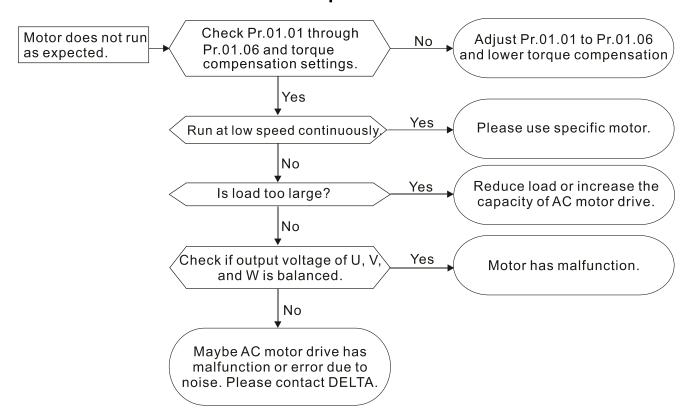

5-12 Electromagnetic/Induction Noise

Many sources of noise surround AC motor drives and affect them by radiation or conduction. This may cause the control circuits to malfunction and even damage the AC motor drive. Of course, there are solutions to increase the noise tolerance of an AC motor drive, but this has its limits. Solving the problem from the outside as follows is the best.

- 1. Add a surge suppressor on the relays and contacts to suppress switching surges.
- 2. Shorten the length of the wiring for the control circuit or serial communication and keep them separated from the power circuit wiring.
- 3. Comply with the wiring regulations by using shielded wires and isolation amplifiers for long wire length.
- 4. The grounding terminal must comply with the local regulations and be grounded independently; that is, do not use a common ground with electric welding machines and other power equipment.
- 5. Connect a noise filter at the mains input terminal of the AC motor drive to filter noise from the power circuit.

In short, solutions for electromagnetic noise exist of "no product" (disconnect disturbing equipment), "no spread" (limit emission from disturbing equipment) and "no receive" (enhance immunity).

5-13 Operating Environment Condition

Since the AC motor drive is an electronic device, you must deal with the operating environment conditions. Here are some remedial measures to use if necessary.

- To prevent vibration, anti-vibration dampers are the last choice. Vibration must be within the specification. Vibration causes mechanical stress and it should not occur frequently, continuously or repeatedly to prevent damage to the AC motor drive.
- 2. Store the AC motor drive in a clean and dry location, free from corrosive fumes/dust to prevent corrosion and poor contacts. Poor insulation in a humid location can cause short circuits. If necessary, install the AC motor drive in a dust-proof and painted enclosure. If necessary in particular situations, use a completely sealed enclosure.
- 3. The ambient temperature should be within the specification. Too high or too low temperature affects the lifetime and reliability of the AC motor drive. For semiconductor components, damage occurs once any specification is out of range. It is necessary to periodically check air quality and the cooling fan and provide extra cooling if required. In addition, the microcomputer may not work in extremely low temperatures, making cabinet heating necessary.
- 4. Store the AC motor drive in a relative humidity range of 0% to 90% (non-condensing). Use an air conditioner and/or desiccator if necessary.


5-14 Affecting Other Machines

An AC motor drive may affect the operation of other machines due to many reasons. Some solutions are listed below:

High Harmonics at Power Side

You can reduce high harmonics at the power side during running.

- 1. Separate the power system: use a transformer for the AC motor drive.
- 2. Use a reactor at the power input terminal of the AC motor drive.

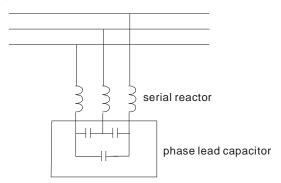

3. If using phase lead capacitors (never on the AC motor drive output!), use serial reactors to prevent damage to the capacitors from high harmonics.

Motor Temperature Rises

When the motor is a standard induction motor with a fan, the cooling will be insufficient at low speed, causing the motor to overheat. In addition, high harmonics at the output increases copper and core losses. Use the following measures depending on load and operation range.

- 1. Use a motor with independent ventilation (forced external cooling) or increase the motor rated power.
- 2. Use a special inverter-duty motor.
- 3. Do NOT run at low speed for long periods of time.

Chapter 6 Fault Code Information and Maintenance

- 6-1 Fault Code Information
- 6-2 Maintenance and Inspections

Chapter 6 Fault Code Information and Maintenance | VFD-EL-W

The AC motor drive has various warnings and protections against errors such as over-voltage, low voltage, or over-current. Once an error occurs, the protections activate, the AC motor drive stops output, activates the error contacts, and the motor coasts to stop. Please refer to the error display from the AC motor drive and look up the corresponding causes and solutions. The fault record is stored in the AC motor drive internal memory and can store the ten most recent error messages. You can read it from the digital keypad or through the communications by accessing the parameters.

The AC motor drive includes a large number of electronic components, including ICs, resistors, capacitors, transistors, and cooling fans. These components do not last forever. Even under normal circumstances, they will eventually become error-prone if used past their lifespans. Therefore, you must perform periodic preventive maintenance to identify defective and worn out parts, and eliminate the causes of malfunctions in the AC motor drive at an early stage. At the same time, parts that have exceeded their product life should be replaced whenever possible to ensure safe operation.

Visual checks should be done regularly to monitor the AC motor drive's operation, and to make sure nothing unusual happens. Check the situations listed in the following table.



- ☑ Wait five seconds after a fault has been cleared before pressing RESET with the input terminal keypad.
- ☑ The drive must first be switched off for at least five minutes for ≤ 22 kW models
 until the charging indicator turns off before it is safe to open the cover to begin
 maintenance operations.
- ☑ Only qualified personnel can work on maintenance or replace parts. (Remove metal items such as watch, rings, and other metal items before operation, and use only insulated tools.)
- ☑ Never modify internal components or wiring.
- ☑ The performance and the surrounding environment should meet the standard specifications. There should be no abnormal noise, vibration, or odor.
- ☑ Verify if the keypad displays normally. Check if there is any abnormality such as overheating or color change. Prevent the drive from electronic shock and equipment accident.

6-1 Fault Code Information

The following messages display when the operation command source is set as digital keypad.

ID No.	Fault Name	Fault Descriptions	Corrective Actions
0	-	No fault record	-
1	(oc)	Over-current Abnormal increase in current.	 Check if the motor power corresponds with the AC motor drive output power. Check the wiring connections to U/T1, V/T2, and W/T3 for possible short circuits. Check the wiring connections between the AC motor drive and motor for possible short circuits, and for short to ground. Check for loose contacts between the AC motor drive and the motor. Increase the Acceleration Time. Check for possible excessive loading on the motor.
2	(ov)	Over-voltage The DC bus voltage exceeds its maximum allowable value.	 Check if the input voltage is in the rated AC motor drive input voltage range. Check for possible voltage transients. DC bus over-voltage may also be caused by motor regeneration. Either increase the Deceleration Time or add an optional brake resistor (and brake unit).
3	(oH1)	Overheating Heat sink temperature is too high.	 Ensure that the ambient temperature is in the specified temperature range. Make sure that the ventilation holes are not obstructed. Provide enough spacing for adequate ventilation. (see Chapter 1)
4	(Lv)	Low voltage The AC motor drive detects that the DC bus voltage has fallen below its minimum value.	 Check whether the input voltage is in the AC motor drive rated input voltage range. Check for abnormal load on the motor. Check for correct input power wiring to R-S-T (for three-phase models) without phase loss.
5	(oL)	Overload The AC motor drive detects excessive drive output current. NOTE: The AC motor drive can withstand up to 150% of the rated current for a maximum of 60 seconds.	 Check whether the motor is overloaded. Reduce the torque compensation setting (Pr.07.02). Use AC motor drive model with larger capacity.

ID No.	Fault Name	Fault Descriptions	Corrective Actions
6	(oL1)	Overload 1 Internal electronic overload trip	 Check for possible motor overload. Reduce the current level so that the drive output current does not exceed the value in the Motor Rated Current (Pr.07.00). Check the electronic thermal overload setting. Replace the drive with a larger capacity model
7	(oL2)	Overload 2 Motor overload.	 Reduce the motor load. Adjust the over-torque detection settings to appropriate values (Pr.06.03–Pr.06.05).
8	(EF)	External Fault 1. When multi-function input terminals (MI1–MI4) are set to external fault, the AC motor drive stops output. 2. When changing the communication address 2002H bit0 = 1, the drive stops output.	The "EF" disappears once the signal source is cleared and reset.
9	(ocA)	Over-current during acceleration	 Check if the screws between the drive and motor are loosen. Check for possible poor insulation between the U-V-W terminals to the motor. Increase the Acceleration Time. Decrease the torque compensation setting (Pr.07.02). Replace the drive with a larger capacity model.
10	oc o (ocd)	Over-current during deceleration	 Check for possible poor insulation between the U-V-W terminals to the motor. Increase the Deceleration Time. Replace the drive with a larger capacity model.
11	(ocn)	Over-current during constant speed operation	 Check for possible poor insulation between the U-V-W terminals to the motor. Check for possible motor stall. Replace the drive with a larger capacity model.

ID No.	Fault Name	Fault Descriptions	Corrective Actions	
14	(PHL)	Phase Loss	Check if the input power is three-phase.	
16	(cFA)	Auto- acceleration/deceleration failure	 Check if the motor is suitable for operation by the AC motor drive. Check if the regenerative energy is too high. Check for sudden load changes. 	
17	codE)	Software protection failure	Password locked.	
18	(cF1.0)	Internal EEPROM cannot be programmed.	Return the unit to the factory.	
19	(cF2.0)	Internal EEPROM cannot be read.	 Press RESET key to reset all parameters to defaults. If the fault still exists, return the unit to the factory. 	
20	(HPF1)	CC (current clamp)	Return the unit to the factory.	
21	(HPF2)	OV hardware fault	Return the unit to the factory.	
23	(HPF4)	OC hardware fault	Return the unit to the factory.	
24	c F 3.0 (cF3.0)	Wiring detection fault	U-phase error, return the unit to the factory.	
25	(cF3.1)	Wiring detection fault	V-phase error, return the unit to the factory.	
26	(cF3.2)	Wiring detection fault	W-phase error, return the unit to the factory.	
27	(cF3.3)	Wiring detection fault	DC bus wiring detection error, return the unit to the factory.	
28	(cF3.4)	Wiring detection fault	Temperature sensor error, return the unit to the factory.	
32	(AErr)	Analog signal error	Check if the wiring for ACI is broken.	

ID No.	Fault Name	Fault Descriptions	Corrective Actions
34	(PTC1)	Drive detects that internal temperature of the motor is too high. Motor will coast to stop.	 Ensure that the ambient temperature is in the specified temperature range. Check the cooling system for the motor. Check if load is too large. Check if the settings of rated current for the motor match the specifications indicated on the motor nameplate. Check if the settings related to PTC and wiring are proper.
35	(FbE)	PID feedback signal fault	 Check the parameter settings (Pr.10.01) and AVI/ACI wiring. Check for possible fault between the system response time and the PID feedback signal detection time (Pr.10.08)
36	(dEv)	Unusual PID feedback	Check if wiring for PID feedback is correct and the parameter of PID feedback is properly set.
37	(oPHL)	Multi-motor fault protection	Check if the motor wiring is normal.
38	HotP	Thermal cutout triggered	 When Pr.06.17=1, HotP fault is triggered. The drive stops outputting and can be reset normally. The drive starts accelerating normally after reset. The fault will be recorded. When Pr.06-17=2, HotP warning is triggered. The drive continues operation when load resumes. The warning will not be recorded.
N/A	(bb)	External Base Block 1. When the external input terminals (B.B.) (MI1–MI4) are active, the AC motor drive stops output. 2. When changing the communication address 2002H bit2 = 1, the drive stops output.	The "bb" disappears once the signal source is cleared.

ID No.	Fault Name	Fault Descriptions	Corrective Actions		
N/A	(cE)	Communication Fault	 Check the RJ45 connection between the AC motor drive for loose wires and wiring to the correct pins. Check if the communication protocol is properly set. Refer to Parameter Group 09 Communication Parameters in Chapter 4 for detailed information. 		

Reset

Press the "RESET" key (as shown in the figure below) to reset the external terminal after the fault is cleared, and set this terminal to be ON or send the Reset command through communication, then the trip is cleared. Make sure the RUN command or signal is OFF before executing RESET to prevent damage to the drive or personal injury due to immediate operation after reset.



Digital Keypad for EL-W

6-2 Maintenance and Inspections

Before the check-up, always turn off the AC input power for at least five minutes and remove the cover. Even if the power has been turned off, a charge may still remain in the filter capacitors with hazardous voltages before the power is OFF. Make sure the voltage is lower than 25 V_{DC} before you perform any inspections.

Ambient environment

		Maintenance Period			
Items to Check	Methods and Criterion	Daily	Half Year	One Year	
Check the ambient temperature,	Visual inspection and measurement				
humidity, vibration and for any dust,	with equipment with standard	0			
gas, oil or water drops.	specifications				
Check for any dangerous objects in	Visual inspection	0			
the environment.	Visual inspection	0			

Voltage

Itama ta Chaele	Mathada and Critarian	Maintenance Period			
Items to Check	Methods and Criterion	Daily	Half Year	One Year	
Check if the voltages of the main	Measure with multi-meter with	0			
circuit and control circuit are correct.	standard specifications.	O			

Digital keypad display

Items to Check	Methods and Criterion	Maintenance Period			
nems to Check	Methods and Chterion	Daily	Half Year	One Year	
Check that the display is clear for	Visual inspection	0			
reading.	visual inspection				
Check for any missing characters in	Visual increation	0			
the display.	Visual inspection	O			

Mechanical parts

Items to Check	Methods and Criterion	Maintenance Period		
nems to Check	Methods and Chterion	Daily	Half Year	One Year
Check for any abnormal sounds or	Visual and auditory inspection		0	
vibrations.	visual and additory inspection		0	
Check for any loose screws.	Tighten the screws		0	
Check for deformed or damaged	Visual inspection		0	
parts.			0	
Check for any color change due to	Visual inspection		0	
overheating.	visuai irispectiori		0	
Check for any dust or dirt.	Visual inspection		0	

Main circuit

Items to Check	Methods and Criterion	Maintenance Period			
items to check	Wethous and Chterion	Daily	Half Year	One Year	
Check for any loose or missing	Ti-al-4	0			
screws.	Tighten or replace the screws.)			
Check for any deformed, cracked, or	Visual inspection				
damaged machinery or insulation and			0		
for any color change due to	visual irispection				
overheating or ageing.					
Check for any dust or dirt.	Visual inspection		0		

Main circuit terminals and wiring

Items to Check	Methods and Criterion	Maintenance Period		
items to Check	Methods and Chterion	Daily	Half Year	One Year
Check for wiring color change or	Visual inspection		0	
deformation due to overheating.	visual irispection)	
Check for wiring insulation damage or	Visual inspection		0	
color change.	visual inspection		O	

Main circuit terminal block

Items to Check	Methods and Criterion	Maintenance Period		
	Methods and Chterion	Daily	Half Year	One Year
Check for any damage.	Visual inspection		0	

Main circuit filter capacity

Items to Check	Methods and Criterion	Maintenance Period			
nems to check	iviethous and Chterion	Daily	Half Year	One Year	
Check for any leakage of liquid, color	Visual inspection	0			
change, cracking or deformation.	Visual inspection	O			
Check if the safety valve is not					
removed or if the valve is obviously	Visual inspection	0			
expanded.					
Measure static capacity when	Static conscitu > initial value × 0.95		0		
required	Static capacity ≥ initial value × 0.85		0		

Main circuit resistor

Itama ta Chaale	Mathada and Critarian	Maintenance Period			
Items to Check	Methods and Criterion	Daily	Half Year	One Year	
Check for any peculiar odors or					
insulation cracking due to	Visual inspection, smell.		0		
overheating.					

Chapter 6 Fault Code Information and Maintenance | VFD-EL-W

Items to Check	Methods and Criterion	Maintenance Period			
nems to check	Methods and Chterion	Daily	Half Year	One Year	
Check for any disconnections.	Visual inspection		0		
Check for damaged connections	Measure the resistor value with a multi-meter		0		

Main circuit transformer and reactor

Items to Check	Methods and Criterion	Maintenance Period			
items to check	ivietrious and Criterion	Daily	Half Year	One Year	
Check for any abnormal vibrations or peculiar odors.	Visual, auditory inspection and smell.	0			

Main circuit electromagnetic contactor and relay

Items to Check	Methods and Criterion	Maintenance Period			
items to check	ivietrious and Criterion	Daily	Half Year	One Year	
Check for any vibration sounds.	Auditory inspection.	0			
Check that the contact works correctly.	Visual inspection	0			

Main circuit printed circuit board and connector

Items to Check	Methods and Criterion	Maintenance Period			
nems to check	ivietrious and Criterion	Daily	Half Year	One Year	
Check for any loose screws and	Tighten the screws.		0		
connectors.	righten the screws.)		
Check for any peculiar odors or color	Visual inspection and smell				
changes.	visual inspection and smell		0		
Check for any cracking, damage,	Visual inspection		0		
deformation or corrosion.	visual irispection)		
Check for any leakage of liquid or	Visual inapportion		0		
deformation in the capacitors.	Visual inspection				

Cooling system cooling fan

Items to Check	Methods and Criterion	Maintenance Period			
items to check	Methods and Chterion	Daily	Half Year	One Year	
Check for any abnormal sounds or vibrations.	Visual, auditory inspection and turn				
	the fan by hand (turn off the power			0	
vibrations.	first) to check for smooth rotation.				
Check for any loose screws.	Tighten the screws.			0	
Check for any color change due to	Visual inspection			0	
overheating.	Visual Ilispection			J	

Cooling system ventilation channel

Items to Check	Methods and Criterion	Maintenance Period			
items to check	Wethous and Chterion	Daily	Half Year	One Year	
Check for any obstruction around the	Visual inspection		0		
heat sink, air intake or air outlet.	Visual inspection				

NOTE: Use chemically neutral cloth to clean and use a dust cleaner to remove dust when necessary.

[This page is intentionally left blank]

Appendix A. Specifications

- A-1 230V Single-phase Models
- A-2 460V Three-phase Models
- A-3 General Specifications
- A-4 Environment for Operation, Storage and Transportation
- A-5 Derating Curve for Ambient Temperature and Carrier Frequency

Appendix A Specifications | VFD-EL-W

The VFD-EL-W Series include the 230V and 460V models. The 230V model is single-phase; the 460V model is three-phase. Refer to following specifications for details.

A-1 230V Single-phase Models

Model Number VFD□□□EL21W (-1)		002	004	007	015	022	
Max.	Applicable Motor Output (kW)	0.2	0.4	0.75	1.5	2.2	
Max.	Applicable Motor Output (HP)	0.25	0.5	1.0	2.0	3.0	
g	Rated Output Capacity (kVA)	0.6	1.0	1.6	2.9	4.2	
Output Rating	Rated Output Current (A)	1.6	2.5	4.2	7.5	11.0	
L R	Maximum Output Voltage (V)	Three-phase Proportional to Input Voltage					
ontp	Output Frequency (Hz)	0.1–400					
0	Carrier Frequency (kHz)	2–12 (default: 8)					
ng	Rated Input Current (A)	4.9	6.5	9.3	15.7	24.0	
Rating	Rated Voltage/Frequency	Single-phase, 200–240 V, 50 / 60 Hz					
Input F	Voltage Tolerance	±10% (180–264 V)					
n d	Frequency Tolerance	±5% (47–63 Hz)					
Cool	ing Method	Conve	ctive Cooling		Fan Cool	ing	
Weig	ght (kg)	1.0	1.0	1.0	1.4	1.4	

A-2 460V Three-phase Models

	Model Number VFD□□□EL43W (-1)	004	007	015	022	040	055
Max.	Applicable Motor Output (kW)	0.4	0.75	1.5	2.2	4.0	5.5
Max.	Applicable Motor Output (HP)	0.5	1.0	2.0	3.0	5.5	7.5
	Rated Output Capacity (kVA)	1.2	2.0	3.3	4.4	7.4	9.9
ing	Rated Output Current (A)	1.5	2.5	4.2	5.5	9.0	13.0
Output Rating	Maximum Output Voltage (V)		Three-phase Proportional to Input Voltage				
Output Frequency (Hz)		0.1–400					
no	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		2–12				2–12
	Carrier Frequency (kHz)	(default: 8)				(default: 4)	
ng	Rated Input Current (A)	1.8	3.2	4.3	7.1	10.0	14.0
Input Rating	Rated Voltage/Frequency	Three-phase, 380–480V, 50 / 60Hz					
out	Voltage Tolerance	±10% (342-528 V)					
ļ <u>i</u>	Frequency Tolerance	±5% (47–63 Hz)					
Casling Mathad		Conv	Convective				
C001	ing Method	g Method Fan Cooling					
Weig	ht (kg)	1.0	1.0	1.0	1.4	1.4	1.5

A-3 General Specifications


	Charac	eteristics	Descriptions		
	Control Sys	tem	SPWM (Sinusoidal Pulse Width Modulation) control (V/F control)		
	Frequency	Setting Resolution	0.01 Hz		
	Output Frequency Resolution		0.01 Hz		
Control Characteristics	Torque Cha	racteristics	Includes the auto-torque/auto-slip compensation; starting torque can be 150% at 5.0 Hz		
ıracı	Overload To	lerance	150% of rated output current for one minute		
Cha	Skip Freque	ency	Three zones, setting range 0.1–400 Hz		
trol	Accel./Dece	l. Time	0.1–600 seconds (2 independent settings for accel./ decel. time)		
Son	Stall Prever	ition Level	Setting 20–250% of drive's rated current		
	DC Brake		Operation frequency 0.1–400.0 Hz, output 0–100% rated current Start time 0–60 seconds, stop time 0–60 seconds		
	V/F Pattern		Adjustable V/F pattern		
		Keypad	Setting by		
	Frequency		Potentiometer 5 k Ω / 0.5 W, 0–10 V _{DC} , 4–20 mA, RS-485 interface; Multi-		
ဟ	Setting	External Signal	function inputs 2 to 4 (8 steps (including master speed), Jog, up/down)		
istic	Operation	Keypad	Set by RUN and STOP		
aracter	Setting Signal External Signal		Single-wire (default setting MI1) or Two-wire/Three-wire (MI1, MI2, MI3) by setting parameters, JOG operation, RS-485 serial interface (Modbus).		
Operating Characteristics	Multi-function Input Signal		Multi-step speed selection 8 (including master speed), accel./decel. inhibit, two accel./decel. switches, counter, JOG, external Base Block, drive reset, UP/DOWN key settings, AVI/ACI selections, NPN/PNP mode selection		
Ö	Multi-function Indication (F	•	AC drive operating, frequency reached, zero speed, counter reached, over-torque detection, external Base Block, operation mode, fault indication, overheat alarm, emergency stop.		
Prote	ection Function	ons	Over-voltage, over-current, under-voltage, external fault, overload, ground fault, overheating, electronic thermal, IGBT short circuit, PTC		
	Operation Functions		AVR, accel./decel. S-Curve, over-voltage/over-current stall prevention, ten fault records, reverse inhibition, restart after momentary power loss, DC brake, auto-torque/slip compensation, auto-tuning, adjustable carrier frequency current frequency upper/lower limits, parameter lock/reset, PID		
Oper			frequency, output frequency upper/lower limits, parameter lock/reset, PID control, external counter, Modbus communication, abnormality reset, abnormality restart, power-saving, cooling fan control, sleep/wake frequency, first/second frequency source selections, first/second frequency source combination, NPN/PNP selection.		
Display Keypad			Six-key, seven-segment LED with four-digits, four status LEDs, master frequency, output frequency, output current, custom units, parameter values for setup and lock, faults, RUN, STOP, RESET.		

A-4 Environment for Operation, Storage and Transportation

	Characteristics	Descriptions
	Built-in EMI Filter	N/A
	Enclosure Rating	IP20
	Pollution Degree	2
	Installation Location	Altitude 1,000 m or lower, keep from corrosive gasses, liquid and dust.
Suc		Non-condensing, non-freezing
ditic	Ambient Temperature	-10–50°C [40°C for side-by-side mounting, excluding VFD007EL21W(-1)]
Con	Ambient Temperature	-10–40°C [VFD007EL21W(-1), ambient temperature exceeding 40°C may
Enviromental Conditions		reduce the service life of the drive]
mer	Storage/	
viro	Transportation	-20–60°C
Ë	Temperature	
	Ambient Humidity	Below 90% RH (non-condensing)
	Vibration	1.0 mm, peak to peak 2–13.2 Hz; 0.7–1.0 G, 13.2–55 Hz;
	VIDIALIOII	1.0 G, 55–512 Hz; compliance with IEC 60068-2-6
	Certifications	CE, RoHS, GB 12668.3, KC (Individually packaged only)


A-5 Derating Curve for Ambient Temperature and Carrier Frequency

Ambient Temperature Derating Curve

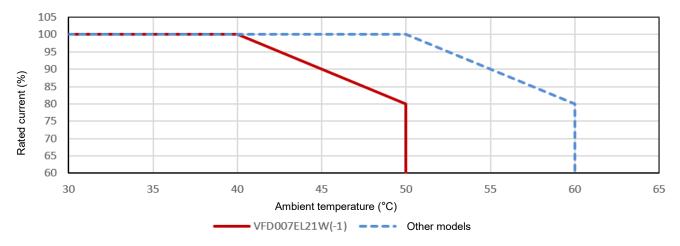

Model	Ambient Temperature Limitation
	If the AC motor drive operates at the rated current, the ambient temperature
\/ED007EL94\\/(4)	needs to be between -10-40°C. If the temperature is above 40°C, decrease
VFD007EL21W(-1)	2% of the rated current for every 1°C increase in temperature. The maximum
	allowable temperature is 50°C.
	If the AC motor drive operates at the rated current, the ambient temperature
Other medele	needs to be between -10-50°C. If the temperature is above 50°C, decrease
Other models	2% of the rated current for every 1°C increase in temperature. The maximum
	allowable temperature is 60°C.

Carrier Frequency Derating Curve

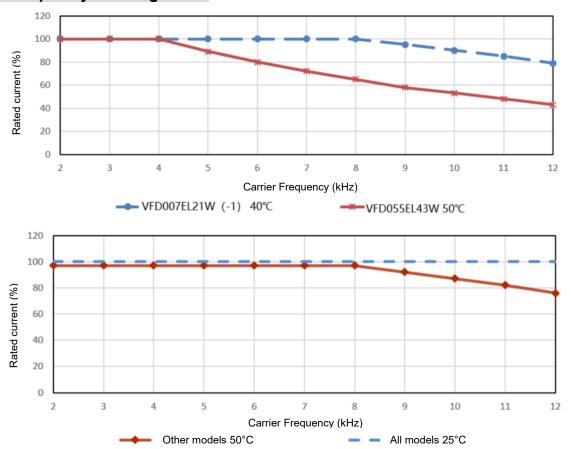

Model	Carrier Frequency Limitation				
	If the AC motor drive is installed at an ambient temperature of 40°C, and				
	operates at the rated current, the carrier frequency needs to be within 8				
VFD007EL21W(-1)	kHz. If the carrier frequency is higher than 8 kHz, decrease 5% of the				
	rated current for every 1 kHz increase in the carrier frequency. The				
	maximum allowable carrier frequency is 12 kHz.				
	If the AC motor drive is installed at an ambient temperature of 50°C, and				
	operates at the rated current, the carrier frequency needs to be within 4				
VFD055EL43W	kHz. If the carrier frequency is higher than 4 kHz, decrease 10% of the				
	rated current for every 1 kHz increase in the carrier frequency. The				
	maximum allowable carrier frequency is 12 kHz.				
	If the AC motor drive is installed at an ambient temperature of 50°C, and				
	operates at the rated current, the carrier frequency needs to be within 8				
Other models	kHz. If the carrier frequency is higher than 8 kHz, decrease 5% of the				
	rated current for every 1 kHz increase in the carrier frequency. The				
	maximum allowable carrier frequency is 12 kHz.				

[This page is intentionally left blank]

Appendix B. Accessories

- B-1 Non-fuse Circuit Breaker
- **B-2 Reactor**
- B-3 Digital Keypad
- B-4 Auxiliary Cooling Fan

 $\overline{\mathbf{V}}$



- ☑ Our products adhere to strict quality control. If there is any external impact or extrusion during shipment, please contact our distributors.
 - The accessories produced by Delta are only applicable for Delta's drives. It is not recommended to use accessories other than Delta's to work with Delta's drives. This may cause the drive malfunctioned.

B-1 Non-fuse Circuit Breaker

For single-phase/ three-phase drives, the current rating of the breaker must be between 2–4 times the rated input current.

Single	-phase	Three-	-phase	
Model	Recommended non-fuse breaker (A)	Model	Recommended non-fuse breaker (A)	
VFD002EL21W(-1)	10	VFD004EL43W(-1)	5	
VFD004EL21W(-1)	15	VFD007EL43W(-1)	5	
VFD007EL21W(-1)	20	VFD015EL43W(-1)	10	
VFD015EL21W(-1)	30	VFD022EL43W(-1)	15	
VFD022EL21W(-1)	50	VFD040EL43W(-1)	20	
		VFD055EL43W(-1)	30	

Fuse Specification Chart

Fuse specifications lower than the table below are allowed.

Model	I (A)	I (A)	Line Fuse			
Model	Input	Output	I (A)	Bussmann P/N		
VFD002EL21W(-1)	4.9	1.6	10	JJN-10		
VFD004EL21W(-1)	6.5	2.5	15	JJN-15		
VFD004EL43W(-1)	1.8	1.5	5	JJS-6		
VFD007EL21W(-1)	9.3	4.2	20	JJN-20		
VFD007EL43W(-1)	3.2	2.5	5	JJS-6		
VFD015EL21W(-1)	15.7	7.5	30	JJN-30		
VFD015EL43W(-1)	4.3	4.2	10	JJS-10		
VFD022EL21W(-1)	24.0	11.0	50	JJN-50		
VFD022EL43W(-1)	7.1	5.5	15	JJS-15		
VFD040EL43W(-1)	10.0	9.0	20	JJN-20		
VFD055EL43W(-1)	14.0	13.0	30	JJS-30		

B-2 Reactor

B-2-1 AC Reactor

AC Input Reactor Recommended Value

230V, 50/60Hz, Single-phase

kW	HP	Fundamental	Max. Continuous	Inductance (mH)
KVV	111	Amps	Amps	3-5% Impedance
0.2	0.25	4	6	6.5
0.4	0.5	5	7.5	3
0.75	1	8	12	1.5
1.5	2	12	18	1.25
2.2	3	18	27	0.8

460V, 50/60Hz, Three-phase

kW	HP	Fundamental	Max. Continuous	Inductance (mH)		
KVV	Amps Amps		Amps	3% Impedance	5% Impedance	
0.4	0.5	2	3	20	32	
0.75	1	4	6	9	12	
1.5	2	4	6	6.5	9	
2.2	3	8	12	5	7.5	
4.0	5.5	8	12	3	5	
5.0	7.5	12	18	2.5	4.2	

AC Output Reactor Recommended Value

230V, 50/60Hz, Three-phase

200V, 30/00Hz, Tillee-phase										
kW	HP	Fundamental	Max. Continuous	Inductance (mH)						
IX V	1 11	Amps	Amps	3% Impedance	5% Impedance					
0.2	0.25	4	6	9	12					
0.4	0.5	4	6	6.5	9					
0.75	1	8	12	3	5					
1.5	2	8	12	1.5	3					
2.2	3	12	18	1.25	2.5					

460V, 50/60Hz, Three-phase

kW	HP	Fundamental	Max. Continuous	Inductance (mH)		
KVV	ПР	Amps	Amps	3% Impedance	5% Impedance	
0.4	0.5	2	3	20	32	
0.75	1	4	6	9	12	
1.5	2	4	6	6.5	9	
2.2	3	8	12	5	7.5	
4.0	5.5	12	18	3	5	
5.5	7.5	18	27	1.5	2.5	

Applications


Connected in input circuit

Application 1

When more than one AC motor drives are connected to the same mains power and are running, and one of them is ON during operation.

Issues: When applying power to one of the AC motor drives, the charge current of the capacitors may cause voltage dip. The AC motor drive may be damaged when over-current occurs during operation.

Correct wiring:

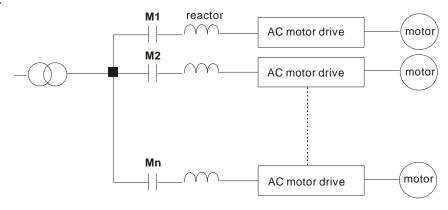


Application 2

A silicon rectifier and AC motor drive are connected to the same power.

Issues: Switching spikes are generated when the silicon rectifier switches ON/OFF. These spikes may damage the mains circuit.

Correct wiring:

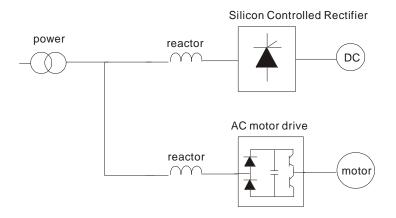


Application 3

The power supply capacity is 10 or above times the AC motor drive capacity.


Issues: When the mains power capacity is too large, line impedance is small and the charge current is too high. This may damage the AC motor drive due to the higher rectifier temperature.

Correct wiring:

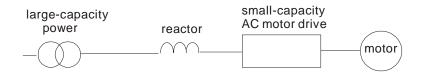

B-2-2 Zero Phase Reactor RF220X00A


UNIT: mm [inch]

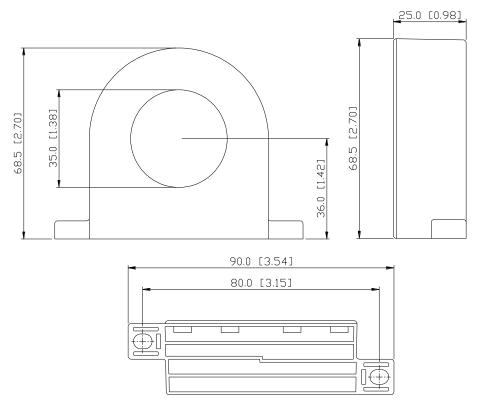

Cable	Reco	mmende Size	Otri	Wiring	
Type (NOTE)	AWG	mm ²	Qty.	Method	
Single- core	≤ 10	≤ 5.3	≤ 5.5	1	Diagram A
	≤ 2	≤ 33.6	≤ 38	4	Diagram B
Three- core	≤ 12	≤ 3.3	≤ 3.5	1	Diagram A
	≤ 1	≤ 42.4	≤ 50	4	Diagram B

Diagram A

Please wind each wire four times around the core. The reactor must be put as close to the drive output as possible.

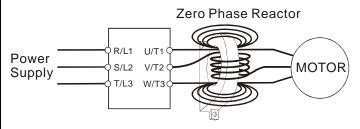


NOTE:

600V Insulated Unshielded Cable

- The table above gives approximate wire size for zero phase reactors, but the selection is ultimately governed by the type and diameter of the cable; that is, the cable must fit through the center hole of zero phase reactors.
- When wiring, do not pass the grounding cable through the zero phase reactor; only pass the motor wire or power cable through the zero phase reactor.
- 3. With longer motor cables, the zero-phase reactor can effectively reduce interference at the motor output.


Diagram B

Please put all wires through four cores in series without winding.

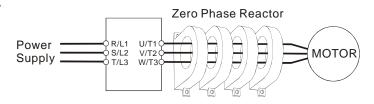

B-3 Digital Keypad

B-3-1 Digital Keypad VFD-PU06

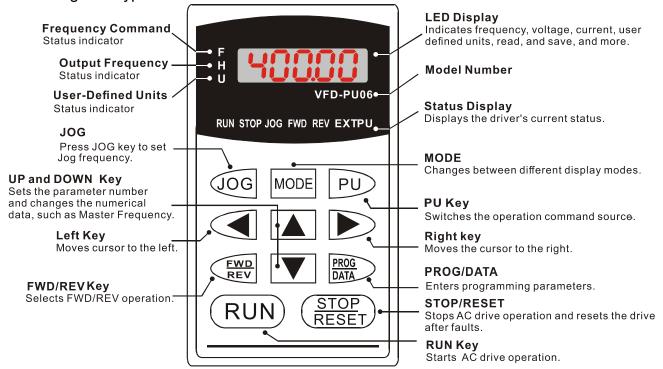


Display Message Explanation

Display Message	Descriptions
⁵ 8000	The current frequency of the drive.
H 5000	The actual operation frequency that the drive outputs to the motor.
· 18000	The user-defined unit (u)
8 5.0	The loading current of the drive.
-E8d8	Read parameters. Press PROG/DATA for 2–3 sec. until it is flashing. Then, you can read four parameters from the AC motor drive to the digital keypad PU06 (read D0–read D3). Press UP or DOWN key to change to SAVE function.
5808-	Write parameters. Press PROG/DATA for 2–3 sec. until it is flashing. Then, you can write the parameters from the digital keypad PU06 to the AC motor drive. Press UP or DOWN key to change to READ function.
08-00	The specified parameter setting.
	The actual value stored in the specified parameter.
[E.F.]	External Fault
-End-	"End" displays for approximately one second if the entered input data has been accepted. After a parameter value has been set, the new value is automatically stored in memory.

Display Message	Descriptions
[-{	"Err" displays if the input is invalid or the input exceeds the setting range.
[[8:-:8]	Communication Error. Refer to Parameter Group 09 in Chapter 04 for details.


PU06 Operation Flow Chart

VFD-PU06 Operation Flow Chart

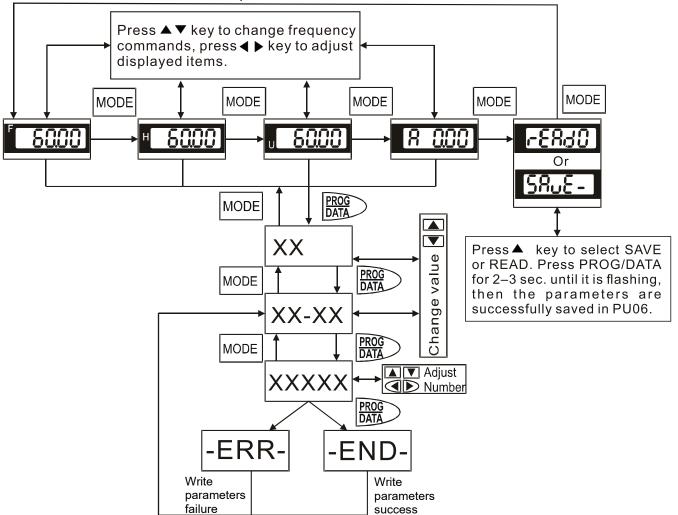



B-3-2 Digital Keypad VFD-PU08 / VFD-PU08V

VFD-PU08 Dimension

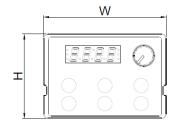



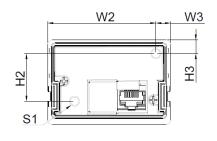


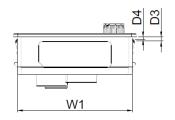

Unit: mm (inch)

													(
W	W1	W2	W3	Ι	H1	H2	Н3	D	D1	D2	D3	D4	S1
68.0	63.8	59.9	8.1	46.8	42.0	26.3	7.5	35.6	22.7	7.6	2.2	1.3	M3*0.5
(2.68)	(2.51)	(2.36)	(0.32)	(1.84)	(1.65)	(1.04)	(0.30)	(1.40)	(0.89)	(0.30)	(0.09)	(0.05)	(2X)

VFD-PU08V Dimension

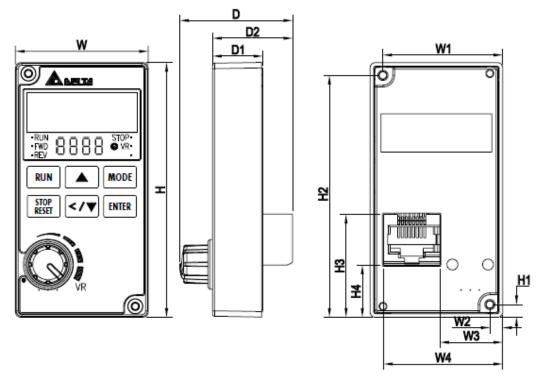

Unit: mm [inch]

											Offit. II	
W1	W2	W3	W4	W	H1	H2	H3	H4	Ι	D1	D2	D
32.9	3.6	17.3	32.8	36.5	3.5	66.5	28.3	14.3	70.0	13.8	22.0	31.0
(1.30)	(0.14)	(0.68)	(1.29)	(1.44)	(0.14)	(2.62)	(1.11)	(0.56)	(2.76)	(0.54)	(0.87)	(1.22)

VFD-PU08 / VFD-PU08V Specification

VFD-PU08





VFD-PU08V






Items	Description		
Applicable VFD series	ME300 and VFD-EL-W		
Communication Interface	RS-485 (exclusive mode), the host cannot use this interface when occupying.		
Installation	VFD-PU08 fixed by plastic hook or screw. VFD-PU08V fixed by screws.		
IP Level	Front panel: IP20. Back panel: IP00.		
Connector	RJ45		
Max. Length of Extension Cable	5 m		
Panel Display	4-digits display with decimal point		
Core Functionality	Read and write, status display, operation instruction via RS-485.		

NOTE:

The VFD-PU08 / VFD-PU08V does not include the extension cord. Please choose the suitable extension cords as needed. (Refer to the table below)

Communication cable

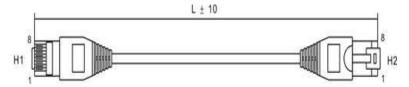

No.	Model Name	Ĺ		
INO.	Wodel Name	mm	inch	
1	UC-CMC003-01A	300	11.8	
2	UC-CMC005-01A	500	19.6	
3	UC-CMC010-01A	1000	39.0	
4	UC-CMC015-01A	1500	59.0	
5	UC-CMC020-01A	2000	78.7	
6	UC-CMC030-01A	3000	118.1	
7	UC-CMC050-01A	5000	196.8	

Status Displayed

Status Displayed	Description		
	RUN: VFD is running		
	FWD: VFD is running forwardly		
RUN• F F STOP	REV: VFD is running reversely		
RUN• FWD• REV•	STOP: VFD is stopped STOP Flashing: VFD is stopping		
	VR lights on: VFD potentiometer function is enabled VR lights off: Direction function key (Up) and Direction function key (Down & left) is enabled.		

Button Functionality

The keys of VFD-PU08 / VFDPU08V below support mode change function. Other keys work as usual.

Keys	Key Name	Description
		Long press MODE botton for 2 seconds, when "X" flashes:
	To change the different mode selection	Direction function key " < " is enabled,
		Direction function key "▼ " is disabled.
MODE		When left shirt key " < " is enabled, if long pressing MODE botton for 2 seconds again, and "X" stops flashing:
		Direction function key " < " is disabled,
		Direction function key "▼ " is enabled.
< V	Decrease / Shift	Press Direction function key "▼" to decrease the value.
		Press Direction function key " < " to shift the set value and parameter.

- 1. When •VR ② always on, you can press the HODE + ENTER key combination to switch the up key and <SHIFT> / down key to adjust the frequency command of the drive, and •VR ② will turn off at the same time.
- 2. If •VR ② is off, press the MODE + ENTER key combination again, it will switch back to the state of adjusting the frequency by the panel potentiometer and •VR ② will light up.
- 3. When •VR ② is off, the frequency is adjusted by the up and down keys. It will not be maintained when the power is turned off. When the VFD-PU08 is powered on again, it is still adjusted by the panel potentiometer and •VR ② will light up.

B-4 Auxiliary Cooling Fan

After the auxiliary cooling fan is installed for VFD007EL21W(-1), the upper limit of the ambient operating temperature is increased to 50°C without derating. If the auxiliary cooling fan is not installed, the upper limit of the ambient operating temperature is 40°C without derating.

The fan power is 24V, which can be taken from the drive control terminal +24V/DCM. When drive is used with the fan, MI terminals can be used normally, but do not connect the drive to any other loads. This is to prevent the +24V terminal from overloading, further causing damage to the drive.

Fan Model	Model	Fan Kit
MKEL-AFKM1	VFD007EL21W(-1)	

NOTE: The fan cable is about 150 mm.

Fan installation

1.	Remove the front cover as the direction shows at the right figure.				
2	Diago the fee as the right figure shows. The				
2.	Place the fan as the right figure shows. The arrow on the fan should point to the heat sink.				
	Then, use screws to assemble the fan net and				
	the fan on the heat sink.				
	Positive electrode: Reed line to +24V				
	Negative electrode: Black line to DCM				
3.	Replace the upper cover, and then the fan installation is completed.				

Appendix C. How to Select the Right AC Motor Drive

- C-1 Capacity Formulas
- C-2 General Precautions
- C-3 How to Choose a Suitable Motor

Appendix C How to Select the Right AC Motor Drive | VFD-EL-W

The choice of the right AC motor drive for the application is very important and has a big influence on the drive's lifetime. If the capacity of the AC motor drive is too large, it cannot provide complete protection to the motor and motor might be damaged. If the capacity of the AC motor drive is too small, it cannot provide the required performance and the AC motor drive might be damaged due to overloading.

Simply selecting the AC motor drive with the same capacity as the motor cannot completely meet the application requirements. Therefore, a designer should consider all the conditions, including load types, load speeds, load characteristics, operation methods, rated output, rated speed, power and the change in load capacity. The following table lists the factors you need to consider, depending on your requirements.

Item		Related Specification			
		Speed and Torque Characteristics	Time Ratings	Overload Capacity	Starting Torque
Load type Friction load and weight load Liquid (viscous) load Inertia load Load with power transmission		•			•
Load speed and torque characteristics	Constant torque Constant output Decreasing torque Decreasing output	•	•		
Load characteristics	Constant load Shock load Repetitive load High starting torque Low starting torque	•	•	•	•
Operation mode	Continuous operation Short-time operation Long-time operation at medium/low speeds		•	•	
Rated output	Maximum output current (instantaneous) Constant output current (continuous)	•		•	
Rated speed	Maximum frequency Base frequency	•			
Power supply	Power supply transformer capacity or percentage impedance Voltage fluctuations and unbalance Number of phases, single phase protection Frequency			•	•
Load capacity change	Mechanical friction, losses in wiring Duty cycle modification		•	•	•

C-1 Capacity Formulas

1. One AC motor drive operates one motor

The starting capacity should be less than 1.5x the rated capacity of the AC motor drive.

The starting capacity equals:

$$\frac{k \times N}{973 \times \eta \times \cos\varphi} \left(T_L + \frac{GD^2}{375} \times \frac{N}{t_A} \right) \leq 1.5 \times the_capacity_of_AC_motor_drive(kVA)$$

- 2. One AC motor drive operates more than one motor
 - The starting capacity should be less than the rated capacity of the AC motor drive.

Acceleration time ≤ 60 seconds

The starting capacity equals:

$$\frac{k \times N}{\eta \times \cos \varphi} \left[n_{\tau} + n_{s}(k_{s-1}) \right] = P_{Cl} \left[1 + \frac{n_{s}}{n_{\tau}} (k_{s-1}) \right] \leq 1.5 \times the _capacity_of _AC_motor_drive(kVA)$$

Acceleration time ≥ 60 seconds

The starting capacity equals:

$$\frac{k \times N}{n \times \cos \varphi} \left[n_{\tau} + n_{s} \left(k_{s-1} \right) \right] = P_{C1} \left[1 + \frac{n_{s}}{n_{\tau}} \left(k_{s-1} \right) \right] \le the _capacity_of_AC_motor_drive(kVA)$$

• The current should be less than the rated current of the AC motor drive (A).

Acceleration time ≤ 60 seconds

$$n_T + I_M \left[1 + \frac{n_S}{n_T} (k_S - 1) \right] \le 1.5 \times the_rated_current_of_AC_motor_drive(A)$$

Acceleration time ≥ 60 seconds

$$n_T + I_M \left[1 + \frac{n_S}{n_T}(k_S - 1)\right] \le the_rated_current_of_AC_motor_drive(A)$$

- 3. When running continuously
 - The load capacity requirement should be less than the capacity of the AC motor drive (kVA).
 The load capacity requirement equals:

$$\frac{k \times P_{M}}{\eta \times \cos \varphi} \le the_capacity_of_AC_motor_drive(kVA)$$

The motor capacity should be less than the capacity of the AC motor drive.

$$k \times \sqrt{3} \times V_M \times I_M \times 10^{-3} \le the_capacity_of_AC_motor_drive(kVA)$$

• The current should be less than the rated current of the AC motor drive (A).

$$k \times I_M \le the_rated_current_of_AC_motor_drive(A)$$

Appendix C How to Select the Right AC Motor Drive | VFD-EL-W

Symbol explanation

P_M Motor shaft output for load (kW)
 η Motor efficiency (normally approx. 0.85)
 cosφ Motor power factor (normally approx. 0.75)
 V_M Motor rated voltage (V)
 I_M Motor rated current (A), for commercial power
 k Correction factor calculated from the current distortion factor (1.05–1.1, depending on PWM method)

 P_{C1} Continuous motor capacity (kVA)

ks Starting current/rated current of the motor

 n_T Number of motors in parallel

*n*_s Number of simultaneously started motors

Total inertia (GD²) calculated back to motor shaft (kg m²)

 T_L Load torque

t_A Motor acceleration time

N Motor speed

C-2 General Precautions

Selecting an AC Motor Drive

- When connecting the AC motor drive directly to a large-capacity power transformer (600 kVA or higher), or when switching a phase lead capacitor, excess peak currents may occur in the power input circuit and may damage the converter section. To avoid this, use an AC input reactor (optional) before the AC motor drive mains input to reduce the current and improve the input power efficiency.
- ☑ When using a special motor or when driving more than one motor in parallel with a single AC motor drive, select the AC motor drive current to be $\ge 1.25x$ (sum of the motor rated currents).
- ☑ The starting acceleration and deceleration characteristics of a motor are limited by the AC motor drive rated current and the overload protection. Compared to running the motor D.O.L. (Direct On-Line), you can expect a lower starting torque output with the AC motor drive. If a higher starting torque is required (such as for elevators, mixers, tooling machines, etc.), use a higher capacity AC motor drive or increase the capacities of both the motor and the AC motor drive.
- When a fault occurs on the drive, a protective circuit is activated and the AC motor drive output is turned off.

 The motor coasts to stop. For an emergency stop, use an external mechanical brake to quickly stop the motor.

Setting Parameters


- ☑ You can set the AC motor drive to an output frequency up to 400 Hz (less for some models) with the digital keypad. Setting errors may create a dangerous situation. For safety, setting an upper limit frequency function is strongly recommended.
- High DC brake operating voltages and long operation time (at low frequencies) may cause overheating of the motor. In that case, forced external motor cooling is recommended.
- ☑ Motor acceleration and deceleration time is determined by motor rated torque, load torque, and load inertia.
- ☑ If you activate the stall prevention function, the acceleration and deceleration time is automatically extended to a length that the AC motor drive can handle. If the motor must decelerate within a certain time with a higher load inertia than the AC motor drive can handle in the required time, either use an external brake resistor and/or a brake unit (depending on the model) to shorten deceleration time only, or increase the capacity of both the motor and the AC motor drive.

C-3 How to Choose a Suitable Motor

Standard Motors

When using the AC motor drive to operate a standard three-phase induction motor, follow these precautions.

- ☐ The energy loss is greater than that for an inverter-duty motor.
- Avoid running the motor at low speed for a long time. Under this condition, the motor temperature may rise above the motor rating due to limited airflow produced by the motor's fan. Consider adding external forced motor cooling.
- ☑ When the standard motor operates at low speed for a long time, the output load must be decreased.
- ☑ The load tolerance of a standard motor is according to the following diagram.

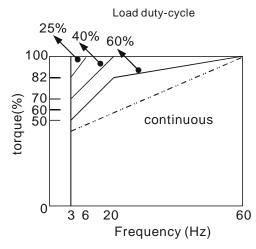

- ☑ If 100% of continuous torque is required at low speed, it may be necessary to use a special inverter-duty motor.
- ✓ Motor dynamic balance and rotor endurance should be considered once the operating speed exceeds the rated speed (60Hz) for a standard motor.
- Motor torque characteristics vary when driving the motor with an AC motor drive instead of a commercial power supply. Check the load torque characteristics of the machine connected to the motor.
- ☑ Because of the high carrier frequency PWM control of the VFD series, pay attention to the following motor vibration problems:
 - Resonant mechanical vibration: use anti-vibration dampers to mount equipment that runs at varying speed. Motor imbalance: special care is required for operation at 60 Hz and higher frequencies.
- ☑ The motor fan is very noisy when the motor speed exceeds 60 Hz or above.

Special Motors

☑ Pole-changing (Dahlander) motor:

The rated current differs from that of a standard motor. Check before operation and carefully choose the capacity of the AC motor drive. When changing the number of poles, stop the motor first. If over-current occurs during operation or the regenerative voltage is too high, let the motor free run to stop (coast).

☑ Submersible motor:

The rated current is higher than that of a standard motor. Check before operation and carefully choose the capacity of the AC motor drive. A long motor cable between the AC motor drive and the motor reduces the available motor torque.

☑ Explosion-proof (Ex) motor:

Must be installed in a safe place and the wiring should comply with the (Ex) requirements. Delta AC Motor Drives are not suitable for (Ex) areas that require special precautions.

☑ Gear reduction motor:

The lubricating method of the reduction gearbox and the speed range for continuous operation are different and depend on the motor brand. Carefully consider the lubricating method when operating for a long time at low speed and for high-speed operation.

✓ Synchronous motor:

The rated current and the starting current are higher than those of standard motors. Check before operation and carefully choose the capacity of the AC motor drive. When one AC motor drive operates more than one motors, pay attention to starting and changing the motor.

Power Transmission Mechanism

Pay attention to reduced lubrication when operating equipment such as gear reduction motors, gearboxes, belts and chains over long periods at low speeds. At high speeds (60 Hz and above), noises and vibrations that reduce the lifetime of the equipment may occur.

Motor Torque

The motor torque characteristics operated by an AC motor drive depend on the motor model selection and AC motor drive parameter settings.

[This page is intentionally left blank]

Appendix D. Revision History

Firmware Version: V2.06

Issued Edition: 00

Issued Date: September, 2024

Added				
Descriptions	Chapters			
Added hot plug function	Pr.06.15-Pr.06.20			
Added fault code HotP regarding thermal cutout triggered and its corrective actions	 Section 6-1 Fault Code Information Pr.06.08–Pr.06.12, Pr.06.21–Pr.06.25 Fault record 1 to 10 Error code in parameter group 09 communication address list 			

Changed				
Descriptions	Chapters			
Updated installation information and notes for 002 and 004 model number to 230V single-phase models and 004 model number to 460V three-phase models.	Section 1-2			
Corrected dimension of D1 for Frame A1.	Section 1-3			
Updated information on 002 and 004 model number to 230V single- phase models and 004 model number to 460V three-phase models.	Section 2-3-2 Section 2-4-2			
Removed parameters / options marked in gray (applied only for firmware v1.00_5.5 kW models) in summary of parameter settings.	Section 4-1			
Changed default value of fan cooling control to 3 and OFF temperature to 50°C.	Pr.03.08			
Corrected setting range from 1 and 2 to 0 and 1.	Pr.06.51			
Deleted notes regarding the packaging methods. Packing methods by different models are already described in Section 1-1 Model Name.	Preface to Appendix A-1			
Updated cooling method for 007 model number to 230V single-phase models. It can be either convective cooling or fan cooling.	Appendix A-1			
Corrected functions of general specifications.	Appendix A-3			
Corrected the decreasing percentage from 5% to 10% regarding the carrier frequency limitation for model VFD055EL43W.	Appendix A-5			
Updated dimension of digital keypad VFD-PU08. Marking of H1 should be corrected.	Appendix B-3-2			
Updated fault code information to the latest and aligned it to fault records in parameter settings and error codes in communication address list.	 Section 6-1 Fault Code Information Pr.06.08–Pr.06.12, Pr.06.21–Pr.06.25 Fault record 1 to 10 Error code in parameter group 09 communication address list 			



Industrial Automation Headquarters

Delta Electronics, Inc.

Taoyuan Technology Center No.18, Xinglong Rd., Taoyuan District, Taoyuan City 330477, Taiwan TEL: +886-3-362-6301 / FAX: +886-3-371-6301

Asia

Delta Electronics (Shanghai) Co., Ltd.

No.182 Minyu Rd., Pudong Shanghai, P.R.C. Post code: 201209

TEL: +86-21-6872-3988 / FAX: +86-21-6872-3996

Customer Service: 400-820-9595

Delta Electronics (Japan), Inc.

Industrial Automation Sales Department 2-1-14 Shibadaimon, Minato-ku Tokyo, Japan 105-0012

TEL: +81-3-5733-1155 / FAX: +81-3-5733-1255

Delta Electronics (Korea), Inc.

1511, 219, Gasan Digital 1-Ro., Geumcheon-gu, Seoul, 08501 South Korea TEL: +82-2-515-5305 / FAX: +82-2-515-5302

Delta Energy Systems (Singapore) Pte Ltd.

4 Kaki Bukit Avenue 1, #05-04, Singapore 417939 TEL: +65-6747-5155 / FAX: +65-6744-9228

Delta Electronics (India) Pvt. Ltd.

Plot No.43, Sector 35, HSIIDC Gurgaon, PIN 122001, Haryana, India TEL: +91-124-4874900 / FAX: +91-124-4874945

Delta Electronics (Thailand) PCL.

909 Soi 9, Moo 4, Bangpoo Industrial Estate (E.P.Z), Pattana 1 Rd., T.Phraksa, A.Muang, Samutprakarn 10280, Thailand TEL: +66-2709-2800 / FAX: +66-2709-2827

Delta Electronics (Australia) Pty Ltd.

Unit 2, Building A, 18-24 Ricketts Road, Mount Waverley, Victoria 3149 Australia Mail: IA.au@deltaww.com

TEL: +61-1300-335-823 / +61-3-9543-3720

Americas

Delta Electronics (Americas) Ltd.

5101 Davis Drive, Research Triangle Park, NC 27709, U.S.A. TEL: +1-919-767-3813

Delta Electronics Brazil Ltd.

Estrada Velha Rio-São Paulo, 5300 Eugênio de Melo - São José dos Campos CEP: 12247-004 - SP - Brazil TEL: +55-12-3932-2300 / FAX: +55-12-3932-237

Delta Electronics International Mexico S.A. de C.V.

Gustavo Baz No. 309 Edificio E PB 103 Colonia La Loma, CP 54060 Tlalnepantla, Estado de México TEL: +52-55-3603-9200

EMEA

Delta Electronics (Netherlands) B.V.

Sales: Sales.IA.EMEA@deltaww.com
Marketing: Marketing.IA.EMEA@deltaww.com
Technical Support: iatechnicalsupport@deltaww.com
Customer Support: Customer-Support@deltaww.com
Service: Service.IA.emea@deltaww.com

TEL: +31(0)40 800 3900

Delta Electronics (Netherlands) B.V.

Automotive Campus 260, 5708 JZ Helmond, The Netherlands

Mail: Sales.IA.Benelux@deltaww.com

TEL: +31(0)40 800 3900

Delta Electronics (Netherlands) B.V.

Coesterweg 45,D-59494 Soest,Germany Mail: Sales.IA.DACH@deltaww.com

TEL: +49 2921 987 238

Delta Electronics (France) S.A.

ZI du bois Challand 2,15 rue des Pyrénées, Lisses, 91090 Evry Cedex, France Mail: Sales.IA.FR@deltaww.com TEL: +33(0)1 69 77 82 60

Delta Electronics Solutions (Spain) S.L.U

Ctra. De Villaverde a Vallecas, 265 1º Dcha Ed. Hormigueras – P.I. de Vallecas 28031 Madrid

TEL: +34(0)91 223 74 20

Carrer Llacuna 166, 08018 Barcelona, Spain Mail: Sales.IA.Iberia@deltaww.com

Delta Electronics (Italy) S.r.l.

Via Meda 2–22060 Novedrate(CO) Piazza Grazioli 18 00186 Roma Italy Mail: Sales.IA.Italy@deltaww.com TEL: +39 039 8900365

Delta Greentech Elektronik San. Ltd. Sti. (Turkey)

Şerifali Mah. Hendem Cad. Kule Sok. No:16-A

34775 Ümraniye – İstanbul

Mail: Sales.IA.Turkey@deltaww.com

TEL: + 90 216 499 9910

Eltek Dubai (Eltek MEA DMCC)

OFFICE 2504, 25th Floor, Saba Tower 1, Jumeirah Lakes Towers, Dubai, UAE Mail: Sales.IA.MEA@deltaww.com

TEL: +971(0)4 2690148

 $\ensuremath{^{*}}\mbox{We}$ reserve the right to change the information in this manual without prior notice.